



Installing iBook G3 Clamshell CD Faceplate

Author: iRobot

Tools used in this guide

- [Coin](#) (1)
- [Paper Clip](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Parts relevant to this guide

- [iBook Clamshell CD Drive Faceplate \(Blueberry\)](#) (1)

Replace or change the CD drive faceplate.



Step 1 — Battery

- Use a coin to turn both battery locking screws 90 degrees to the left.
- Remove the battery cover.
- Remove the battery from the computer by pulling up on the plastic tab.



Step 2 — CD Faceplate

- Use a straightened paperclip to manually eject the CD-ROM tray.



Step 3

- Remove the single black Phillips screw from the center of the CD-ROM bezel.



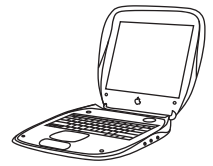
Step 4

- Grasp the CD-ROM bezel and rotate it upward to remove it from the drive.


To reassemble your device, follow these instructions in reverse order.

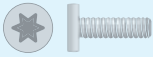
This document was last generated on Feb 23, 2012.

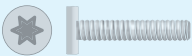
iBook Clamshell Screw Guide





↓


 Keyboard
2 Phillips Screws


 Upper Case (bottom)
4 T8 Torx

 Upper Case (bottom)
2 T8 Torx

 Upper Case (by optical drive)
1 Phillips

 Upper Case
3 Phillips

 Optical Drive
1 5mm Standoff

 Modem
2 Phillips

↙ ↘





To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.


If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.

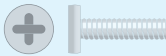
Due to model variations, the screws you remove may differ slightly from this guide.


↓


 Modem
3 Phillips


 Modem
1 Phillips

 Display (clutch cover)
3 Phillips

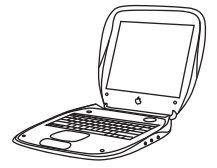
 Display
2 Phillips

 EMI Shield (RJ-11 board)
2 Phillips

 EMI Shield (red & green)
3 Phillips

 EMI Shield (orange)

↓



EMI Shield (yellow)
1 Phillips

EMI Shield (blue)
1 Phillips

Charger Board
1 Phillips

Hard Drive
3 5mm Standoffs

Logic Board (red)
1 Phillips



To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.

If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.

Due to model variations, the screws you remove may differ slightly from this guide.



Logic Board (orange)
1 5mm Standoff

Logic Board (yellow)
1 5mm Standoff

Logic Board (green)
1 5mm Standoff

Logic Board (blue)
1 5mm standoff

