



Installing iBook G3 12" Battery

Author: iRobot

Tools used in this guide

- [Coin](#) (1)

Parts relevant to this guide

- [iBook G3 or G4 12" Replacement Battery \(New\)](#) (1)

Changing the battery is easy -- all you need is a coin.





Step 1 — Battery

- Use a coin to rotate the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Feb 23, 2012.







Keyboard
2 Phillips Screws



Lower Case (under feet)
3 Phillips



Lower Case
2 Torx



Lower Case
1 Torx

Lower Case (battery compartment)
2 Phillips

Upper Case bottom (red)
2 Phillips



Upper Case bottom (orange)
1 Phillips





To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.

If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.



Due to model variations, the screws you remove may differ slightly from this guide.



Upper Case bottom (yellow)
1 Phillips



Upper Case (optical drive)
2 Phillips



Upper Case top (red)
1 Phillips



Upper Case top (orange)
3 Phillips

Bottom Shield
5 Phillips

Fan
2 Phillips



 

IO Bezel (red)
1 Phillips









↓



IO Bezel (orange)
1 Phillips




Top Shield (red)
1 Phillips





Top Shield (orange)
6 Phillips



↓



 
 
Top Shield (yellow)
1 Phillips



Top Shield (green)
4 Phillips



Modem
3 Phillips



HD Replacement
4 T8 Torx

 

↙ ↘



To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.



If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.

Due to model variations, the screws you remove may differ slightly from this guide.





Display
2 Phillips



↓



Optical Drive
1 Phillips





Optical Drive (cable)
2 Phillips





DC-In Board
1 Phillips



↓



Logic Board (heat sink)
3 Phillips



Logic Board (red)
1 Phillips



Logic Board (orange)
1 Phillips

