



Installing iBook G3 12" Fan

Author: iRobot

Tools used in this guide

- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Push Pin](#) (1)
- [Small Flathead Screwdriver](#) (1)
- [Spudger](#) (1)
- [T8 Torx Screwdriver](#) (1)

Parts relevant to this guide

- [iBook G3 12" Fan \(500/600\)](#) (1)
- [iBook G3 12" Fan \(600+\)](#) (1)

Replacing a defective fan is pretty easy and will keep your laptop running cool.



Step 1 — Battery

- Use a coin to rotate the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.



Step 2 — Lower Case

- Your laptop should look approximately like this.



Step 3

- Use a pin (or anything you like) to remove the three rubber feet from the lower case.



Step 4

- Remove the three 5.2 mm newly-revealed Phillips screws.



Step 5

- Use a spudger or small flathead screwdriver to pry up the three metal rings that housed the rubber bumpers.



Step 6

- Remove the one 10 mm and two 20 mm hex screws using a 2mm hex. Alternatively, a T8 Torx screwdriver key will do.



Step 7

- Remove the two 4.2 mm Phillips screws on either side of the battery contacts.



Step 8

- Breathe deeply. Trying times are ahead, but we promise the lower case does come off.
- Push the thin rims of the lower case surrounding the battery compartment in, bending them past the tabs, and then lift up to free that corner of the lower case.



Step 9

- There is a slot on the wall of the battery compartment that locks the lower case in place. Use a small flathead screwdriver to pry out the slot's lower rim and pull up on the lower case to free the slot from the tabs holding it.



Step 10

- Run a spudger along the seam between the lower case and upper case on the front of the computer to free the tabs locking the lower case. Pull up on the lower case and continue to use the spudger as necessary until you hear three distinct clicks.



Step 11

- Continue to run the spudger around the front, right corner. There are two tabs on the port side of the computer, one near the front corner and one near the sound out port.




Step 12

- Once the front and sides of the lower case are free, turn the computer so that the back is facing you and pull the lower case up and toward you until the back tabs pop free (it may be helpful to jiggle the case up and down).




Step 13

- Remove the small greasy springs with white plastic caps from either side of the battery contacts.

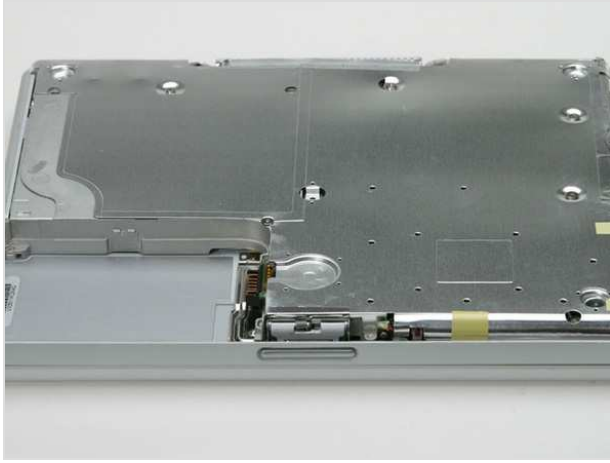


Step 14 — Bottom Shield

- Your laptop should look approximately like this.

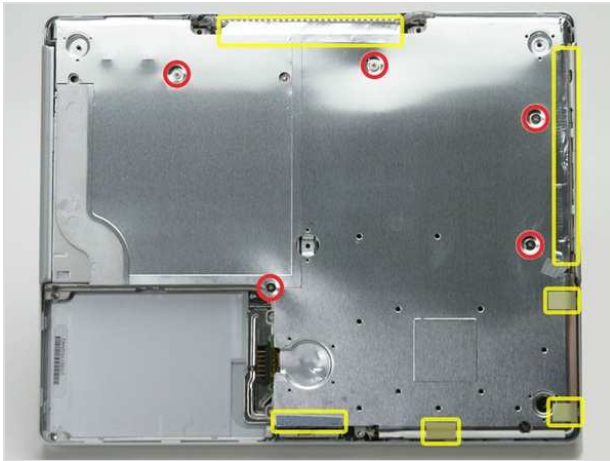

Step 15

- Remove the five 5.8 mm Phillips screws from the bottom shield.
- Peel back the yellow tape and foil shielding outlined in the image.

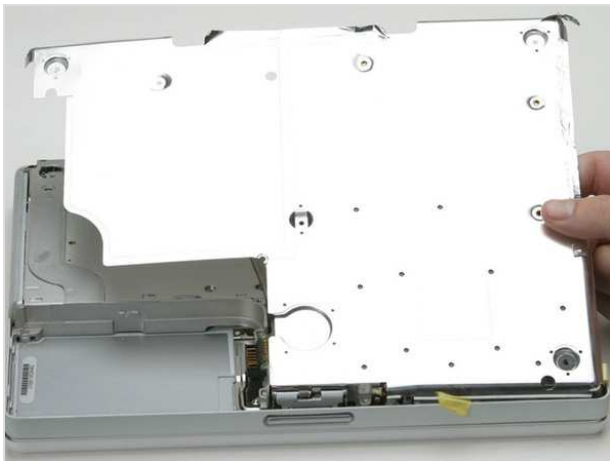

Step 16

- Lift the bottom shield off.



Step 17 — Fan

- Your laptop should look approximately like this.





Step 18

- Remove the single Phillips screw on the left side of the fan (there may be two screws).
- Lift the fan out of its housing and disconnect it from the logic board.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Feb 23, 2012.






 
Keyboard
2 Phillips Screws



Lower Case (under feet)
3 Phillips



Lower Case
2 Torx



Lower Case
1 Torx

Lower Case (battery compartment)
2 Phillips

Upper Case bottom (red)
2 Phillips



Upper Case bottom (orange)
1 Phillips





To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.

If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.



Due to model variations, the screws you remove may differ slightly from this guide.



Upper Case bottom (yellow)
1 Phillips


 
Upper Case (optical drive)
2 Phillips

Upper Case top (red)
1 Phillips



Upper Case top (orange)
3 Phillips

Bottom Shield
5 Phillips

Fan
2 Phillips



 

IO Bezel (red)
1 Phillips









↓



IO Bezel (orange)
1 Phillips



Top Shield (red)
1 Phillips





Top Shield (orange)
6 Phillips



↓



 
 
Top Shield (yellow)
1 Phillips



Top Shield (green)
4 Phillips



Modem
3 Phillips



HD Replacement
4 T8 Torx



↙ ↘



To organize your screws, simply place each screw in the appropriate box as you remove them from your laptop.



If you are not planning on immediately reassembling your laptop, you may want to tape the screws to this paper.

Due to model variations, the screws you remove may differ slightly from this guide.





Display
2 Phillips



↓



Optical Drive
1 Phillips





Optical Drive (cable)
2 Phillips





DC-In Board
1 Phillips



↓



Logic Board (heat sink)
3 Phillips



Logic Board (red)
1 Phillips



Logic Board (orange)
1 Phillips

