



Installing Game Boy Advance On/Off Switch

Author: Adam

Tools used in this guide

- [Phillips #1 Screwdriver](#) (1)
- [YO Screwdriver](#) (1)

Use this repair guide when debris needs to be cleared from the On/Off switch or it needs to be replaced.



Step 1 — Battery

- Take the battery cover off by releasing the locking tab and hinging the cover away.



 
Step 2 — Back Panel

- Remove the six back panel screws using a Tri-wing Screwdriver.




Step 3

- Remove bottom back panel screw with a Phillips #1 screw driver.

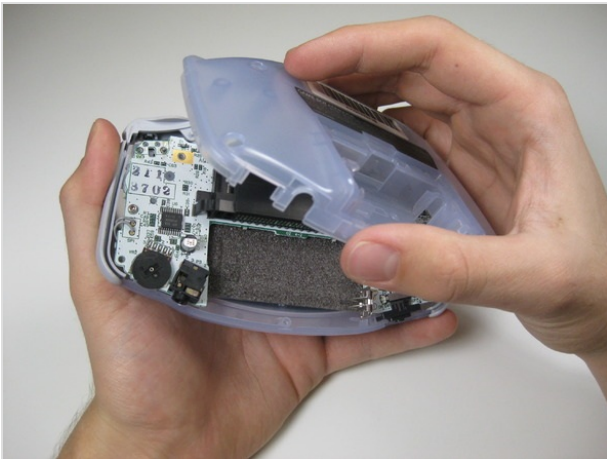

Step 4

 
- Remove the back panel by pulling away with one hand and the front secured in the other hand.
- Removal of the back panel may cause shoulder buttons and side panels to come loose and fall off.

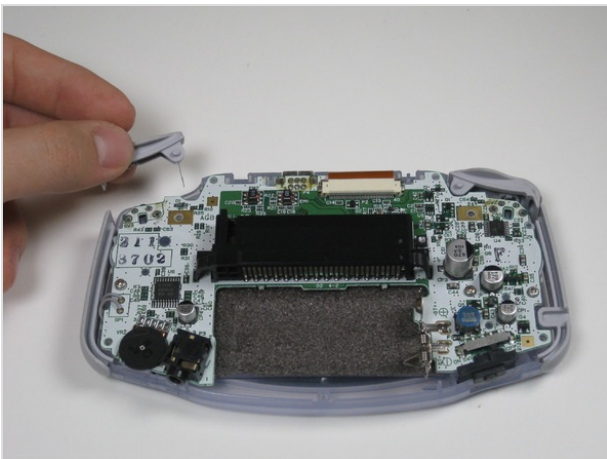

Step 5 — Shoulder Button and Side Panels

 - Remove left and right triggers by lifting and pulling them away from the system.
- Do the same for side panels
- For finicky or jammed triggers only. Adjust and correct triggers and reassemble. Most jammed triggers are caused by buttons misplaced or jammed in its enclosure.



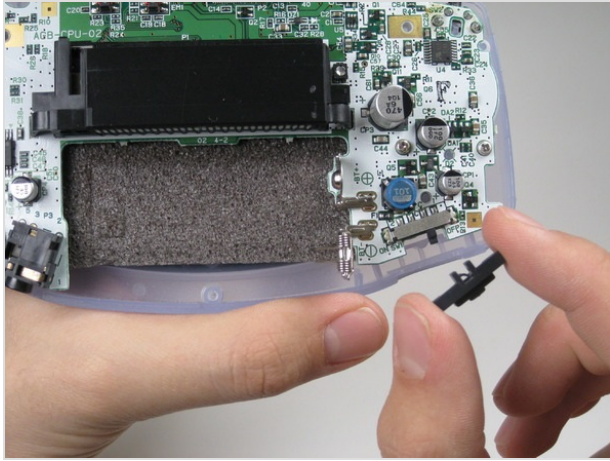

Step 6 — On/Off Switch

- Remove the gray On/Off Switch by pulling up and away from the unit. Replace with another switch if necessary.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Feb 23, 2012.