



Installing MacBook Air Models A1237 and A1304 Battery

Author: Walter Galan


Tools used in this guide

- [Phillips #00 Screwdriver](#) (1)

Parts relevant to this guide

- [MacBook Air \(Original/Late 2008\) Battery](#) (1)

Don't pay Apple to replace your worn out battery. Do it yourself!

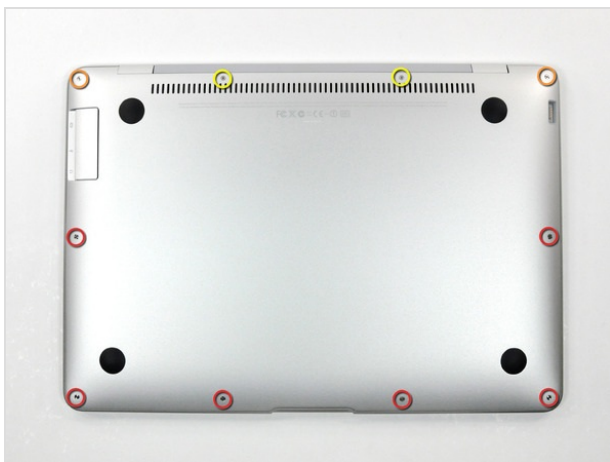


Step 1 — Lower Case

- Remove the following 10 screws securing the lower case to the Air:
 - Six 2.8 mm Phillips screws.
 - Two 3.8 mm Phillips screws.
 - Two 5.4 mm Phillips screws.



Step 2

- Slightly lift the lower case near the vents and push it toward the rear of the computer to free the mounting tabs.

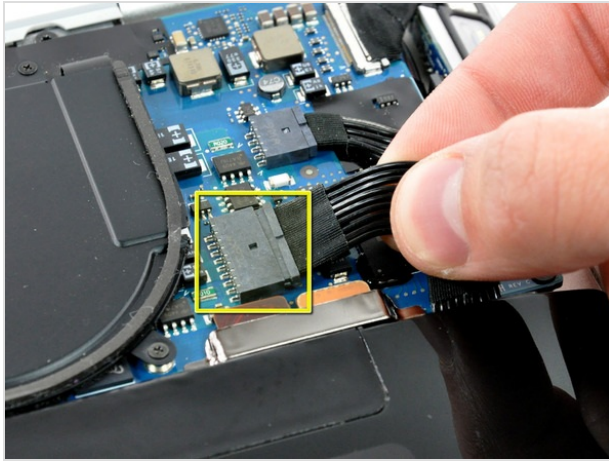

Step 3 — Battery

- Disconnect the battery connector by pulling it straight out of its socket.



Step 4

- Remove the following nine screws securing the battery to the Air:
 - Four 2.9 mm Phillips.
 - Four 3.8 mm Phillips.
 - One 7.2 mm Phillips.



Step 5

- Lift the battery out of the Air.

To reassemble your device, follow these instructions in reverse order.