



# Nikon 1 J3 LCD Screen Replacement

Replace the rear LCD screen of the Nikon 1 J3.

Written By: Austin Lackey



---

## INTRODUCTION

How to replace a cracked or damaged screen.

---

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — LCD Screen




- Using a Phillips #000 screwdriver, remove the three bottom screws connected to the back plate on the bottom of the device.
- Remove the screws under the flaps covering the HDMI and mini USB ports.

## Step 2

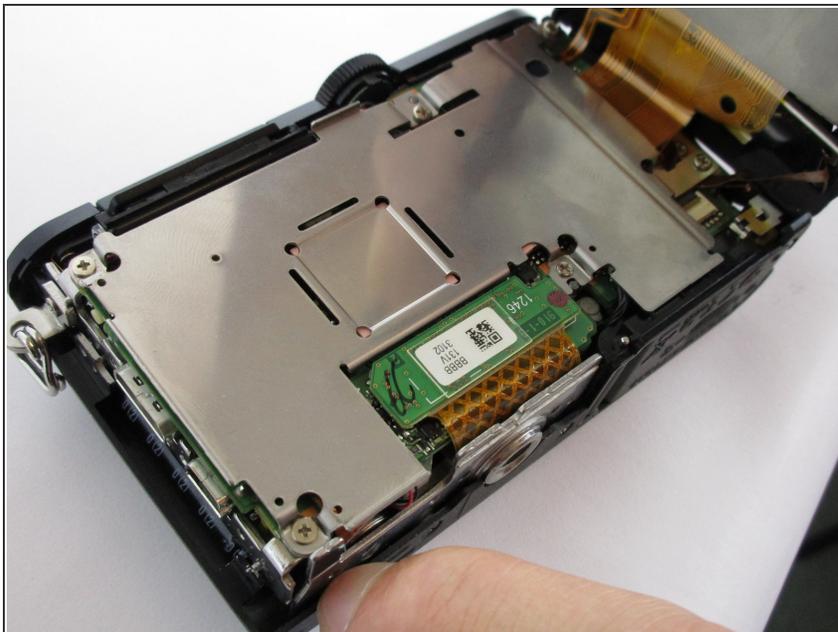


- Carefully pry back the back plate.
- ⚠ The plastic of the back plate may crack.

### Step 3

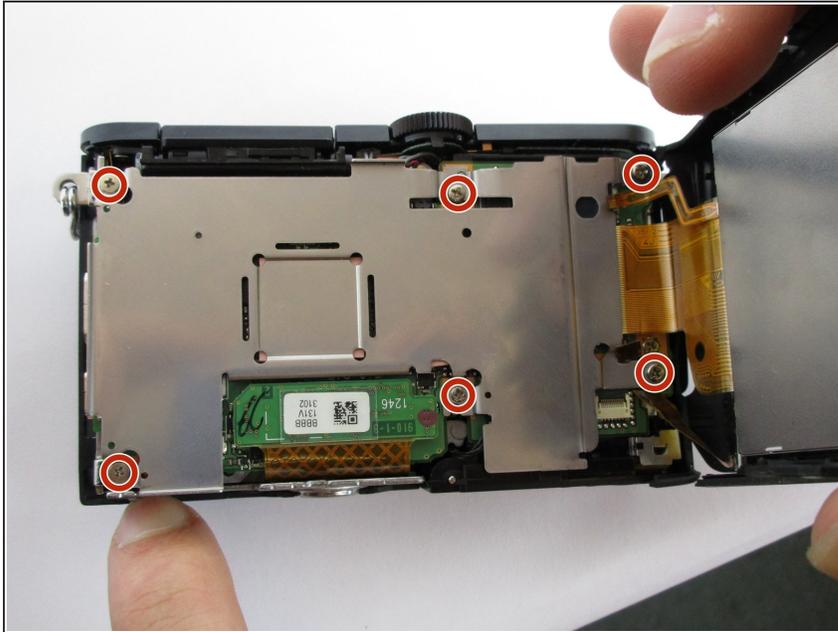

- Lift up the screen, and use a Phillips #000 screwdriver to remove the (6) six screws holding down the underlying metal plate.

### Step 4

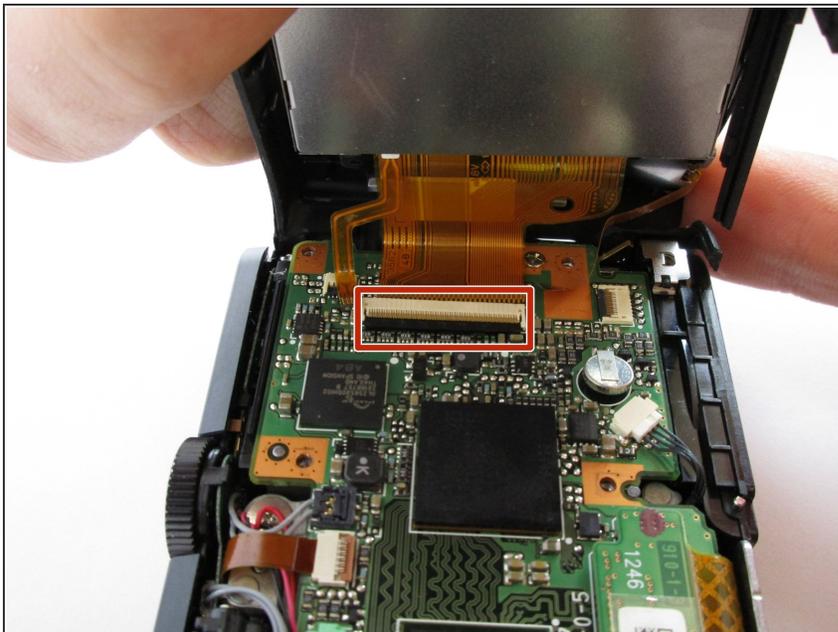

- Pull back the black switch holding the orange screen ribbon in place, and remove the screen.

To reassemble your device, follow these instructions in reverse order.