


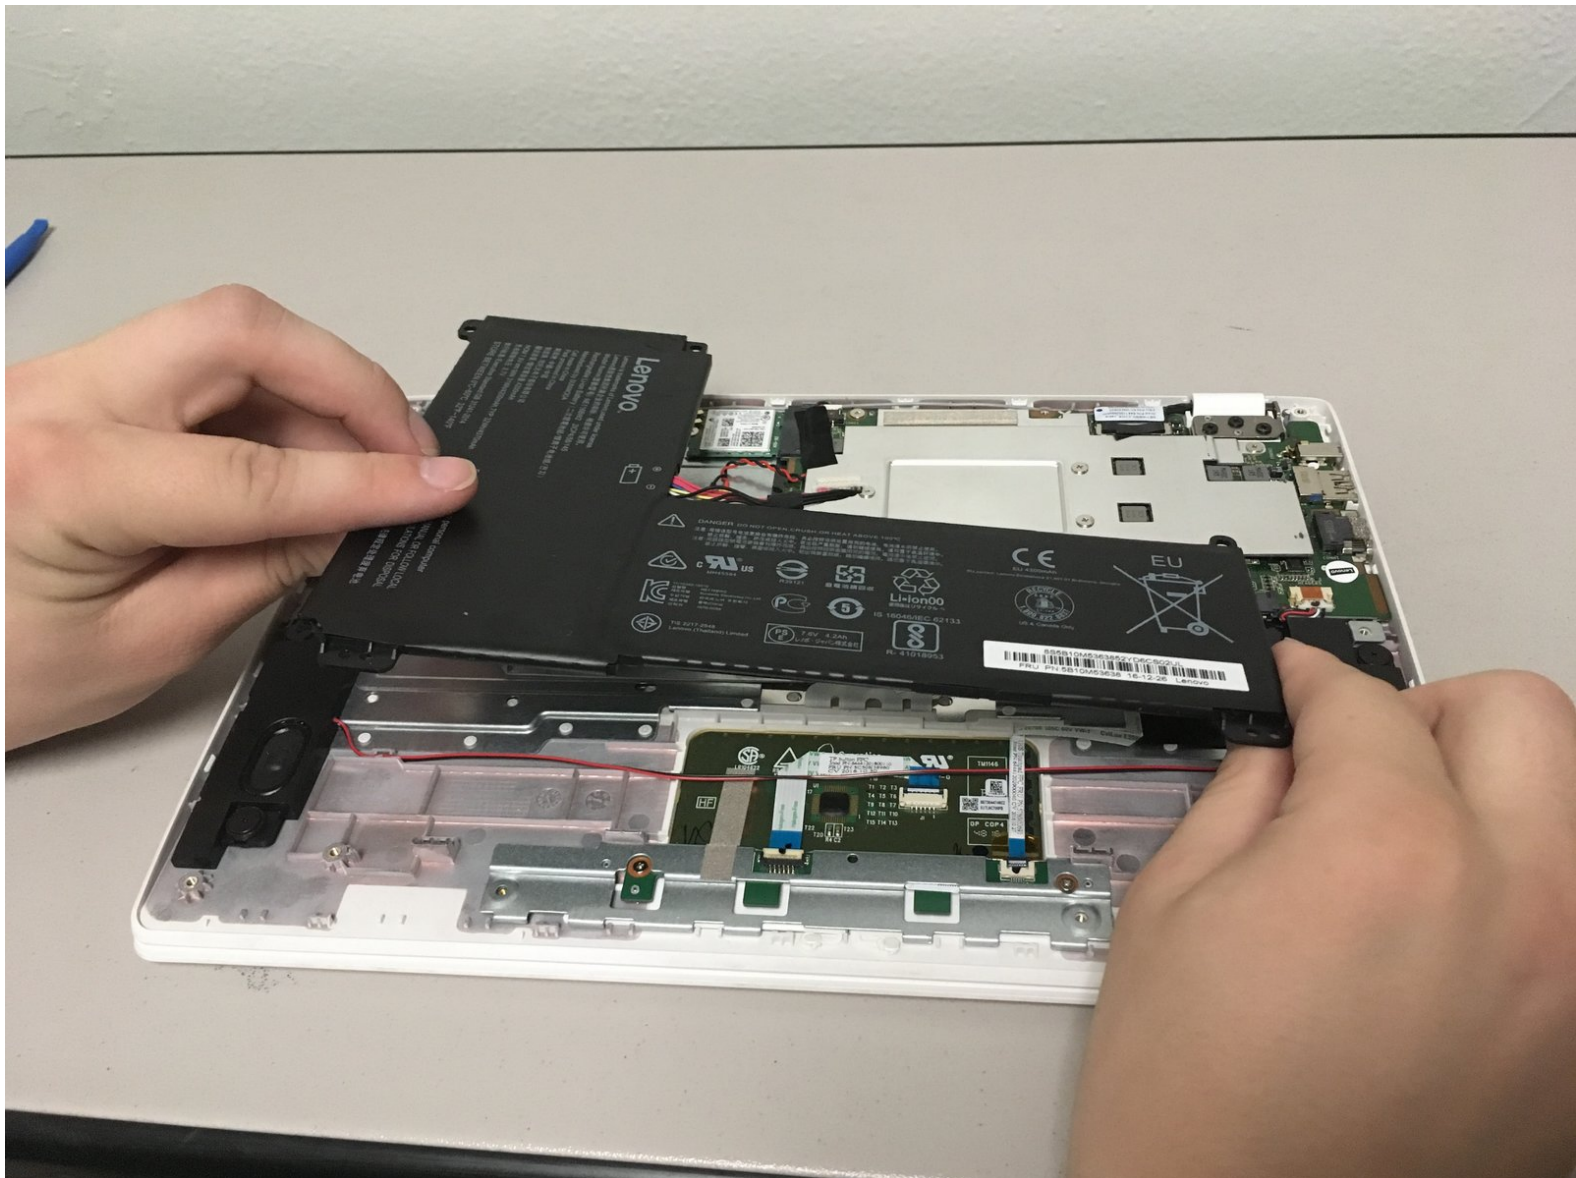

Lenovo Ideapad 110S-11IBR Battery Replacement

Step by step instructions for replacing your Lenovo Ideapad battery.

Written By: Alex Daughters



INTRODUCTION

This guide will teach you to replace the battery of the Lenovo Ideapad 110S-11IBR, if faulty or to service another part.



TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:



- [Lenovo IdeaPad 110S-11IBR](#) (1)

Step 1 — Battery

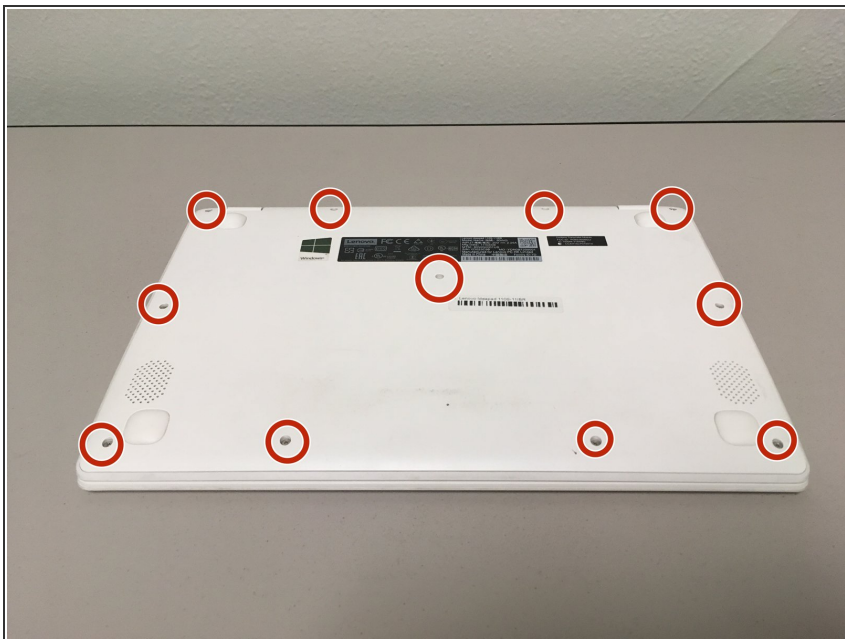


- ⚠ Ensure that your device is completely OFF before performing this procedure.
- Unscrew the eleven 4 mm Phillips #0 screws on the bottom of the device.

Step 2

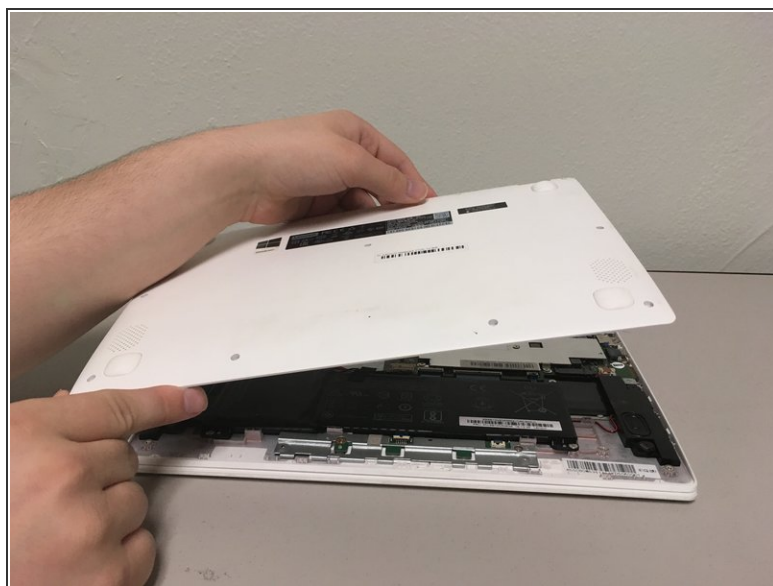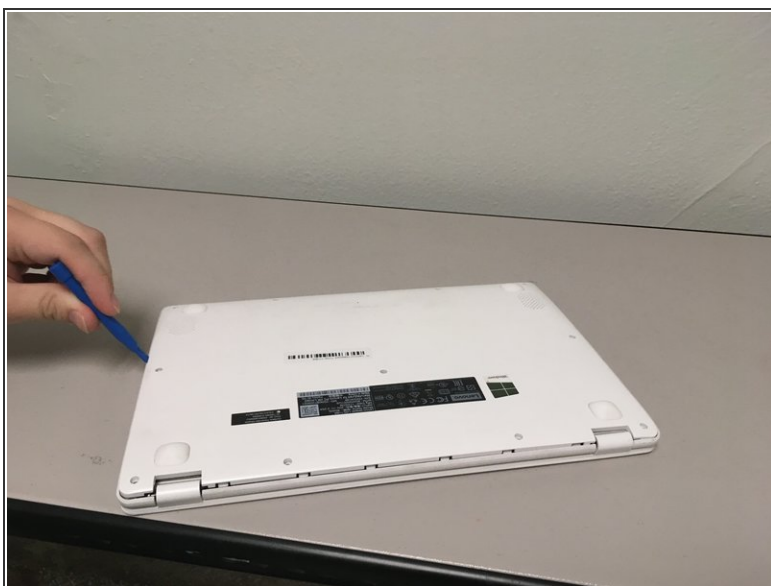


- Separate the back lid from the laptop using a plastic opening tool.
- Lift the back lid off of the device.

Step 3

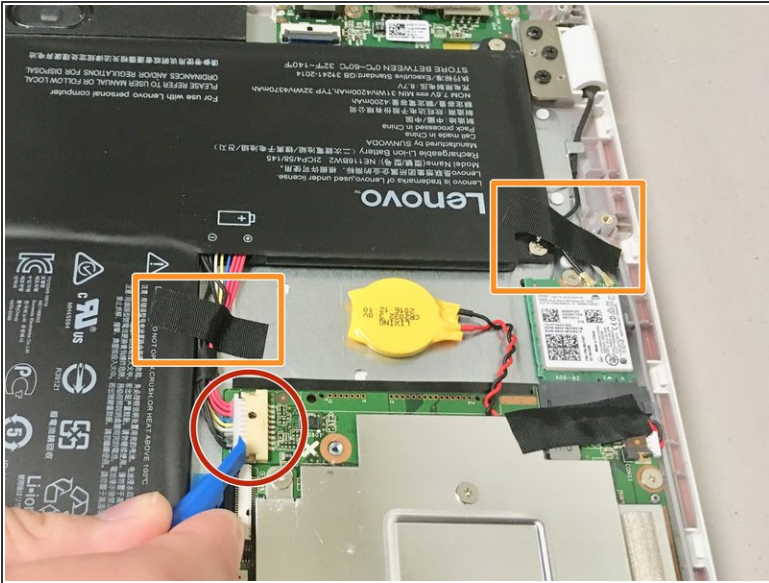



- Remove the battery connector from its socket by pulling the cable away from the hinge using your fingers or a plastic opening tool.
- ⚠ Do not pull on the socket itself or you risk damaging the motherboard.
- Remove the two pieces of tape that are holding the battery down.

Step 4

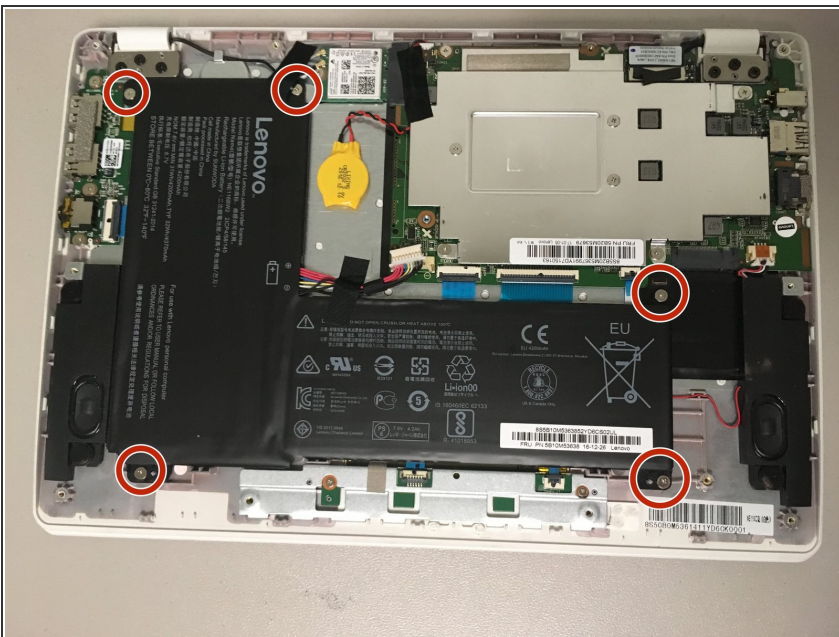

- Remove the five 4 mm Phillips screws securing the battery.

Step 5

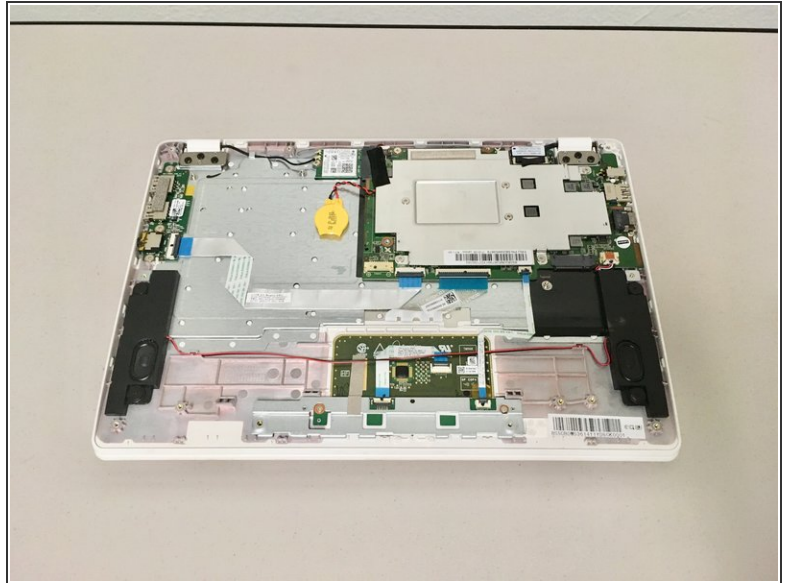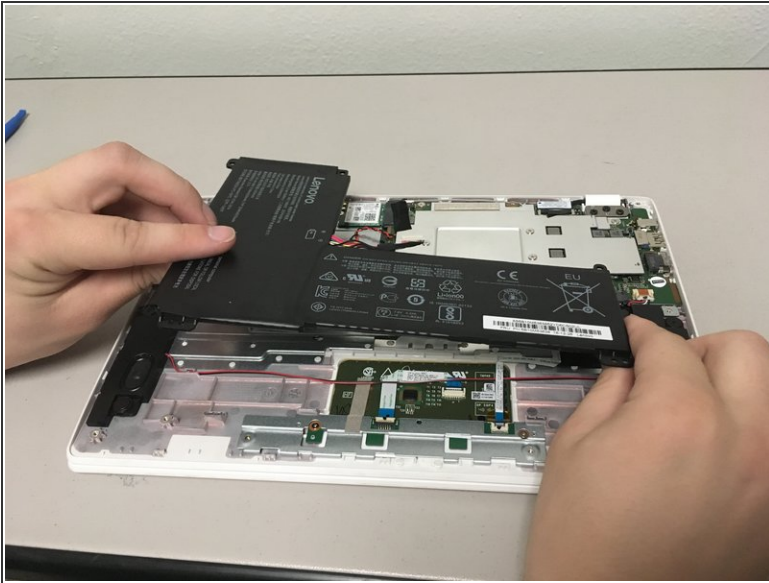

- Lift the battery up and out of the device.

To reassemble your device, follow these instructions in reverse order.