




Dell Chromebook 11 CB1C13 Battery Replacement

This guide will display how to replace the battery.

Written By: Jerry Geffrard

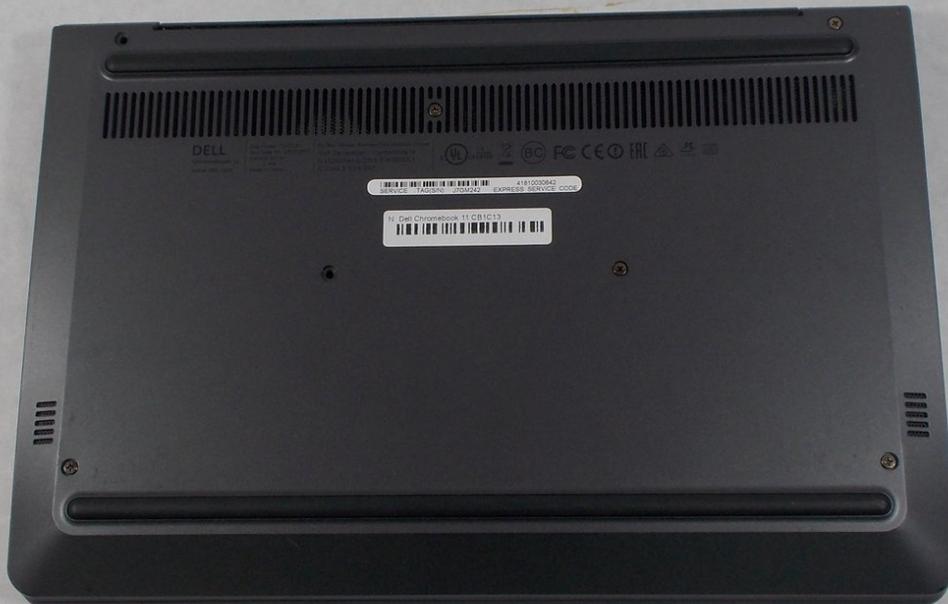

INTRODUCTION

This guide will display how to replace the battery. A recall was issued on the batteries that came with the Dell Chromebook 11, so it is very important to know how to replace them. A faulty battery may not only be unable to hold a charge, but could also cause severe damage to the device.


TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Heavy-Duty Spudger](#) (1)

PARTS:

- [Dell Chromebook 11 CB1C13 Battery](#) (1)
- [Dell Chromebook 11 CB1C13 Bottom Cover](#) (1)


Step 1 — Battery

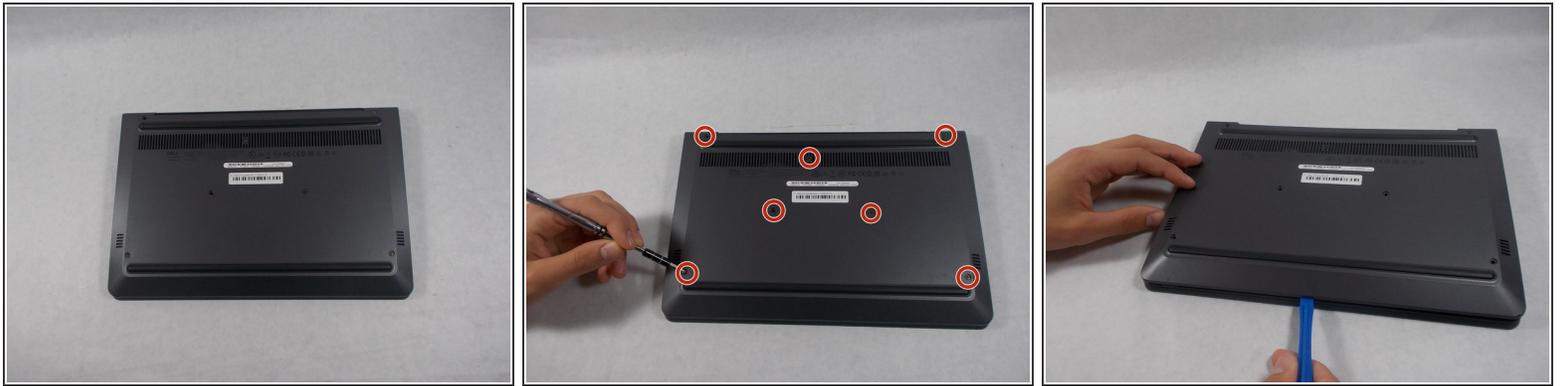

⚠ Make sure that device is fully powered down before attempting to open the back case.

- Remove all seven 8mm Philips #0 screws from the back case with a Philips #0 screwdriver.
- Once all seven screws are removed, you can pry the case off using your fingers or a plastic opening tool.

Step 2

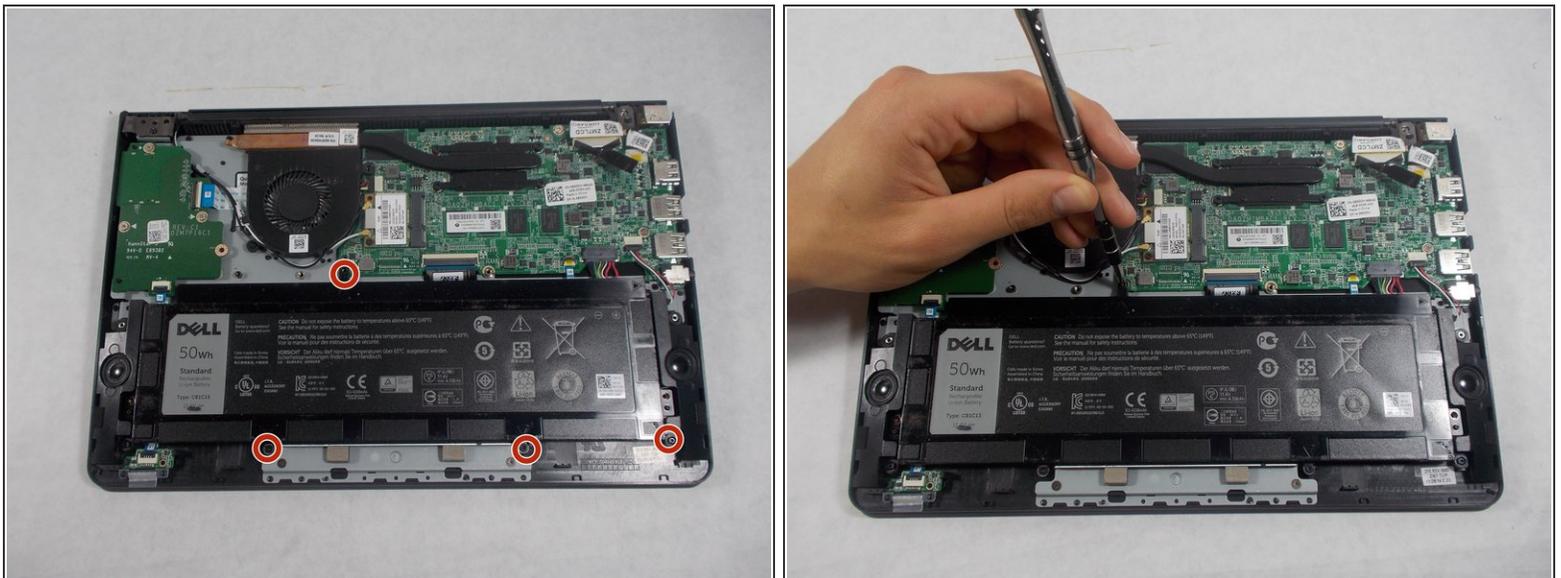

- Use a Phillips #0 screwdriver to unscrew the four 8 mm screws that secure the battery.

Step 3



- Use a plastic spudger to push the bundled cable connector free in the same direction as the individual wires are running.
- ⓘ You can use your fingers to help pull the cable free. Pull evenly on the full width of the cable so that no individual wires are overly strained.
- Proceed to gently remove the battery from the back panel.

To replace your Dell Chromebook 11 battery, follow these instructions in order.