


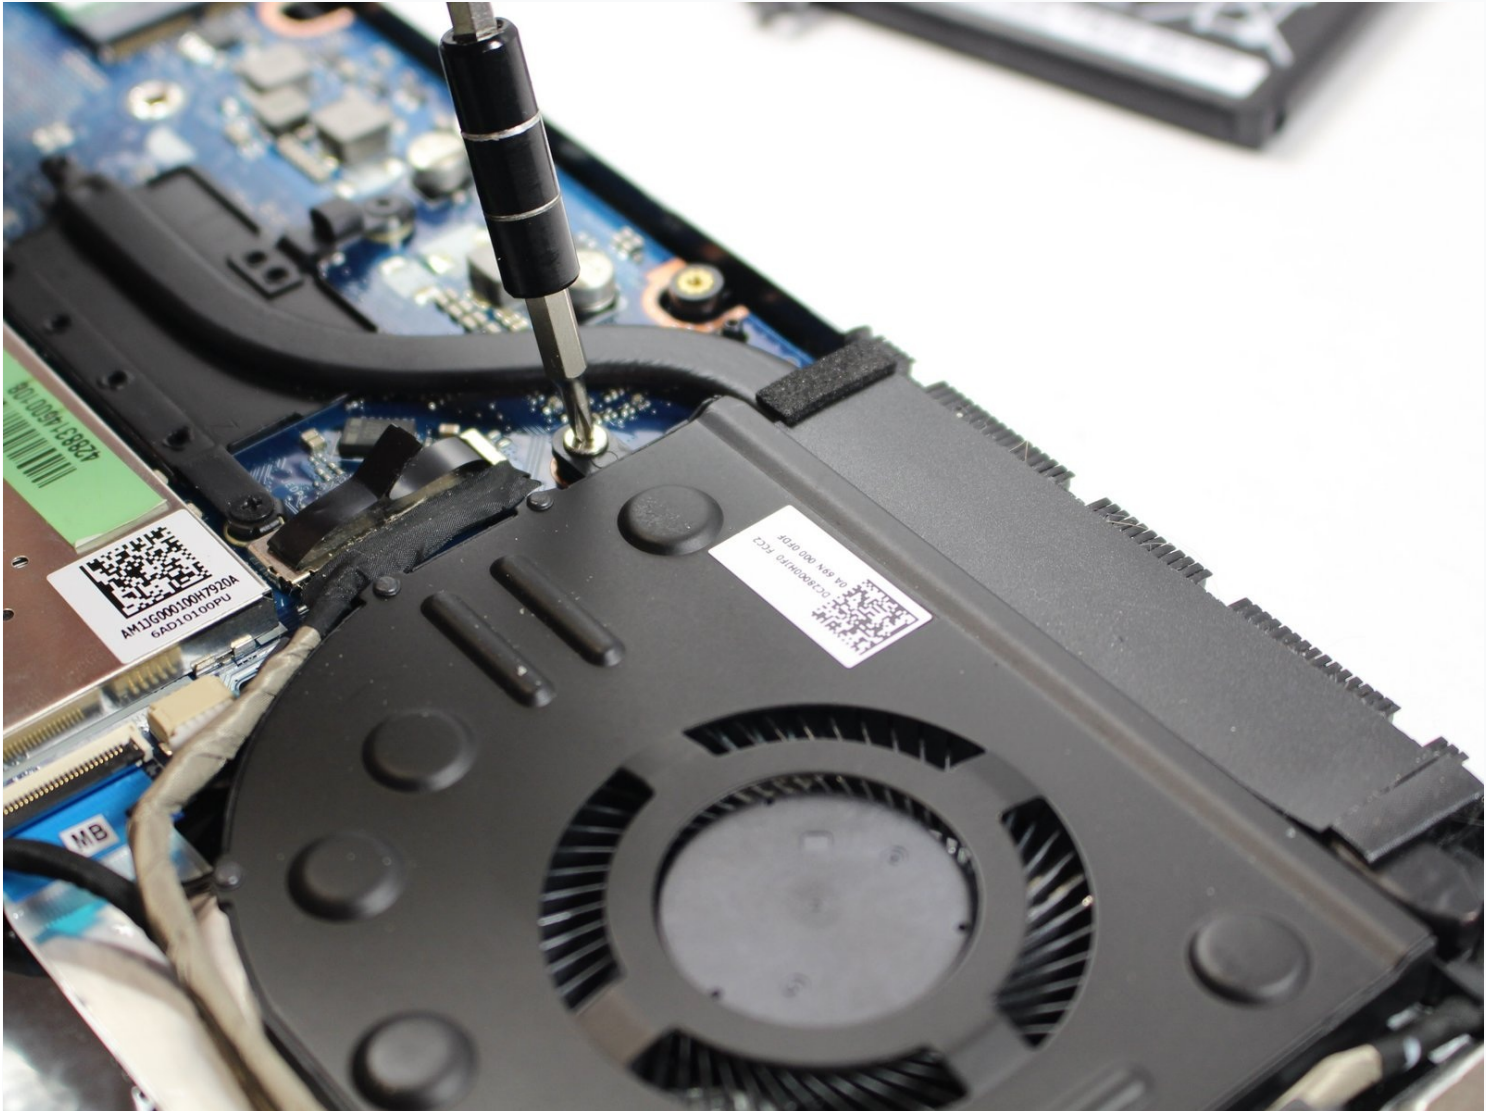

Lenovo IdeaPad Flex 4-1470 Cooling Fan Replacement

This guide covers how to replace the cooling...

Written By: Demario Robinson



INTRODUCTION

This guide covers how to replace the cooling fan. The fan cools the internal components by pulling in cool air and exhausting hot air from the system. A faulty fan will cause over heating and poor performance. If you find that your laptop is over heating it may be best to check that the vents are clear of dust and debris first then consider the changing the fan.


TOOLS:


[Phillips #0 Screwdriver](#) (1)
[iFixit Opening Tool](#) (1)
[Tweezers](#) (1)

PARTS:

[5F10L45845 - Lenovo Laptop CPU Cooling Fan - Genuine](#) (1)



Step 1 — Lower Case

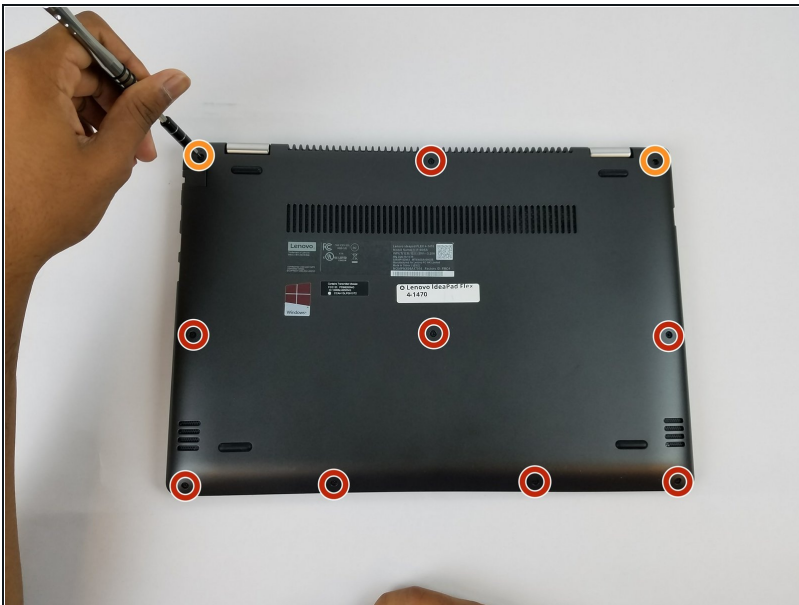

 **Ensure your computer is completely OFF before starting this guide.**



- Remove the eight 6 mm screws using a Phillips #0 screwdriver.
- Remove the two 11 mm screws using a Phillips #0 screwdriver.

Step 2

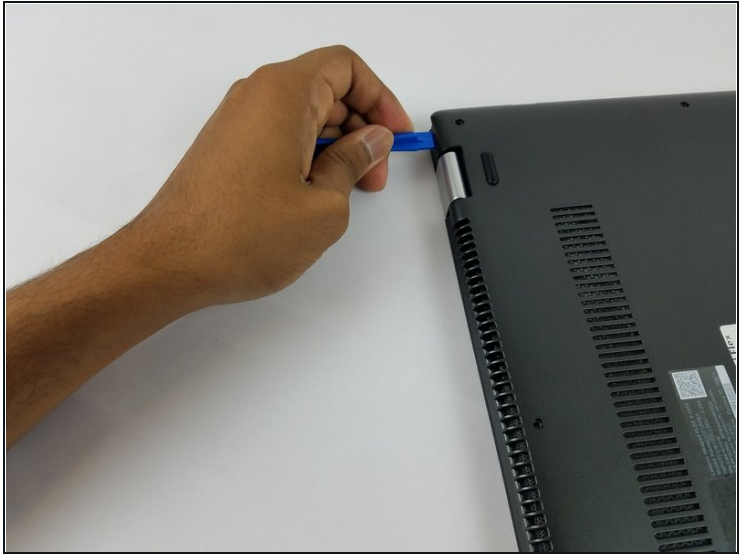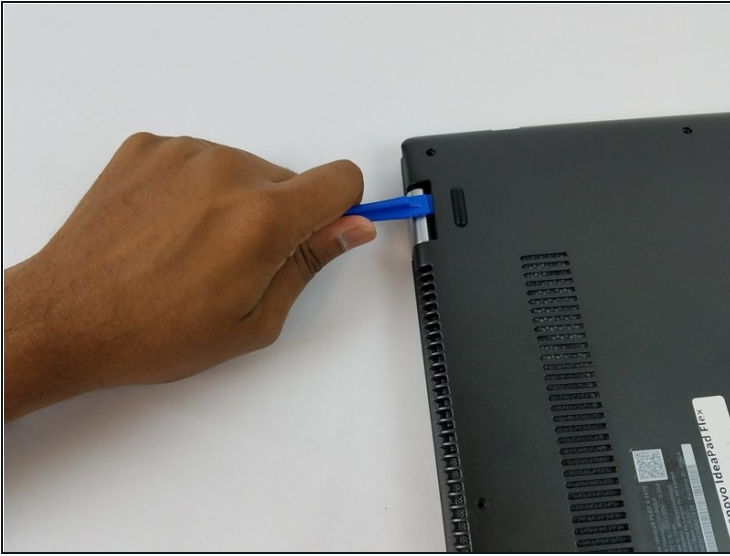


- Pry the back cover off by inserting the plastic opening tool at the hinges and wedging it between the Back cover and the body.
- Follow along the back edge with the plastic opening tool, lifting the cover off as you go. It is normal to hear snapping/clicking sounds as the back cover is held on by clips.
- Remove the cover.

Step 3 — Cooling Fan

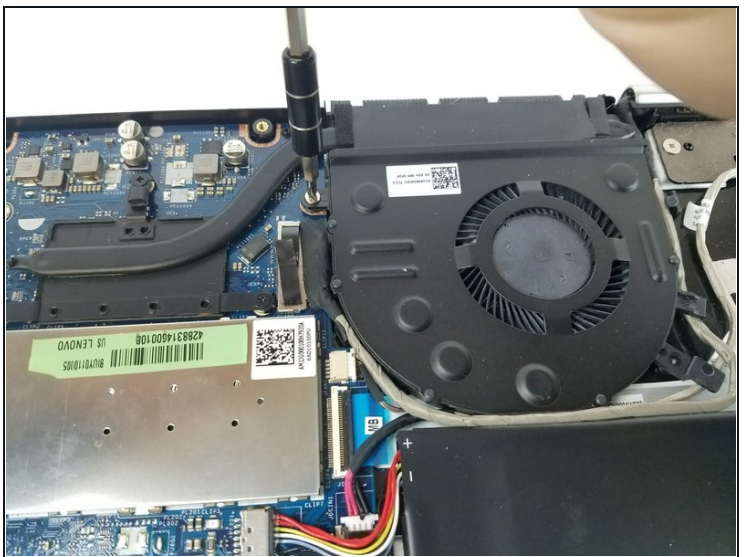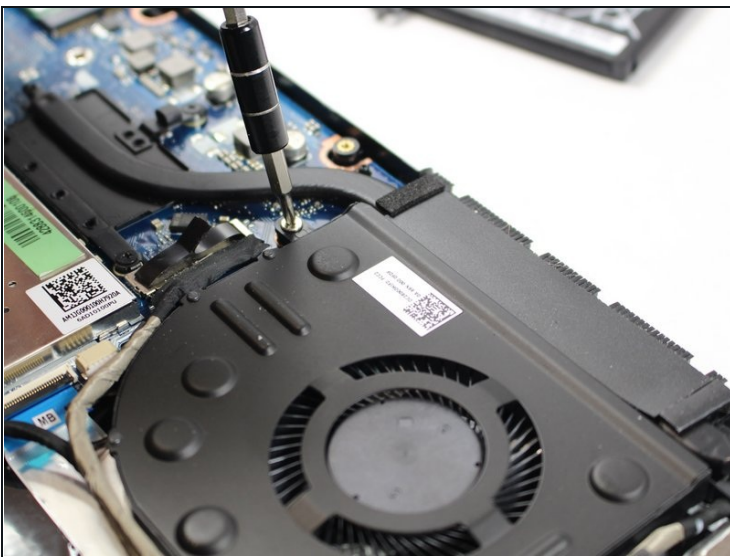

- Remove the two 4 mm Phillips #0 screws which mount the fan.

Step 4

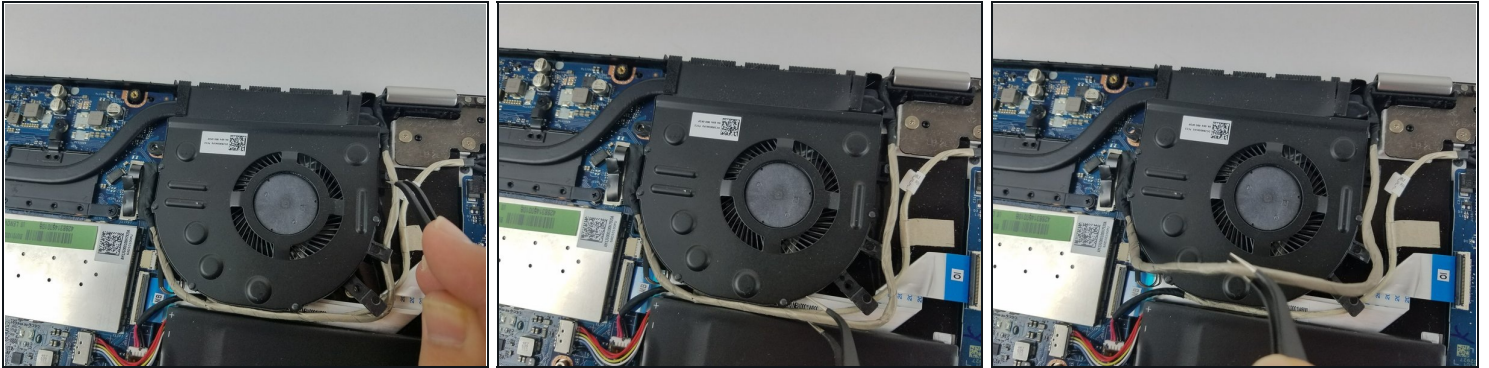

- Using the Precision [Tweezers](#), remove the 2 gray wires around the fan from their clips.

Step 5



- Use 2 plastic opening tools to remove the fans power wire from the Mother board and remove the fan.
- Lift the cooling fan out of the laptop.

To reassemble your device, follow these instructions in reverse order.