



Asus Chromebook C300MA-DB01 Speaker Replacement Speakers Replacement

If you are having trouble with audio output on...

Written By: wyatt boyatt



INTRODUCTION

If you are having trouble with audio output on your device this guide can be useful. Be careful when unplugging wires as to not damage them.



TOOLS:

[iFixit Opening Tool](#) (1)
[64 Bit Driver Kit](#) (1)



PARTS:


[Asus Chromebook C300MA-DB01](#)
[Speakers](#) (1)

Step 1 — Back Cover



- Place device bottom-side up.

Step 2

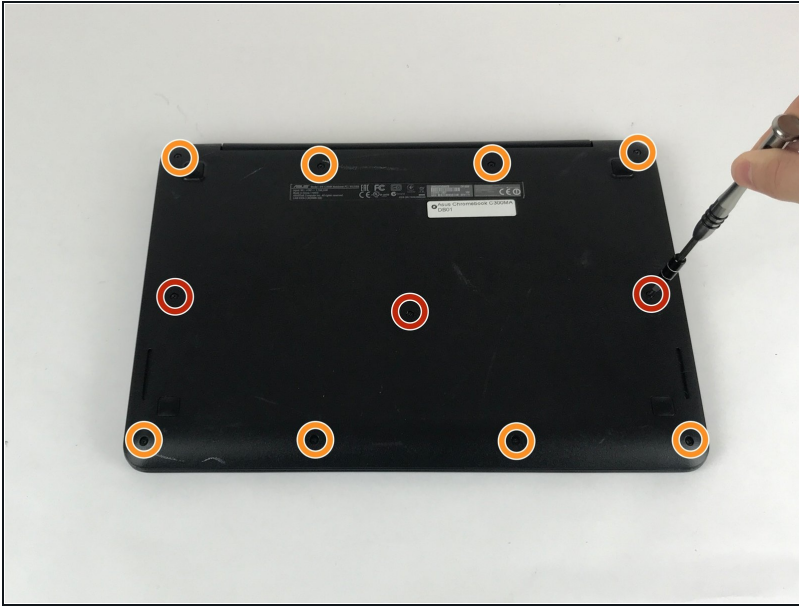

- Remove the three 6.0 mm Philips screws from the center of the case with the #2 screwdriver bit.
- Remove the eight 9.0 mm Philips screws along the perimeter of the case with the #2 screwdriver bit.

Step 3




- Using a plastic opening tool, separate the bottom case at the seam.
- ⚠ Prying open a laptop requires a lot of force but use caution so as to avoid breaking the fragile connectors.

Step 4




- Lift the keyboard panel away from the components at its hinges, which are located at the back of the laptop.

Step 5 — Battery

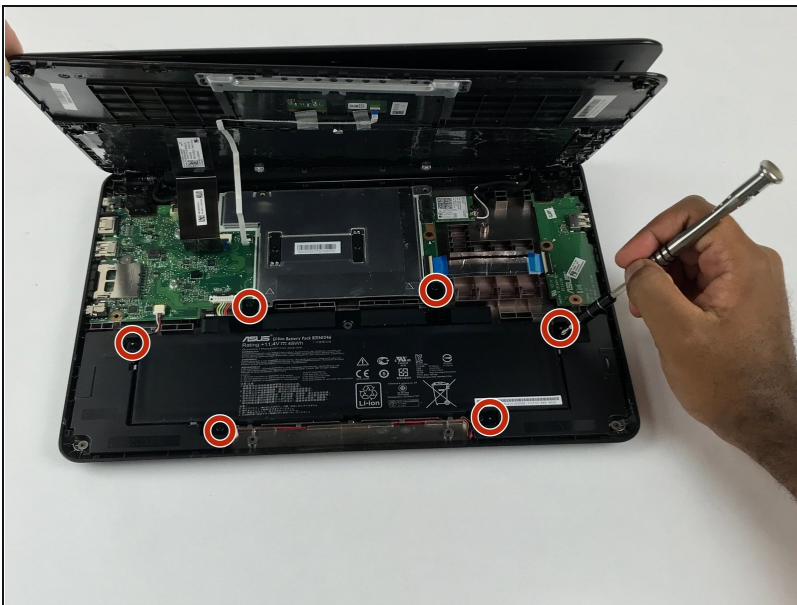

- Remove the six 6.0mm Philips screws, using the 64 bit driver from around the battery.

Step 6

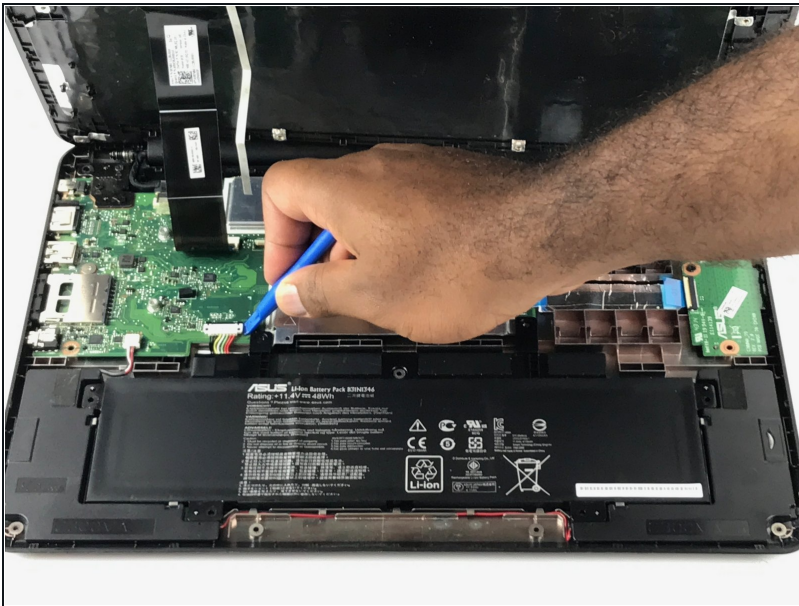

- Unplug the wire using the plastic opening tool that connects the battery with the board.

Step 7



- Lift the battery out of the laptop

Step 8 — Speakers




- Use plastic opening tool to pry off the wire connecting the left side speaker to the circuit board.

Step 9



- Use plastic opening tool to pry off the left side speaker.

Step 10

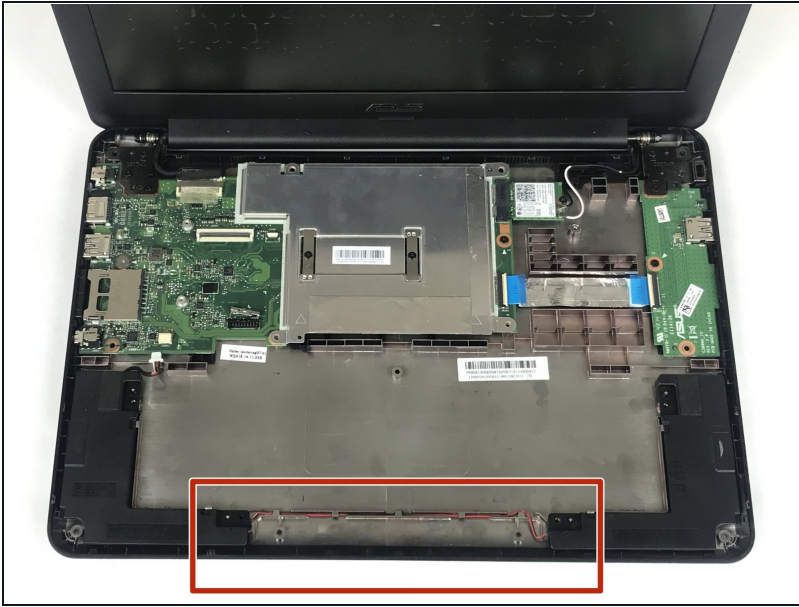


⚠ Gently remove the wire connecting the left and right speakers from its channel. Be careful as to not tear or damage the wire.

Step 11



- Use plastic opening tool to pry off right side speaker.

Step 12

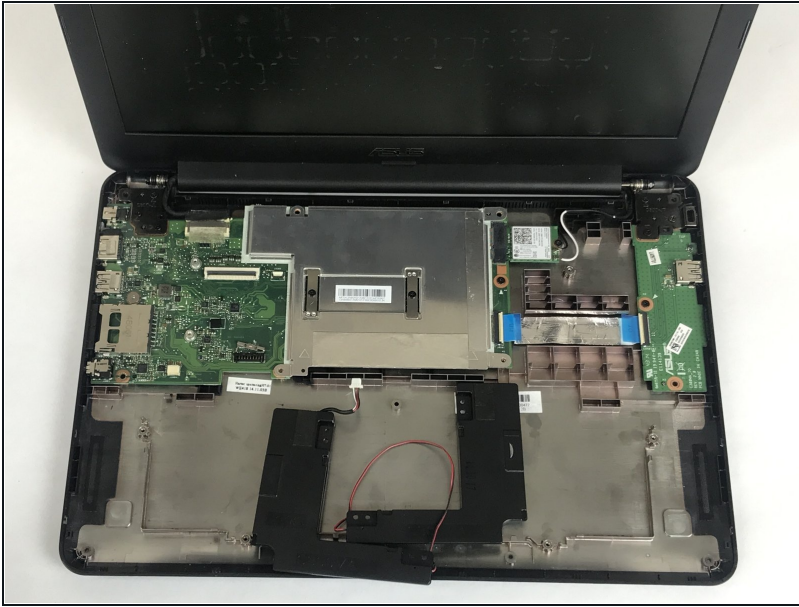

- Lift and remove both speakers and connecting wire.

To reassemble your device, follow these instructions in reverse order.