



Dell Inspiron 17 N7010 Disc Drive Replacement

Written By: Joseph Sctbunio





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove battery



- Turn the laptop over, battery side facing you.
- Move both latches outward, and then pull back on the battery.

Step 2 — Remove disc drive



- Remove the single Philips screw securing the disc drive.
- Pull the disc drive out.

To reassemble your device, follow these instructions in reverse order.