



MSI GS60 Ghost Pro 4K Gold Edition Back Panel Replacement

How to remove the back panel of the MSI GS60 Ghost Pro 4K Gold Edition.

Written By: nonEdward666



INTRODUCTION

This guide covers the procedure necessary to remove and replace the back panel of this device.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel



- Place this device back panel facing up.

Step 2



- Using the screwdriver, unscrew the highlighted 1.2mm Phillips head #0 screws which secure the back panel into place.

Step 3



- Using the plastic opening tools, separate the back panel from the rest of the device.
- Do this by firmly pressing the head of the tool into the space between the back panel, and the rest of the device.

To reassemble your device, follow these instructions in reverse order.