




# Nixon Mission Android Wear Front Screen Replacement

Allow for simple disassembly and replacement of the front protective screen of the watch.

Written By: Venkata

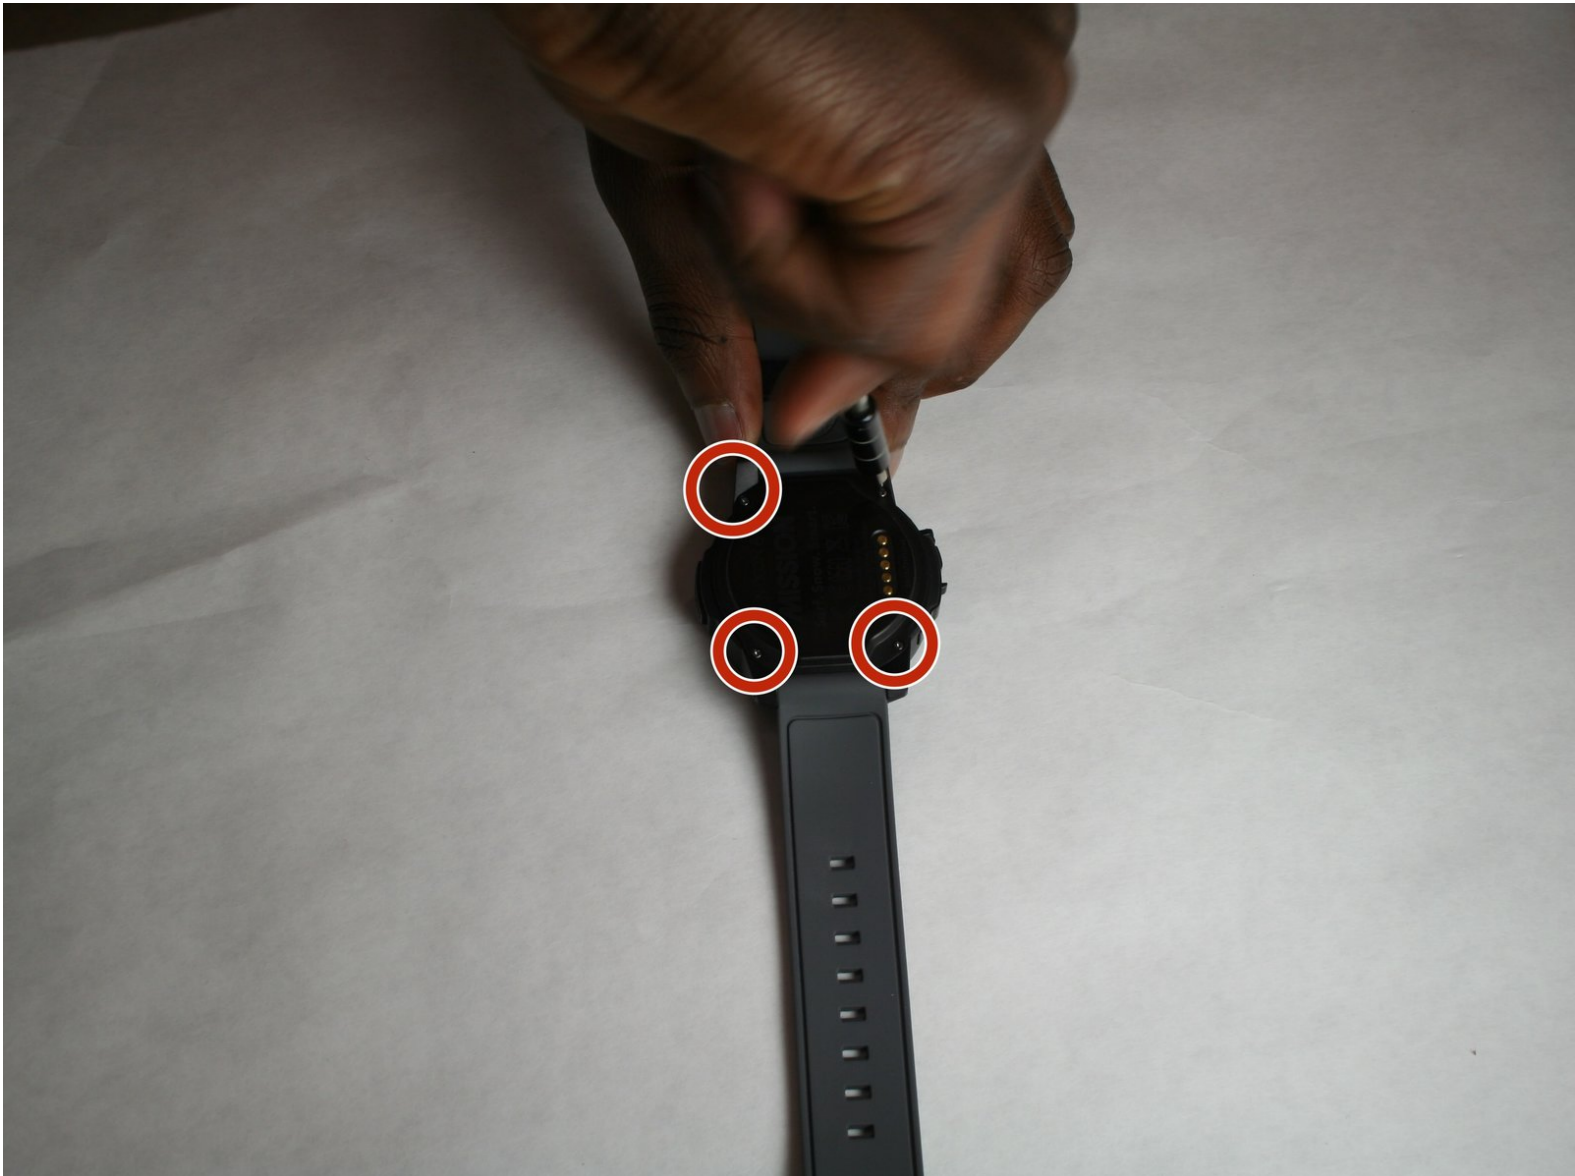




## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [1.5mm Hex Screwdriver](#) (1)

## Step 1 — Front Screen

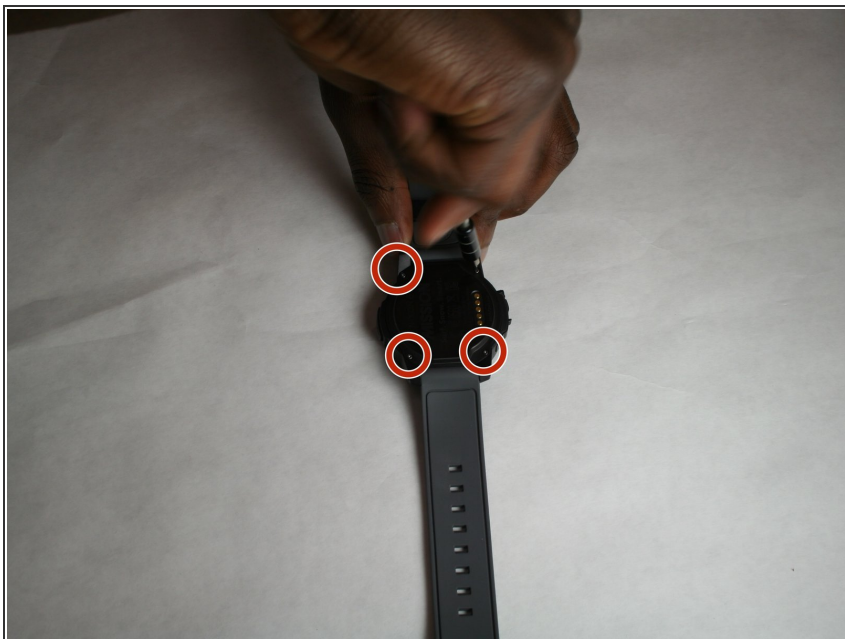

- Remove 4 4.5mm Phillips head screws from back side of watch using PH00 Phillips head.

## Step 2



- Remove the back plate of watch.

## Step 3



- Unclip 5 latches from motherboard using a spudger.

## Step 4



- Remove 2 3.0mm Phillips screws from motherboard using PH00 Phillips head.




## Step 5



- Carefully remove motherboard & internal screen.

## Step 6

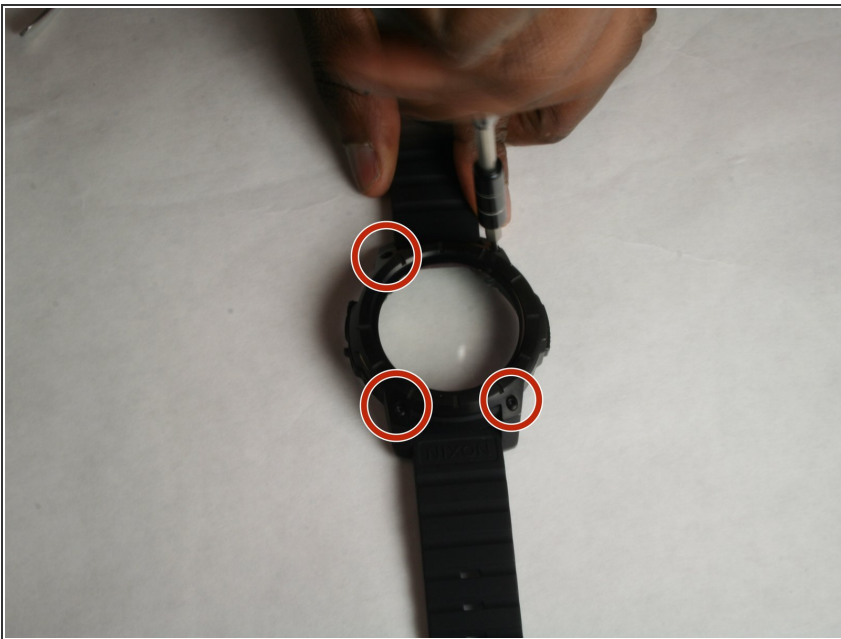


- Remove 4 7.0mm hex-screws from front of watch using H1.5 Hex head.

## Step 7




- Remove outer screen frame from front of watch.

## Step 8

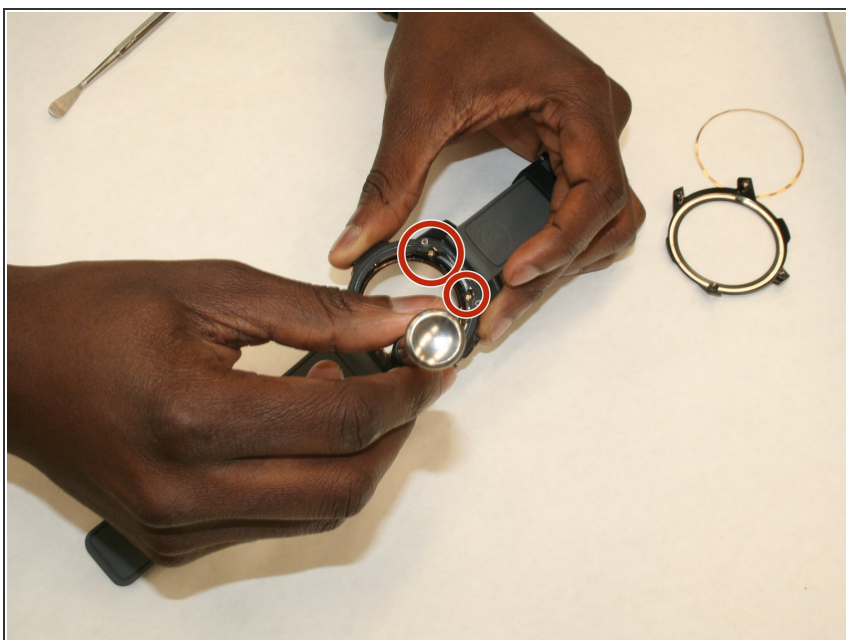

- Remove 4 4.5mm Phillips gold screws from back of watch using PH00 Phillips head.

## Step 9

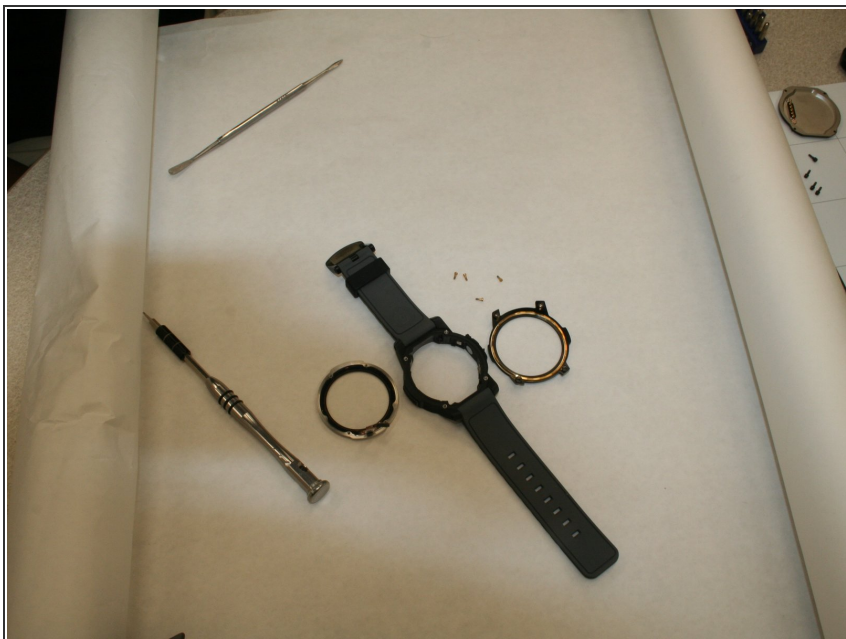

- Remove outer protective screen.
- Replace outer protective screen with the new part.

To reassemble your device, follow these instructions in reverse order.