



# HP G62-340US Battery Replacement

This guide will teach you how to remove, replace and install your HP G62-340US laptop battery.

Written By: Yun Yang



## INTRODUCTION

HP G62-340US has a 6-Cell 47WHr Lithium-Ion battery that places on the underside of the computer.

### **TOOLS:**

- [Fingers](#) (1)

### **PARTS:**

- [HP MU09XL Replacement Laptop Battery](#) (1)

## Step 1 — Battery



- Turn the computer off
- Push the battery release switch to the right, towards the center of the laptop.

## Step 2



- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.