




# Acer Aspire E1-510-2500 Battery Replacement

How to replace a dead or dying battery in the Acer Aspire E1-510-2500.

Written By: Sebastian Taylor

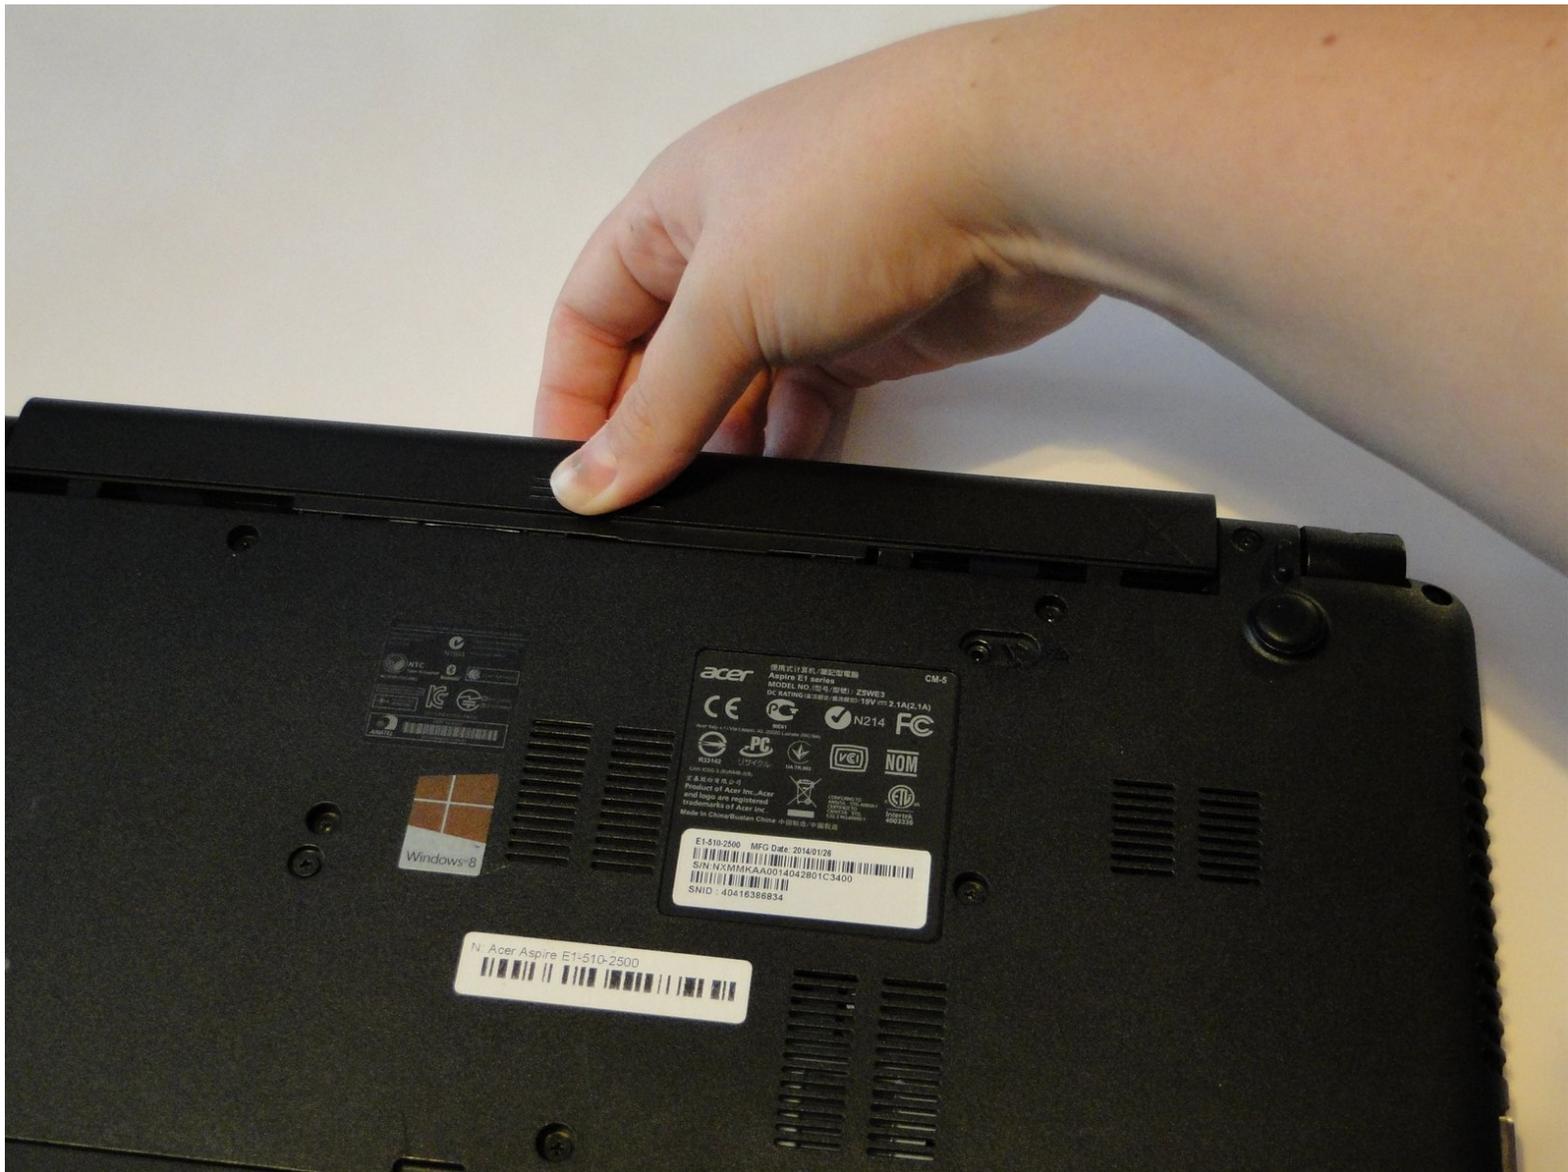

---

## INTRODUCTION

The Acer Aspire E1-510-2500 has a lithium ion 14.8V, 2350mAh battery that fits snugly on the underside of the laptop, under the screen. Removal of the battery is considered a crucial first step to any further disassembly.

---

### TOOLS:

- [Spudger](#) (1)
-


## Step 1 — Battery



 Ensure that your laptop is completely switched off, and disconnected from the power source.


- Flip the laptop so that the base of the laptop is facing up.

## Step 2

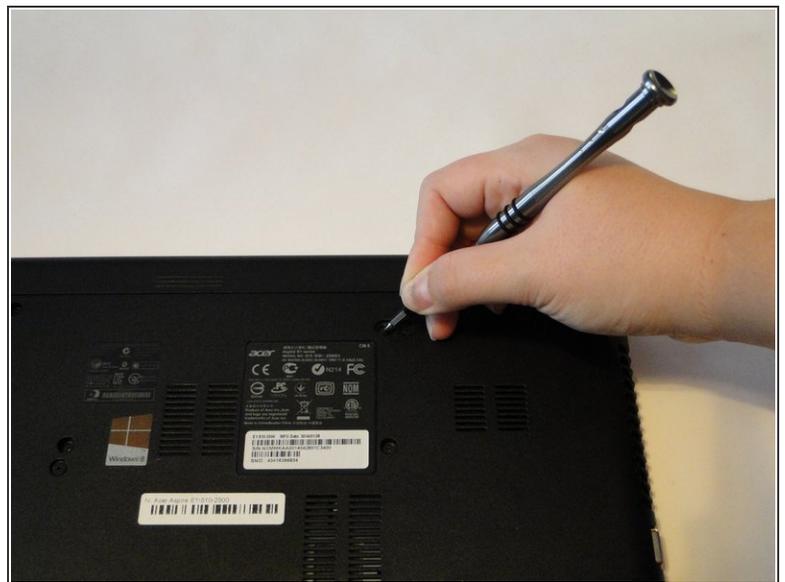

- Insert a spudger into the battery release latch.
- Slide the battery release latch to the right, this will eject the battery for safe removal.

## Step 3

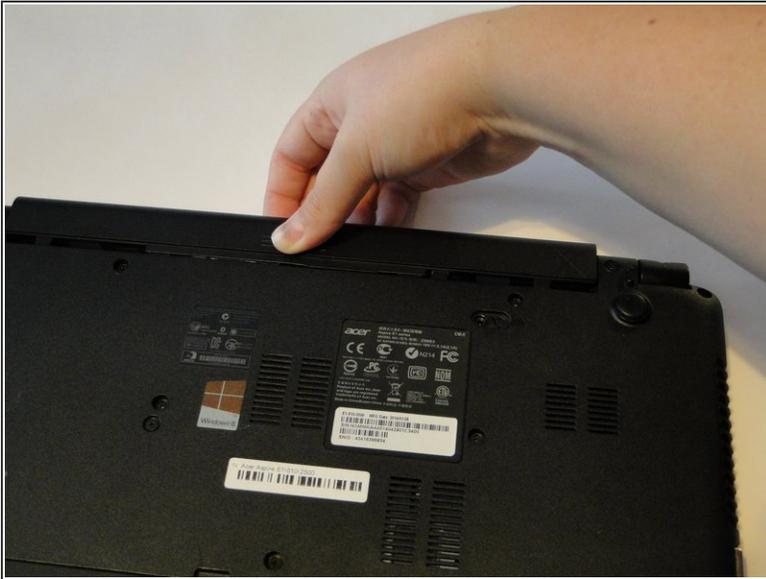

- Carefully slide the battery out of the battery's home.

To reassemble your device, follow these instructions in reverse order.