




Asus UL30VT-X1 Hard Drive Replacement

This guide will help users replace a defective hard drive in their Asus UL30VT-X1.

Written By: Robert Wilcox

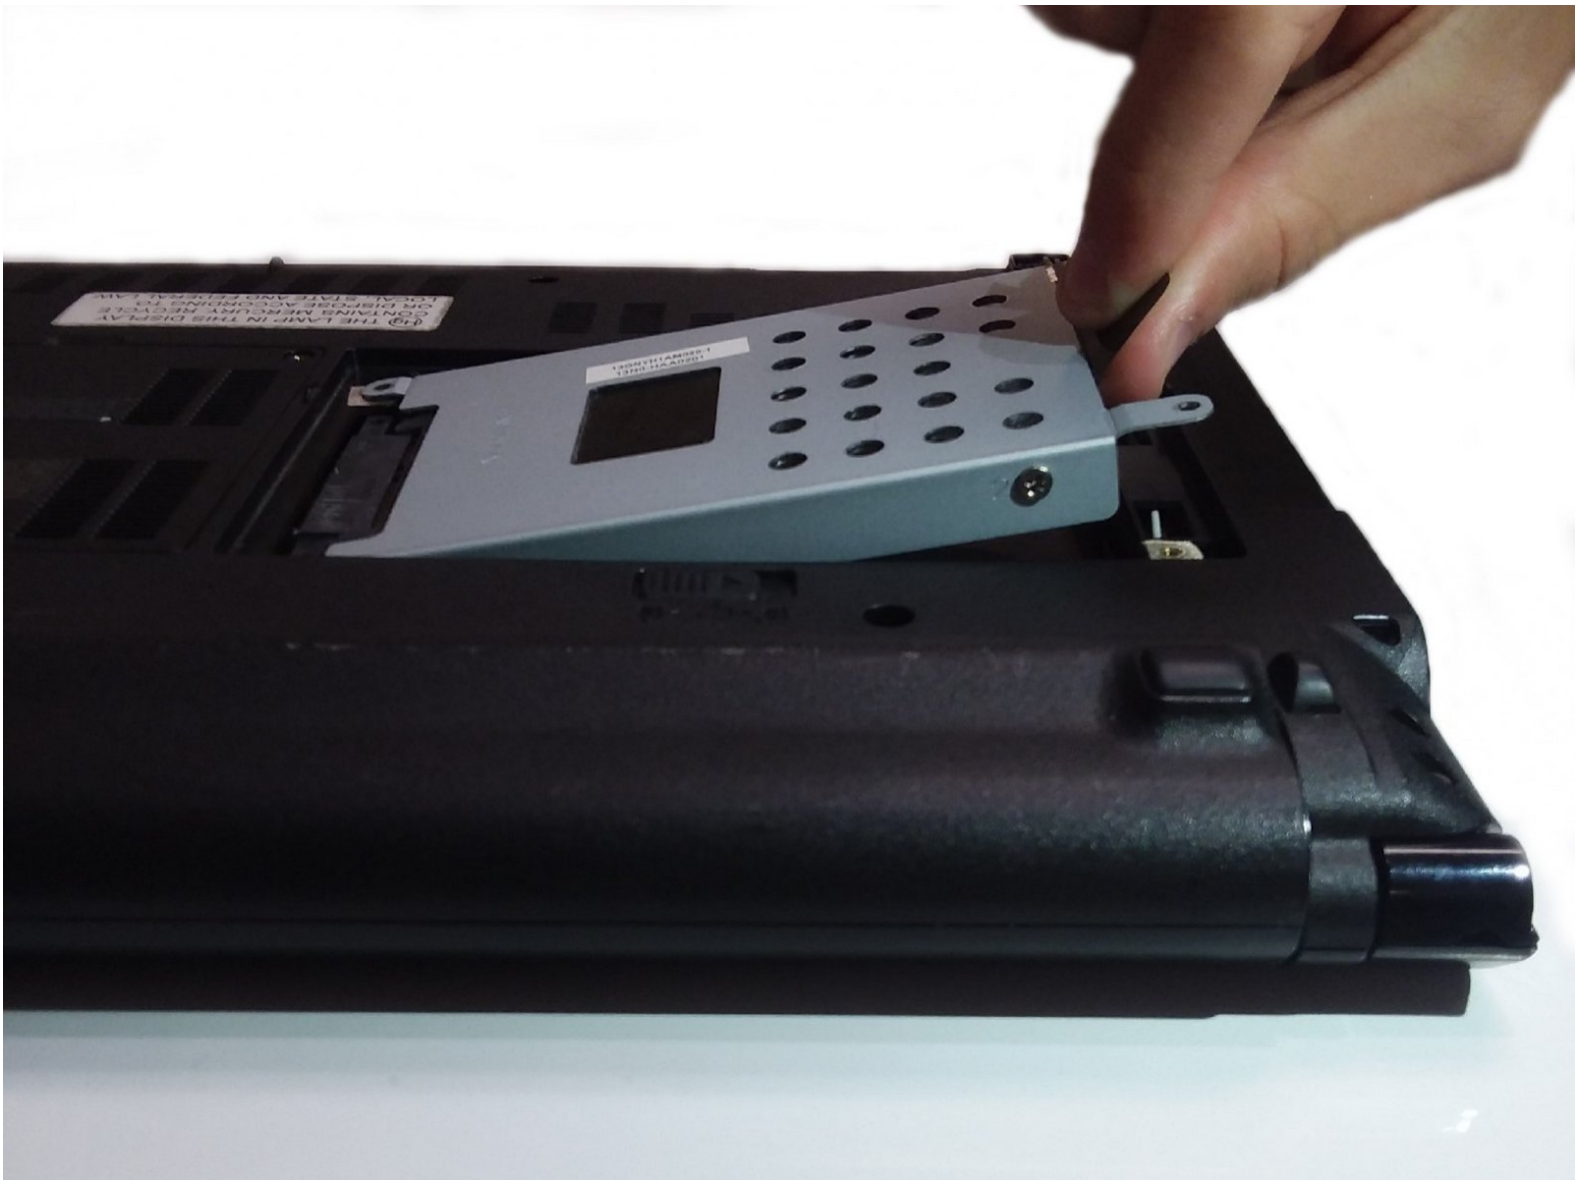

INTRODUCTION

This guide will show the steps to take out and replace a defective hard drive for the Asus UL30VT-X1.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Hard Drive




- Flip the laptop over onto the back.

Step 2

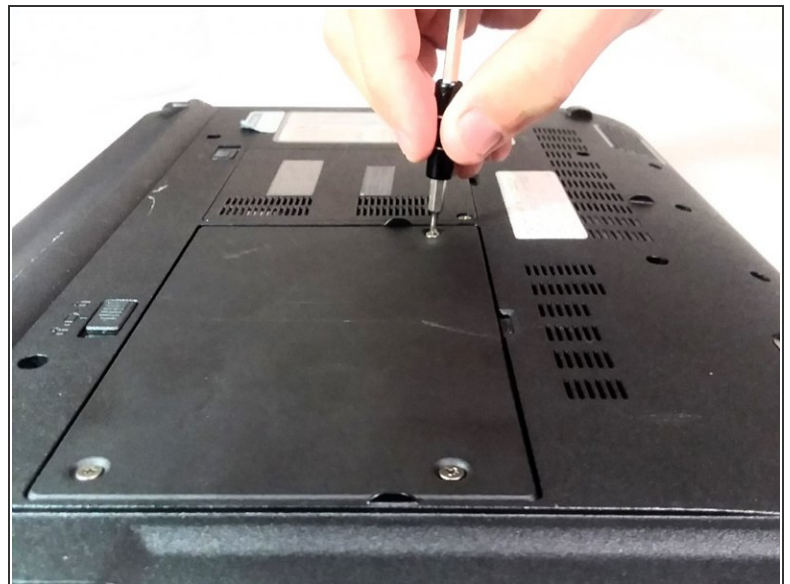



- Unscrew the three screws on the hard drive panel using a Phillips Head #00 screwdriver.

Step 3

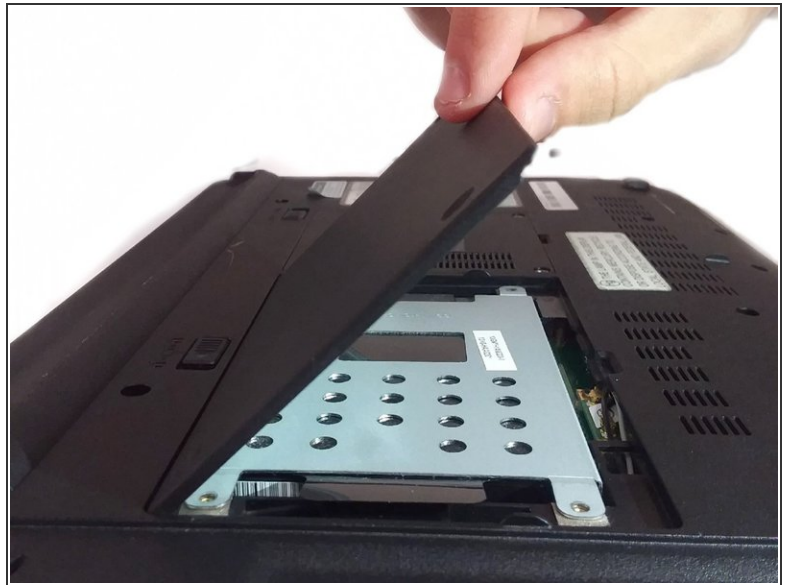

- Lift the hard drive panel up from the small cut out at the bottom with your finger to expose the hard drive.

Step 4

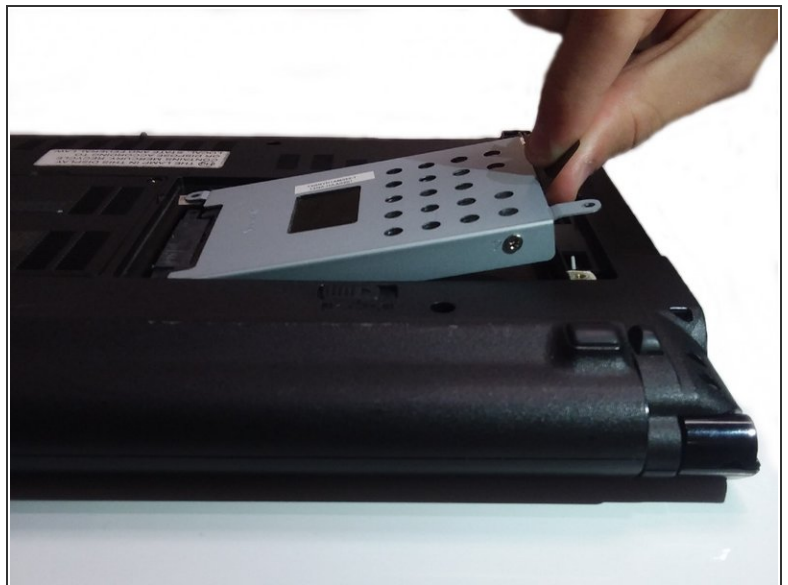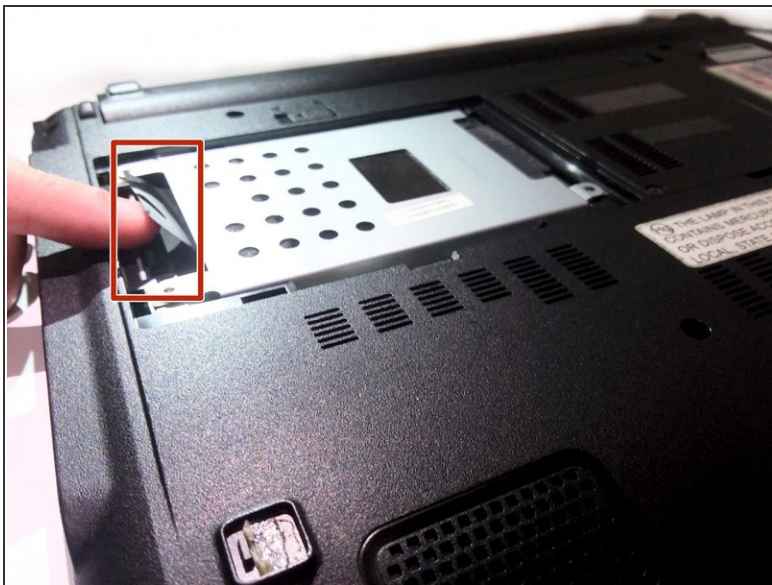

- Grab the black pull tab with your fingers. Pull upwards and then outwards to remove the hard drive.

i It can sometimes be a little difficult to remove the hard drive.

To reassemble your device, follow these instructions in reverse order.