



# Toshiba Satellite L775D-S7340 RAM Replacement

This guide will show you how to remove and...

Written By: Elizabeth Sadewasser



# INTRODUCTION

This guide will show you how to remove and replace the RAM.

---

## TOOLS:

[Phillips #1 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Battery



- Make sure the laptop is unplugged and powered off.
- Locate the battery latches on the underside of the laptop.

## Step 2



- Slide the right latch to the right until you hear it lock into place.
- Slide the left latch to the left and hold it.

## Step 3




- Slide the battery out towards you.

## Step 4 — RAM



- Use the Phillips #1 screwdriver to remove the one 4.6 mm screw holding on the cover located on the bottom center of the laptop.


## Step 5

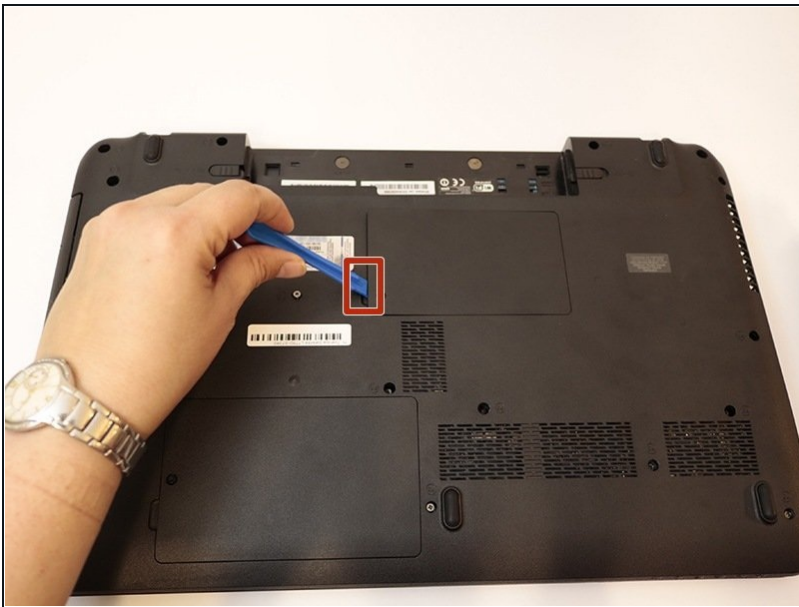

- Use the plastic opening tool to pry open the RAM cover. Wedge the prying tool in, beginning at the indent in the cover.





## Step 6

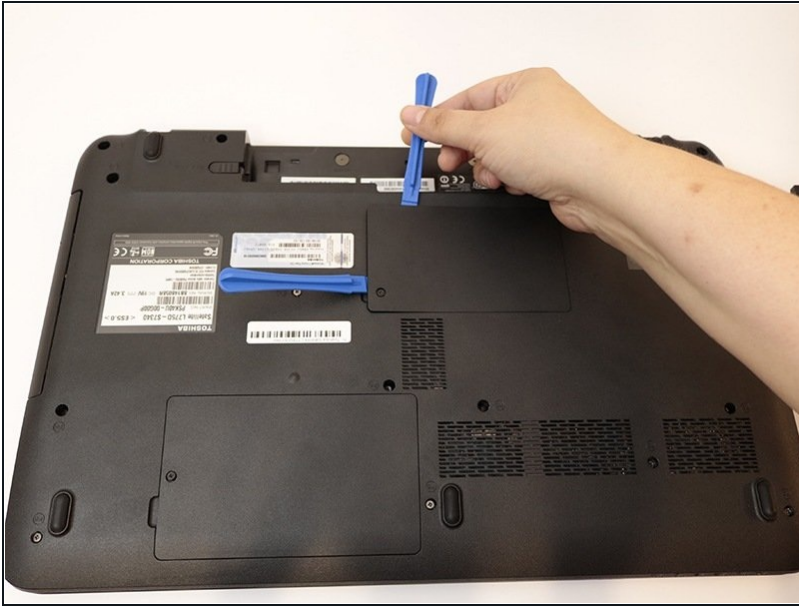


- Use another prying tool to pry up along the edges of the cover. Continue prying up around the edges until the cover is open and remove it.

## Step 7

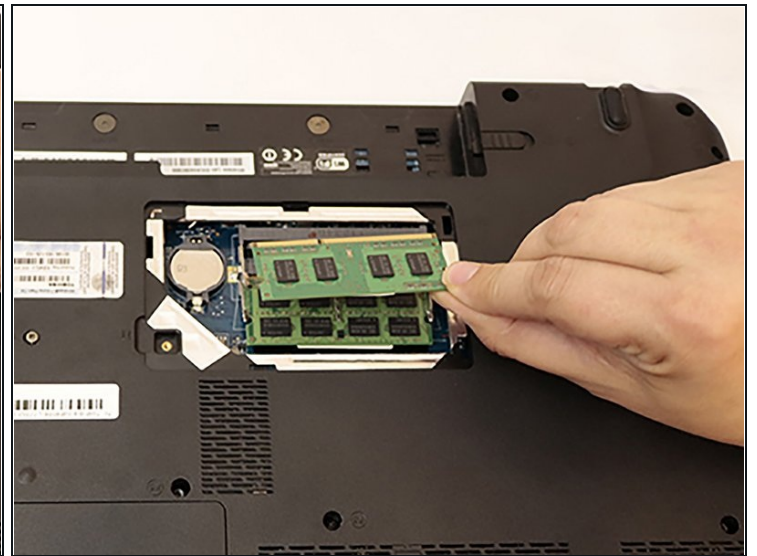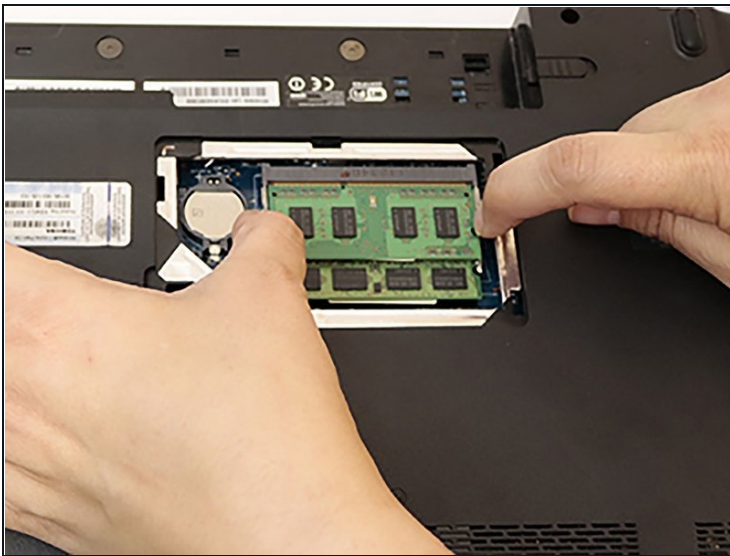

- Push the two top tabs outwards and the top stick of RAM will pop up. Gently remove the stick of RAM by pulling it out.

## Step 8

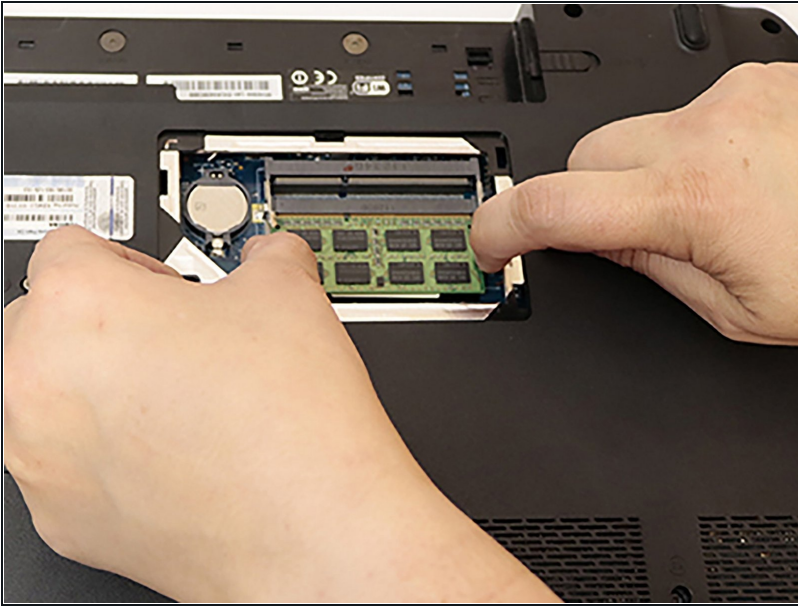

- Push the two bottom tabs outwards and the bottom stick of RAM will pop up. Gently remove the bottom stick of RAM by pulling it out.

---

To reassemble your device, follow these instructions in reverse order.