



Chromebook 14-x015wm Keyboard Replacement

This guide shows you how to replace the keyboard of the HP Chromebook 14-x015wm if it is damaged.

Written By: Michael Johnson



INTRODUCTION

This guide will show you how to replace the keyboard of the HP Chromebook 14-x015wm. After continual use, the keyboard may become unresponsive, if this is the case it is fairly easy to replace the keyboard rather than get a new computer. This guide outlines opening the case to get access to the components which connect the keyboard.



TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Keyboard



- Remove the small rubber circles over all four corners on the bottom of the chromebook.
- Remove the three small additional rubber covers along edge of computer with hinge.
- Unscrew all the screws on the bottom of the laptop using a Phillips #00 screwdriver.
- ⓘ Make sure to keep track of the screws for reassembly.

Step 2



- Flip the laptop back over to the front and open it so that the keyboard is visible.
- Use the iFixit opening tool to pry off the keyboard by placing the tool in-between the keyboard and the case. Move the tool around all sides until the keyboard separates.
- ⓘ The keyboard will likely be difficult to remove.

⚠ Be careful to avoid pulling on the ribbons that connect the keyboard to the internal components in order to prevent damage.

Step 3



- Carefully unclip the ribbons under the keyboard to disconnect the keyboard.
- Replace the keyboard and connect the ribbons to the new keyboard.
- Press the computer case shut and replace the screws and rubber pads.

