


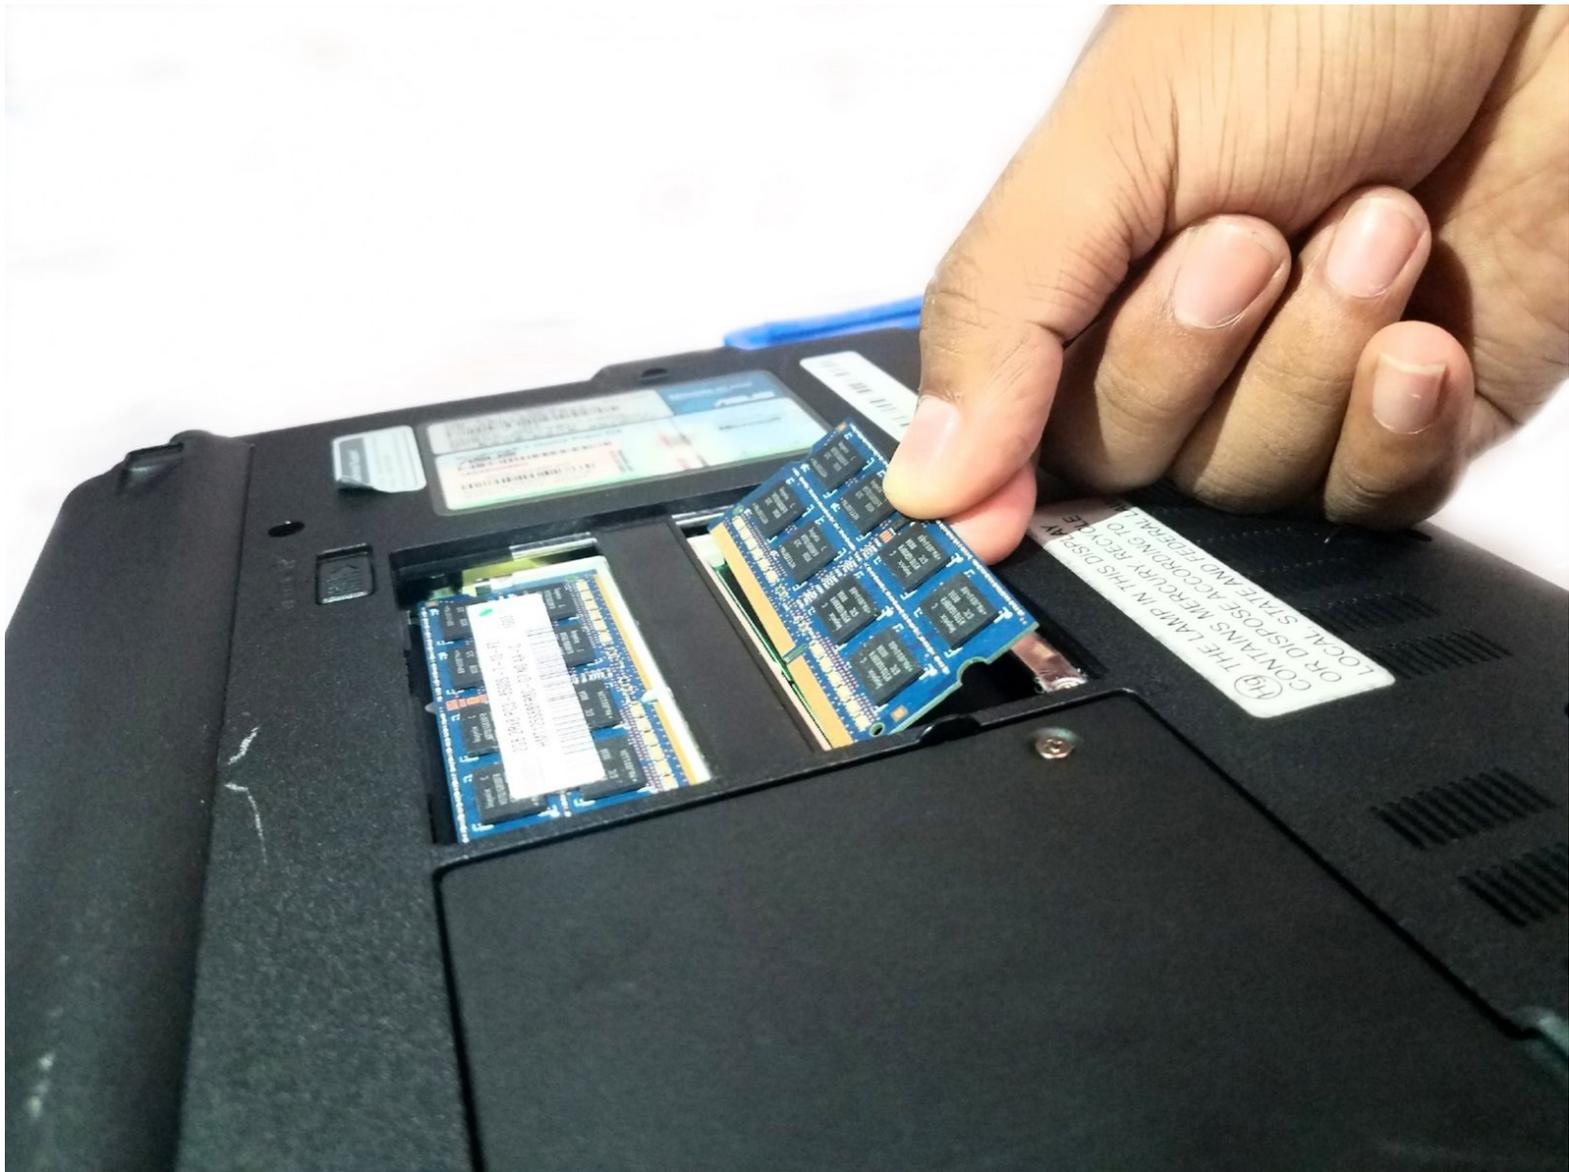

Asus UL30VT-X1 Ram Replacement

This guide will help users replace a defective Ram in your Asus UL30VT-X1.

Written By: antonio robledo



INTRODUCTION

This guide will show the steps to take out and replace a defective Ram for the Asus UL30VT-X1.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Ram




- Flip the laptop over onto the back.

Step 2

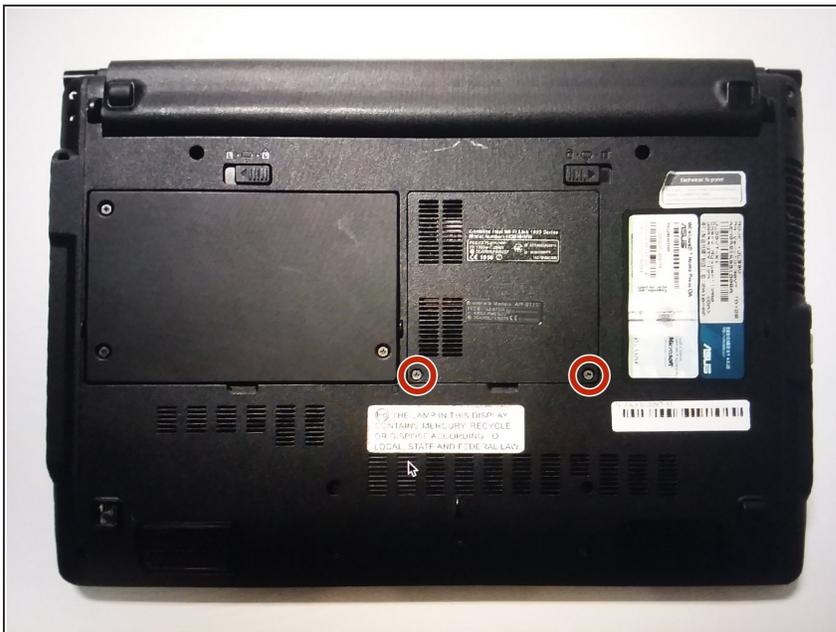



- Locate the two screws on the ram panel.
- Unscrew the two screws using a Phillips Head #00 screwdriver.

Step 3

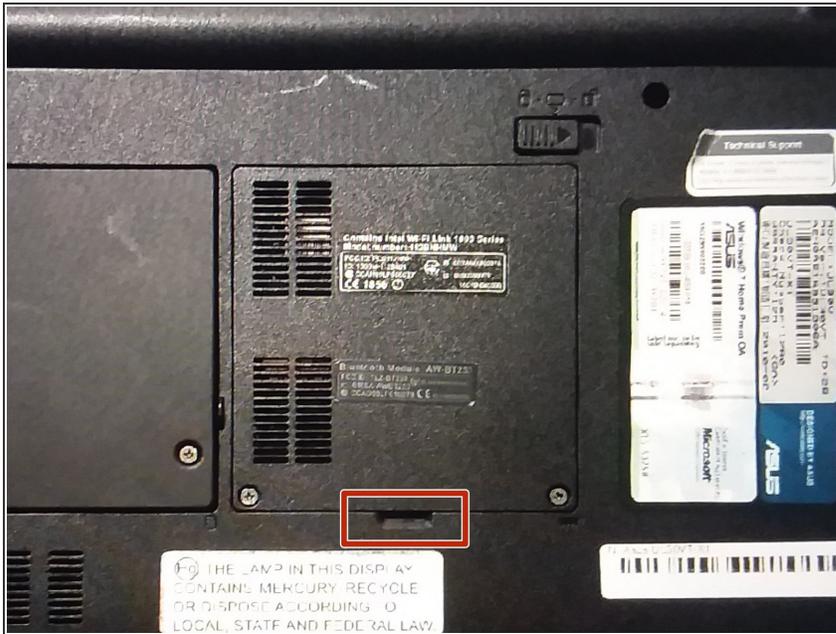

- Locate the small cut out at the bottom of the ram panel.
- Lift the ram panel up with your finger and remove it to expose the ram.

Step 4

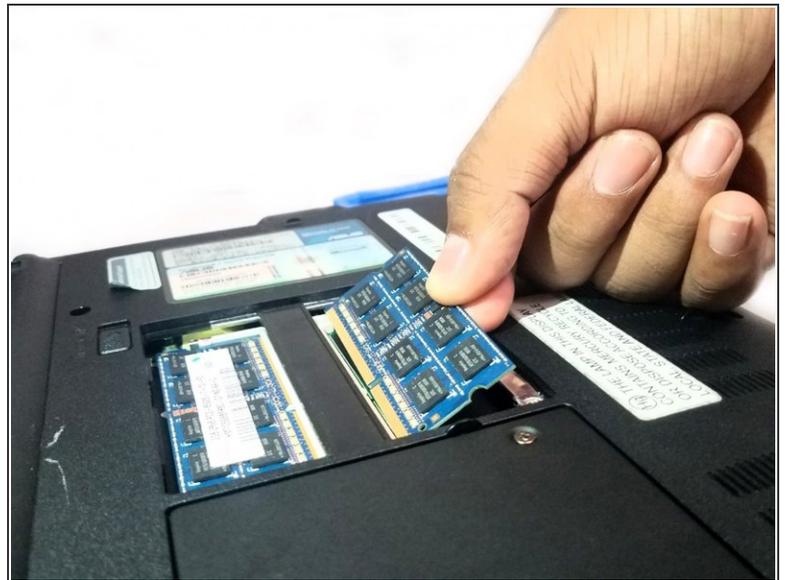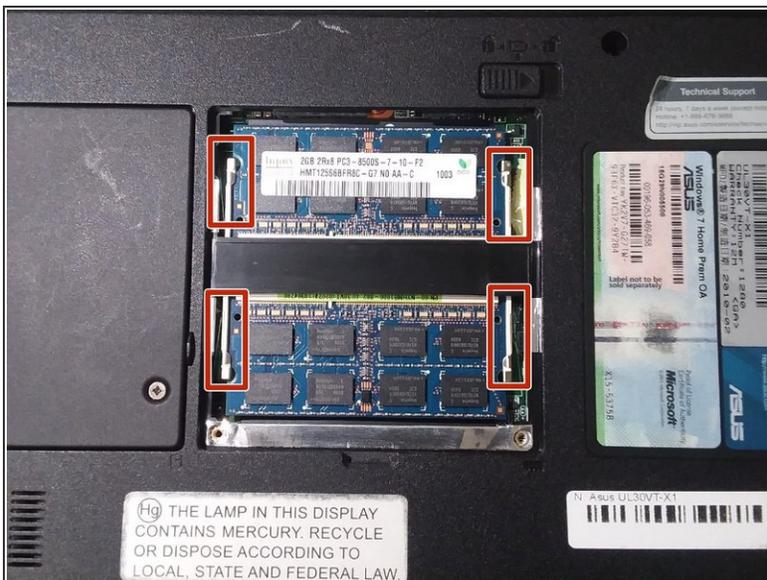

- locate the white clips on the sides of the ram.
- Push the white clips to the side so the ram pops out
- Afterword use your fingers to pull the ram towards you.

To reassemble your device, follow these instructions in reverse order.