




HP G62-144DX Keyboard Replacement

This guide will show you how to replace the keyboard on the HP G62-144DX.

Written By: Cameron Moran

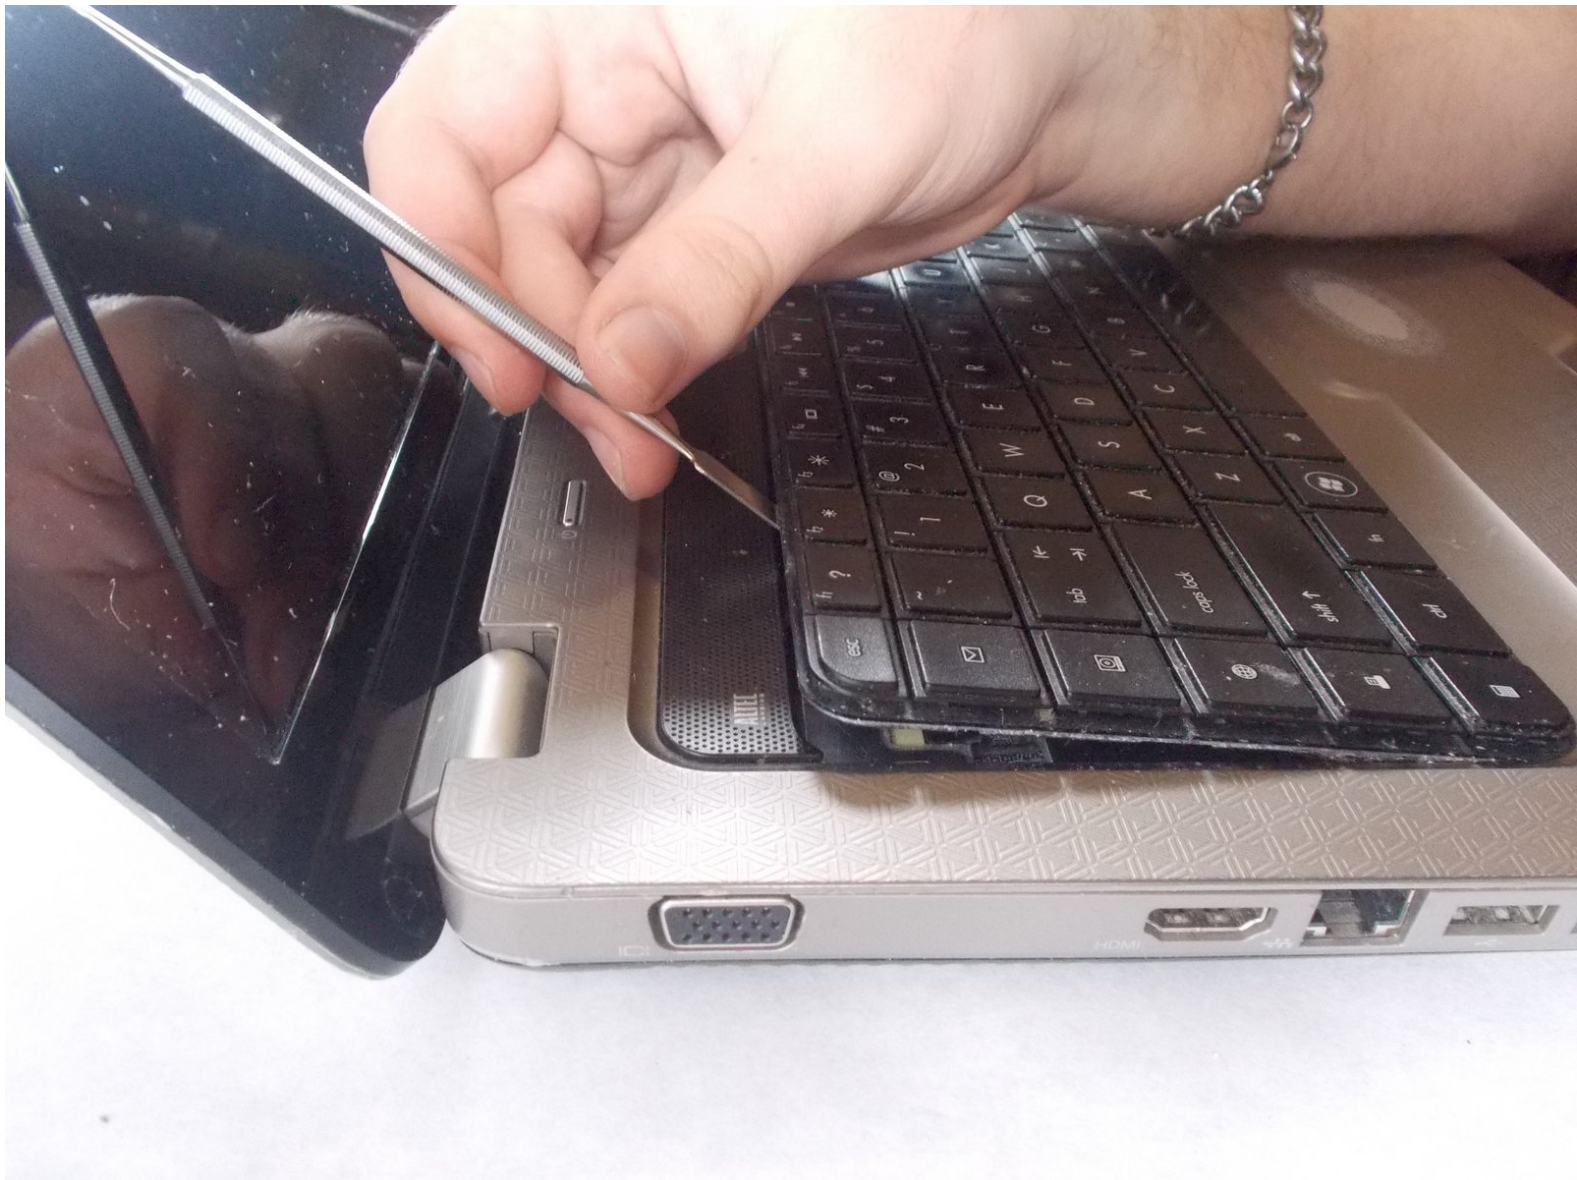

INTRODUCTION


The keyboard may not be working for a variety of reasons and may need to be replaced.



TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

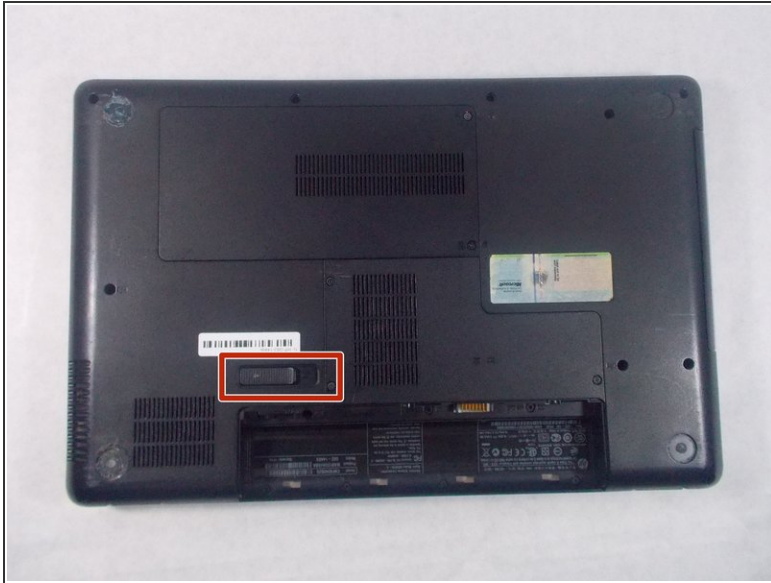

 Make sure to turn off the laptop before removing the battery.

- Slide the lock to the right, located slightly above the battery location.
- While pulling the lock, pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.

Step 2 — Keyboard




- Remove the 3 Phillips 2.5x5 screws (closest to the battery slot) and the 2 Phillips 2.5x6.5 screws with a Phillips #1 screwdriver.
- ⓘ This screws will have a keyboard symbol inscribed next to them.

Step 3





- Use the Phillips # 1 screwdriver to unscrew the 2.5x6 Phillips screws holding the L-shaped back panel.
- ⓘ Screws should stay in panel, but come free of the laptop body.
- Gently use a plastic opening tool to remove the panel.

Step 4

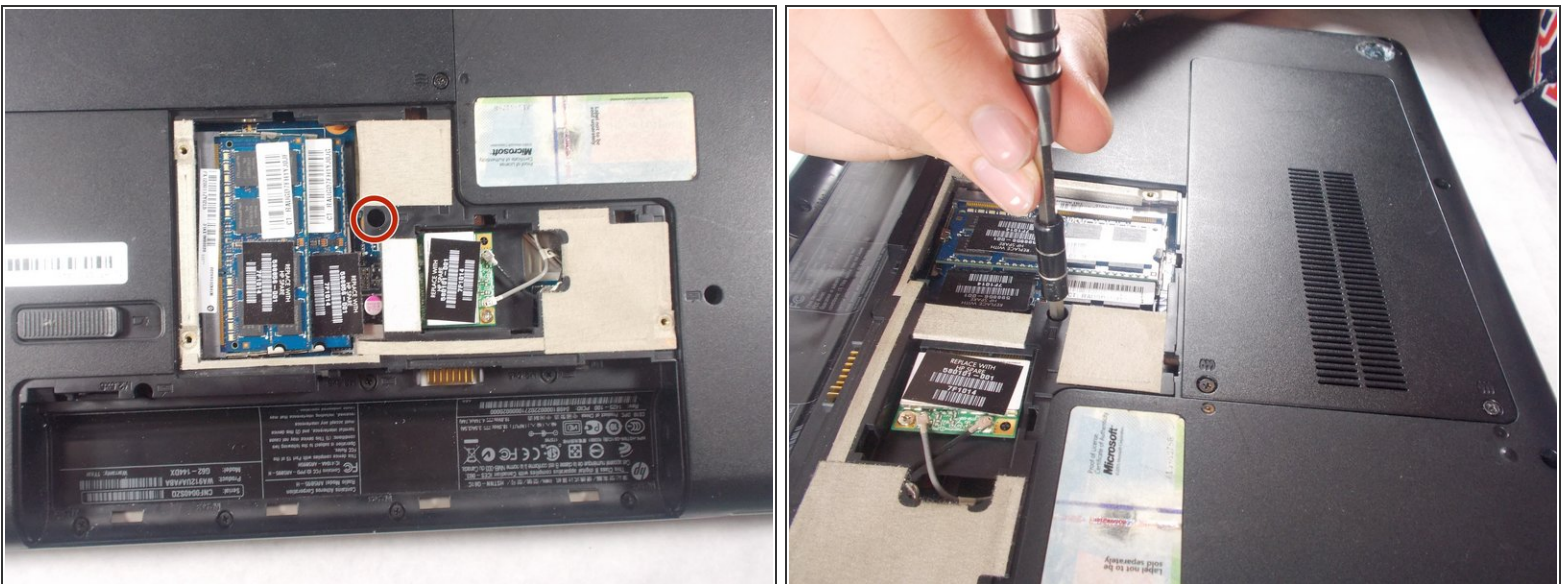



- Unscrew the final Phillips 2.5x5 keyboard screw with a Phillips #1 screwdriver.

Step 5

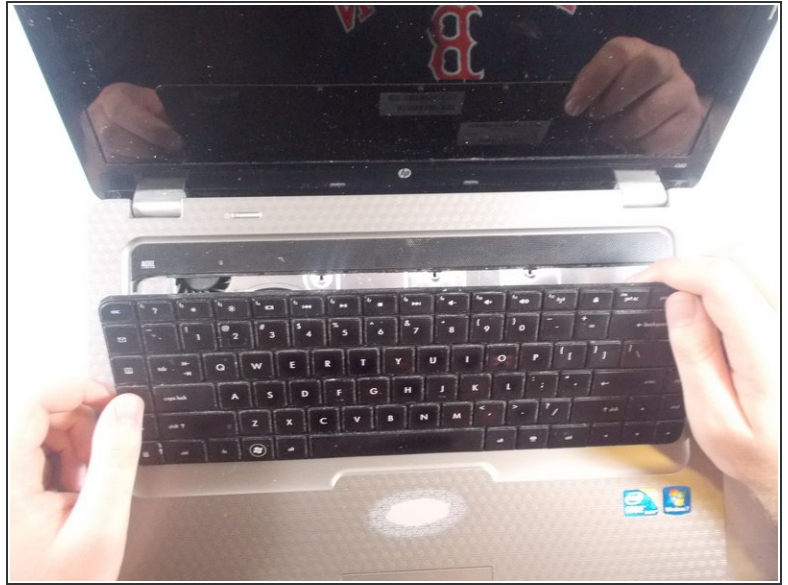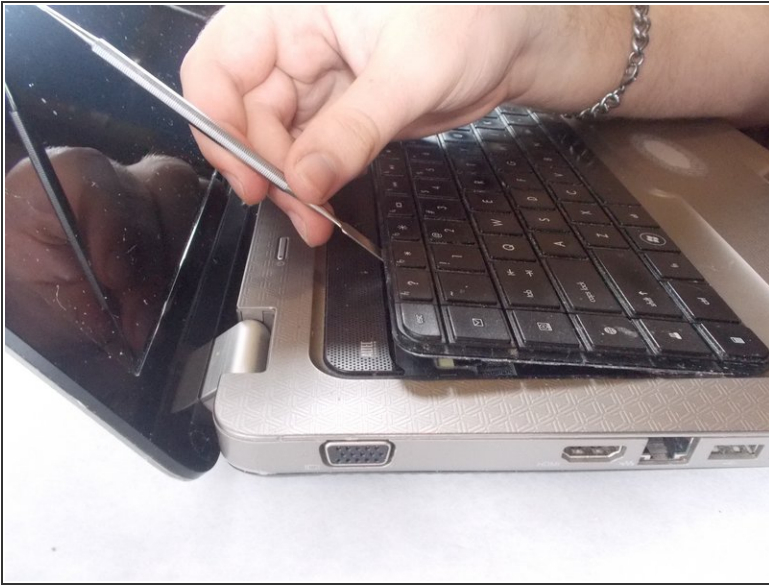

- Flip the laptop so the top is facing up again and open the cover.
- Use a metal spudger to pry the keyboard up and pull it back.
- ⓘ Be sure to pry up the board itself and not an individual key.
- ⚠ This process has the risk of breaking keys.

Step 6

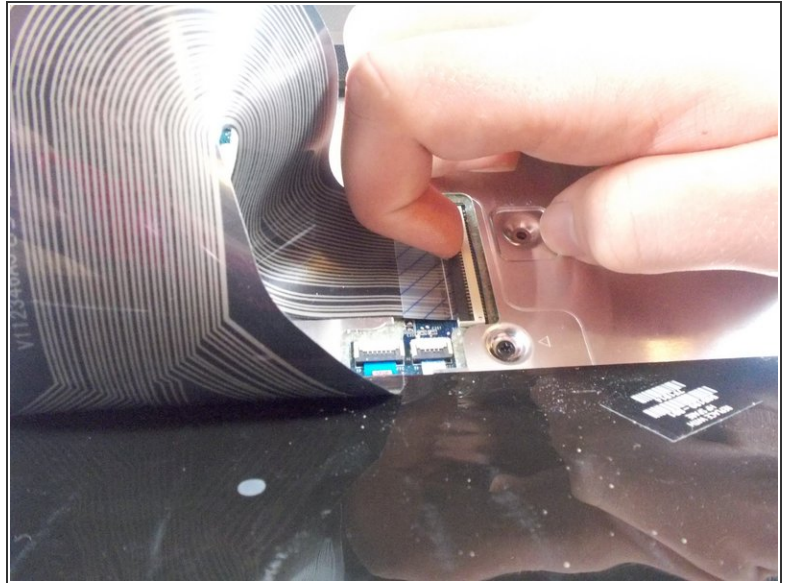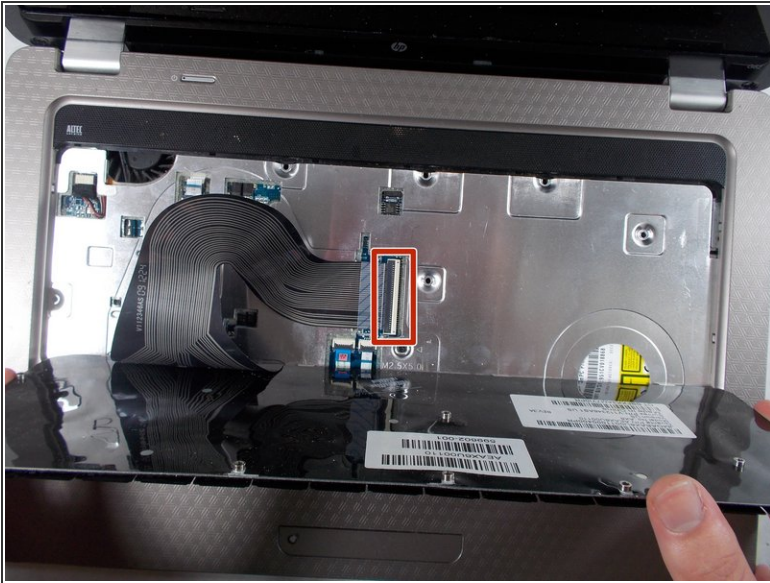

- Pull up the latch that connects the keyboard connector the the motherboard.

To reassemble your device, follow these instructions in reverse order.