



iDeaUSA CT8 Power Button Replacement

In cases where the Power Button gets stuck, this guide will help you how to adjust or replace it.

Written By: Daniel Sevilla



INTRODUCTION


This is where you learn how to replace a power button.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Power Button

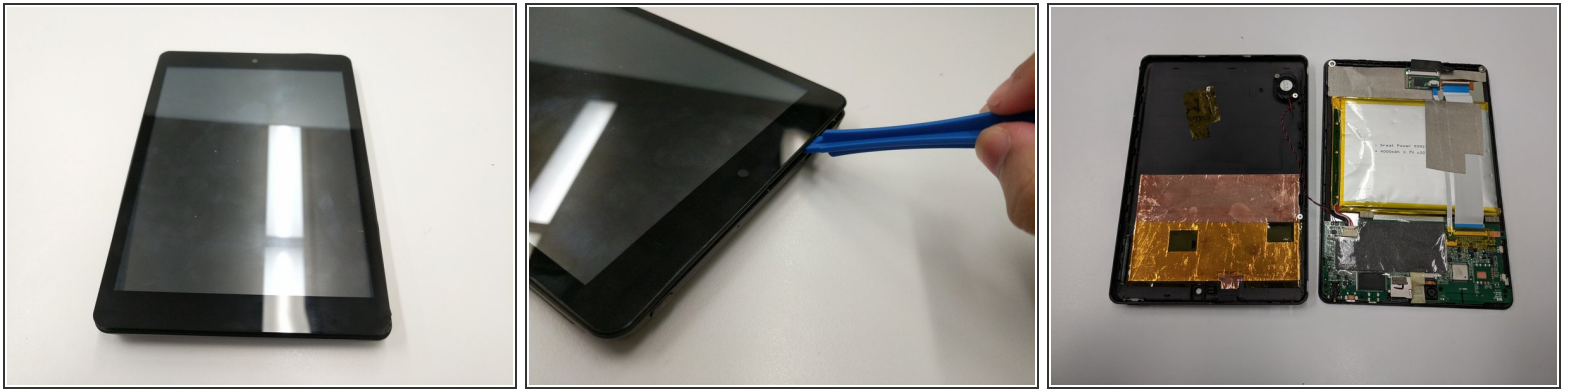


- Place the tablet on a flat surface, facing upwards.
- Starting from the portholes, use the plastic opening tools to remove the back cover of the tablet from the top half.
- Being cautious of the wire connecting the speaker and the motherboard, place the front and back portion of the tablet close in proximity.

Step 2



- On the tablet's back cover, locate the power button.
- Use tweezers to remove button's padding that holds it in place.

Step 3

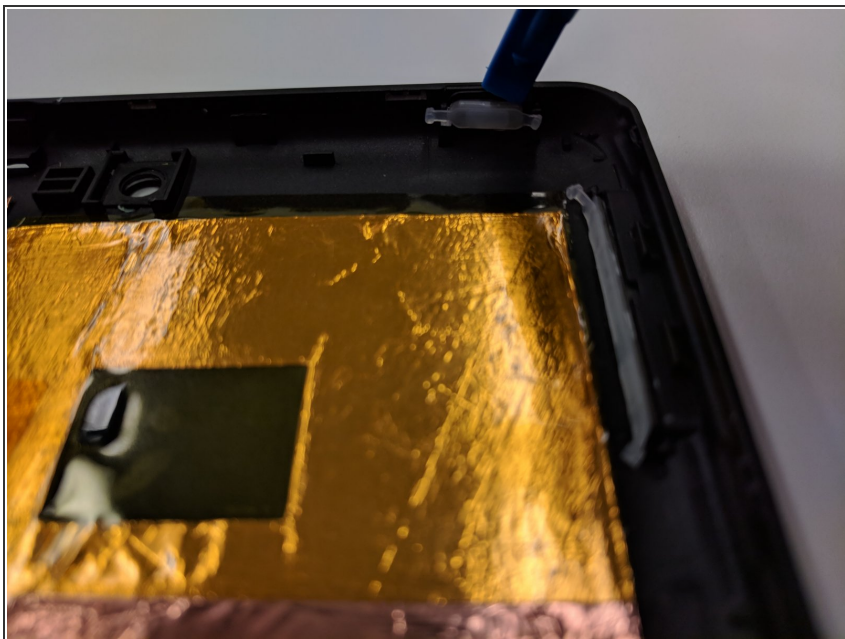

- To remove the power button, use a plastic opening tool to nudge the button out of position.
- A gentle push from the button's exterior side should be enough.

Step 4



- The power button is now removed. Adjust accordingly or replace it

To reassemble your device, follow these instructions in reverse order.