




Asus Q534U Battery Replacement

Use this guide to replace the battery of the Asus Q534U.

Written By: mmedina

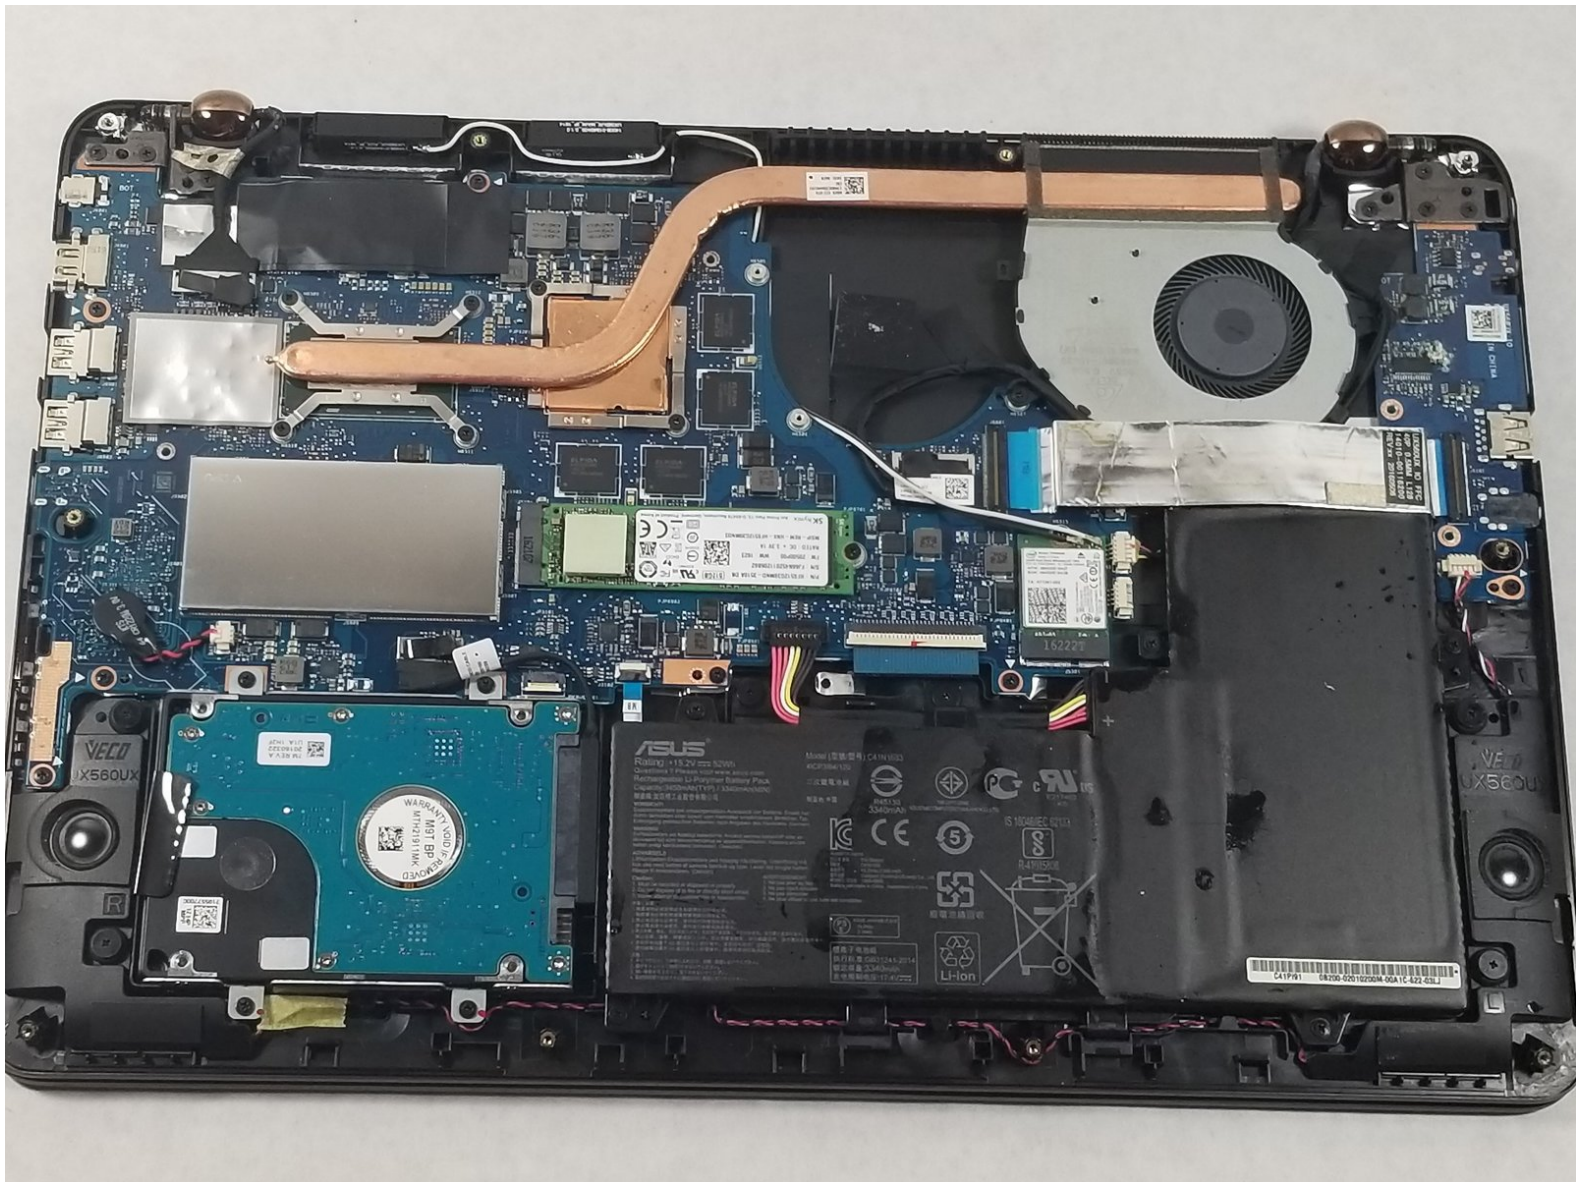

INTRODUCTION

This guide covers the process of replacing a worn-down or faulty battery in the Asus Q534U laptop computer.

Laptop batteries degrade with use, so if your laptop fails to hold a sufficient charge and has a high charge cycle count, you may be able to restore your computer by replacing the battery.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-



Step 1 — Back Case Removal



⚠ Make sure the device is turned off and unplugged from the charger.



- Use a T5 screwdriver to remove all 10 screws that secure the bottom cover.
- Pull off the back cover of the laptop.
 - i** A pry tool may be needed to pull off the back cover.

Step 2

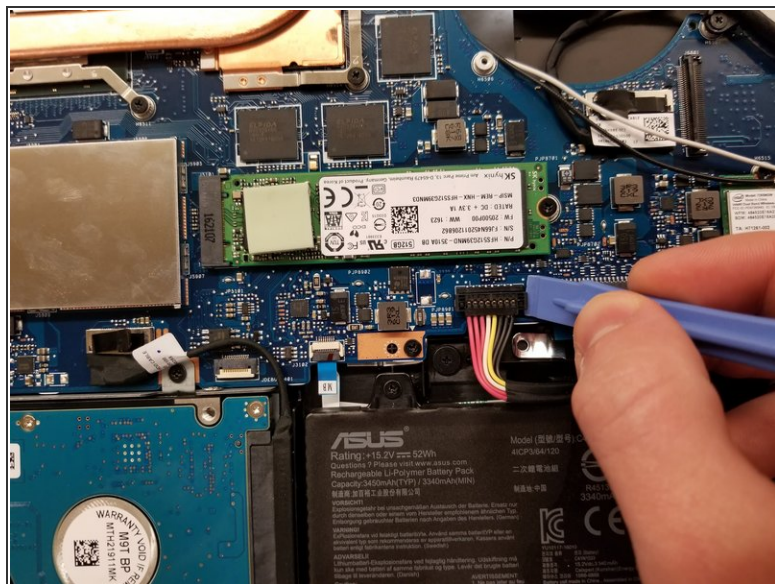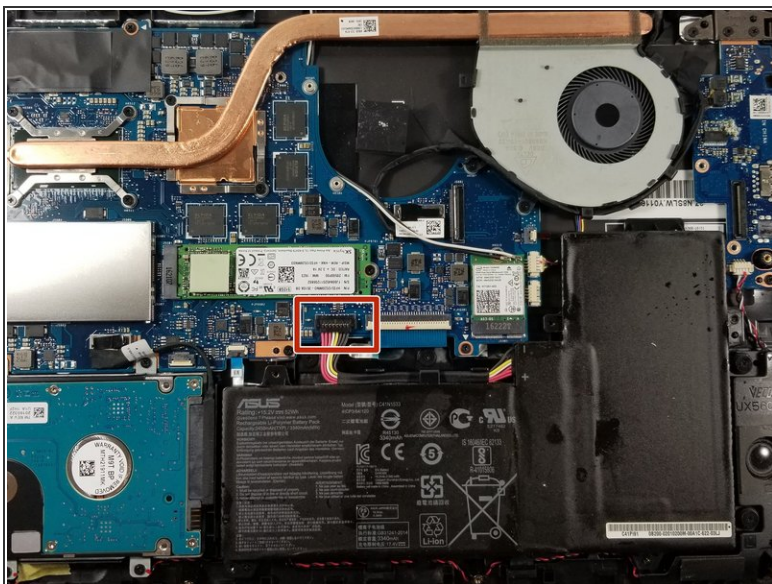

- Wedge an opening tool under the battery's bundled cable connector, and gently pry the connector up and to disconnect the battery.

Step 3

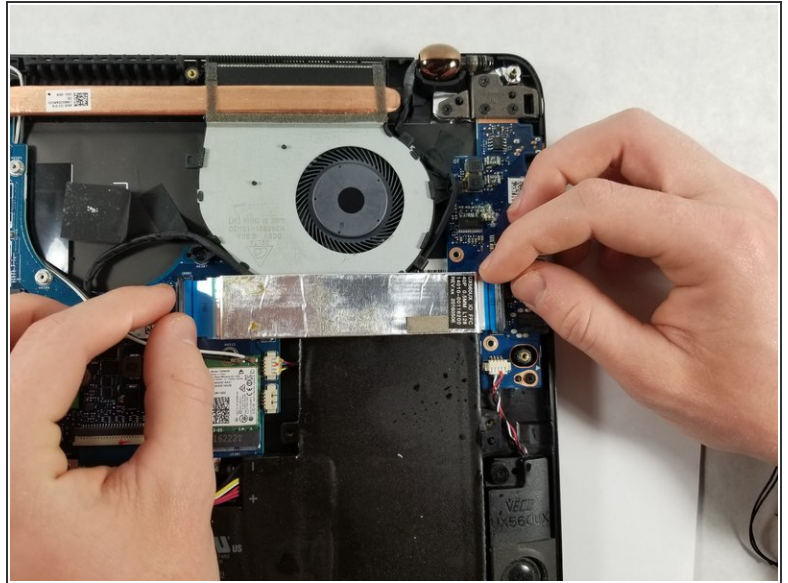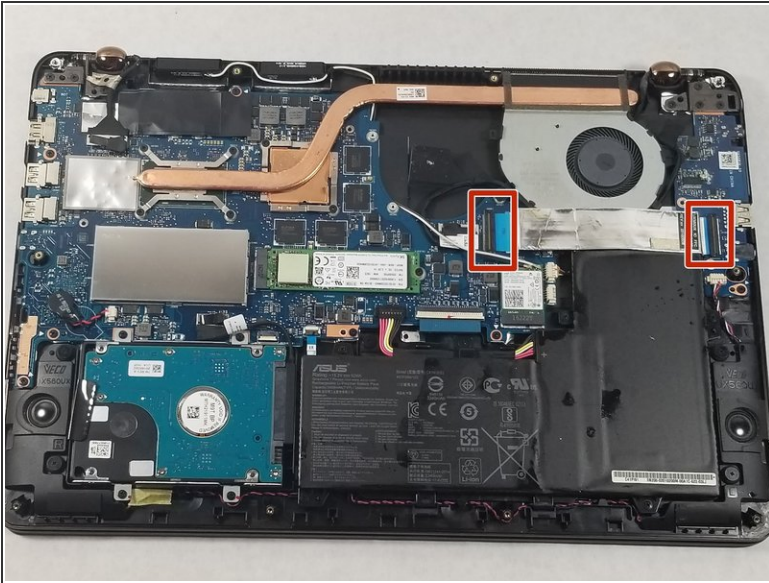

- Lift up the black tab next to the silver ribbon cable.
- Pull lightly on the blue tabs until the silver cable is free.

Step 4



- Use a Phillips #00 screwdriver to remove the 5 marked screws.
 - Gently remove the battery.
- ⚠ Do not bend or puncture the laptop's lithium-polymer battery.

To reassemble your device, follow these instructions in reverse order.