

Acer Aspire V5-552PG-X469 RAM Replacement

In this guide the back cover, and RAM card will...

Written By: Noah lishman



INTRODUCTION

In this guide the back cover, and RAM card will be removed so that a new RAM card can be inserted.



JIS #0 Screwdriver (1)

Step 1 — Back Case



 Remove the storage tray on the left edge of the device.

Step 2



 Use a Phillips #0 screwdriver to remove seventeen 7mm screws from the lower case.

Step 3



• Lift up the back case to remove it.


Step 4 — RAM





• Locate the RAM slot and push outwards on the metal tabs to release the RAM card.

Step 5

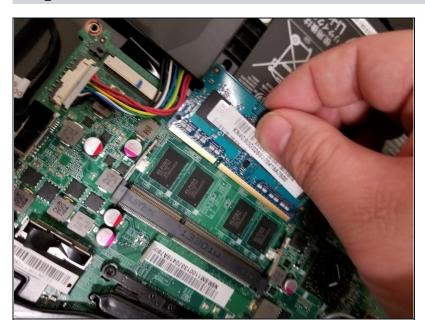

 Carefully slide the RAM card out of its slot, and insert the replacement card

To reassemble your device, follow these instructions in reverse order.