


Dell Inspiron 15-5548 Keyboard Replacement

This repair guide will show you how to replace...

Written By: Hunter Oliver

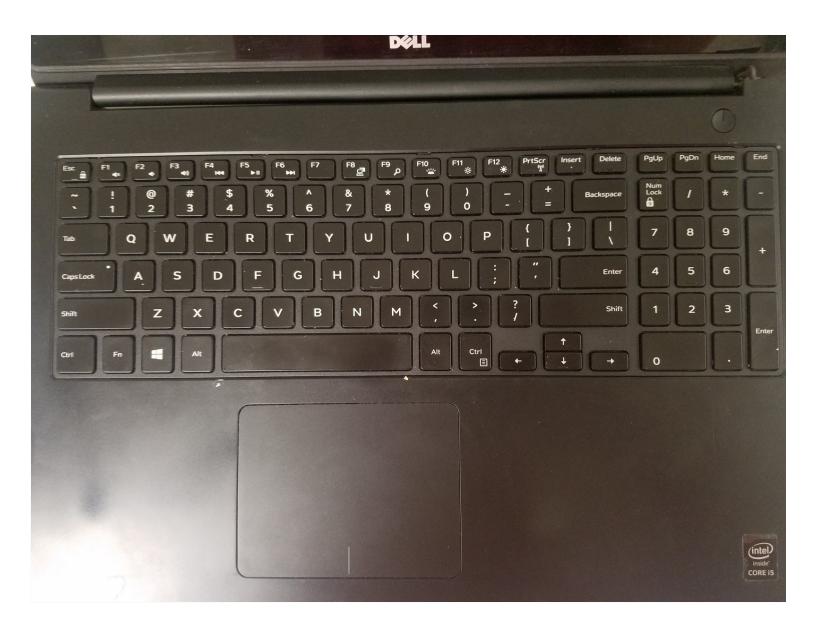

INTRODUCTION

This repair guide will show you how to replace the keyboard on your Dell Inspiron 15-5548 laptop. The keyboard is a critical part of your laptop, and whether you have broken keys or if the whole keyboard is nonfunctional, this repair guide will show you how to replace the keyboard with a new one.

However, if the problem is stuck keys, you should first attempt to make them unstuck. This can be accomplished by sliding a thin object, like a flat head screwdriver, under the groove to push the built up dust away and restore the key's functionality. Additionally, a dust blower may remove the buildup.

If after trying these steps, the keyboard still isn't working, then you should proceed with the repair. This repair guide is intended for people who are comfortable working with simple tools and who have some basic knowledge of electronics. Once you have powered off the device and unplugged the laptop from the charger, you can begin the repair.



TOOLS:

Spatule en métal (1)



PARTS:

Dell Inspiron Keyboard - V9F14 (1)
Dell Inspiron Keyboard - K8X85 (1)

Step 1 — Keyboard







- Open up the front of the laptop.
- Locate the 5 holes at the top of the keyboard, as circled in Picture 2.
- Use the metal spudger to pry up the keyboard at each of the 5 points.
 - i This may take some extra force, and it should pop when it is pried off.

Step 2







- When all the points have been pried up, gently lift the keyboard.
- Lift the ZIF tabs holding down the two ribbon cables, and gently remove them.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.