

Panasonic ES2207P Motor Replacement

Removal and replacement of the motor.

Written By: Kevin Marvell



INTRODUCTION


Motors may burn out or the eccentric may break/disappear. This is how to replace the motor.



TOOLS:


- Phillips #0 Screwdriver (1)
- Spudger (1)

Step 1 — Battery

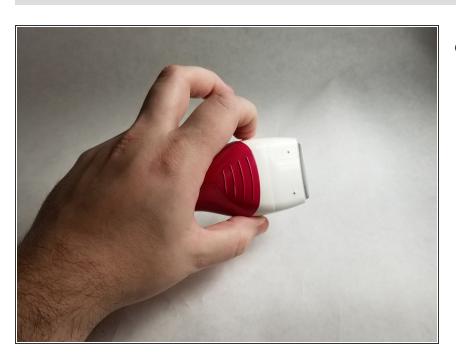

Remove foil head and blades.

Step 2

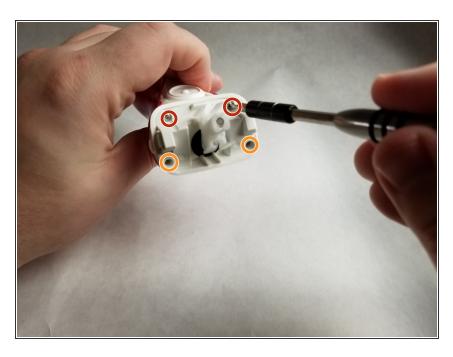

- Remove (2) 7.9mm Phillips #0 screws.
- Remove (2) 14.3mm Phillips #0 screws.



 Push the blade mount assembly towards the rear of razor and remove.

Step 4



- i Be careful not to break any tabs that hold the panels to the body.
 - Remove both external panels using spudger if necessary.




 Remove (2) 7.9mm Phillips #0 screws.

Step 6



- This step may require a fair amount of force due to the O-ring.
- Pull to separate the end-cap from the body.

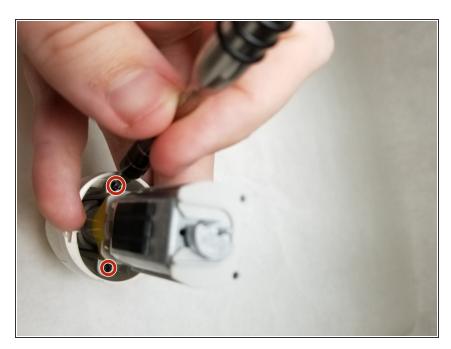

 Remove (2) 7.9mm Phillips #0 screws and remove endcap from frame.


Step 8






Push forward on the lower terminal to remove the battery from the frame.


Step 9 — Motor

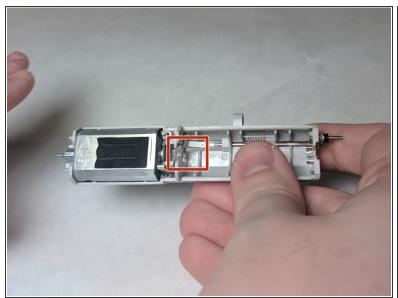

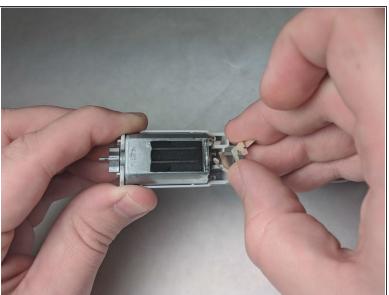

Remove battery contact.

Step 10

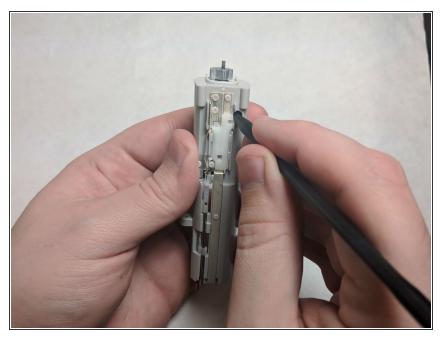

 Using pointed end of spudger, push on the motor through the hole in the back



 Use your fingers to finish removing motor from frame.

To reassemble your device, follow these instructions in reverse order.