



Lenovo G50-80 80E5 Removing top panel Replacement

Written By: Victor



TOOLS:

Tournevis cruciforme #00 (1)

Pincettes de précision (1)

Step 1 — Battery



- Place laptop on a flat surface with the back cover facing up and the hinges facing you.

Step 2



- Slide the tab positioned on the right side to the right.

 You will know this has been done correctly when you can see the red surface beneath the tab.

Step 3




- Move the left tab to the left to release the battery.
- You will hear an audible 'click' and see the battery separate from the rest of the laptop.

Step 4




- Hold the battery at the top seam between it and the laptop.
- Roll the battery towards yourself.
- Lift the battery out of the laptop.

Step 5 — Bottom Access Panel

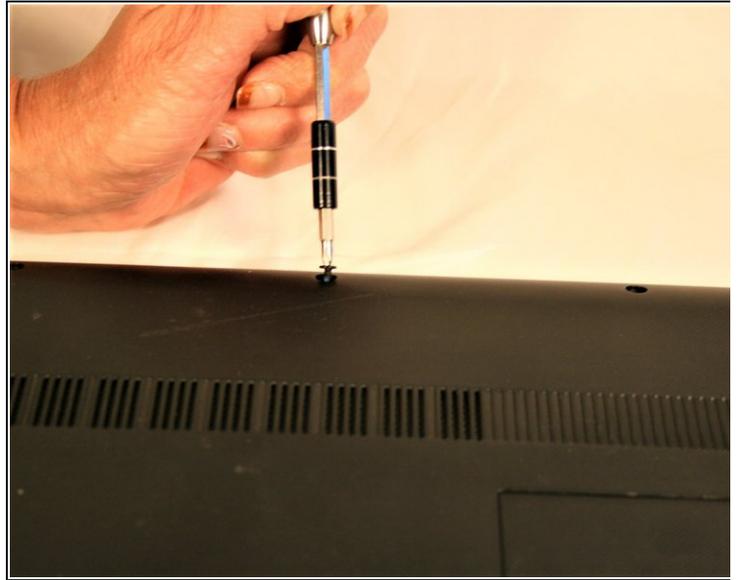


- Remove the three screws securing the outer cover of the laptop using a Phillips #0 screwdriver.

Step 6

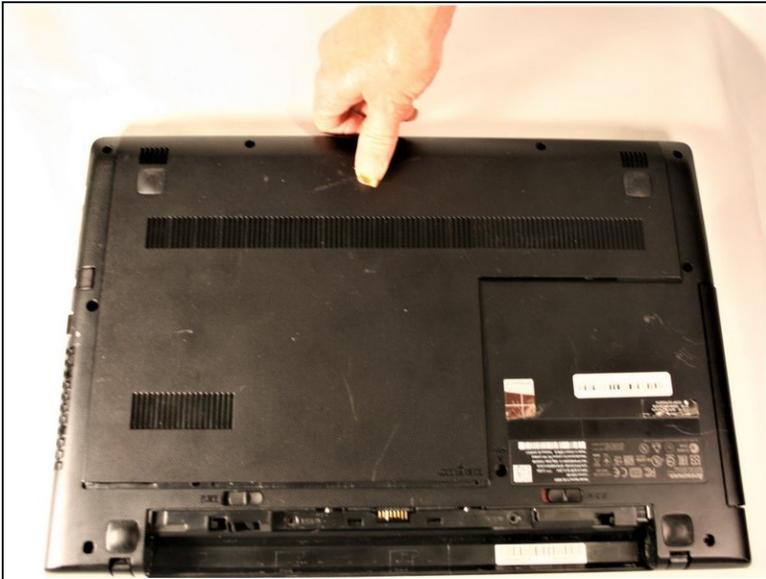


- Slide the cover away from the hinges and lift the panel off.

Step 7 — Keyboard

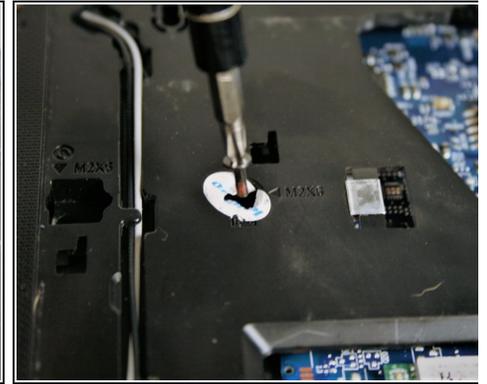


- Locate the 3 screws on the bottom, securing the keyboard.
- One Screw will be located under Lenovo sticker. Break sticker to gain access to screw.

Step 8

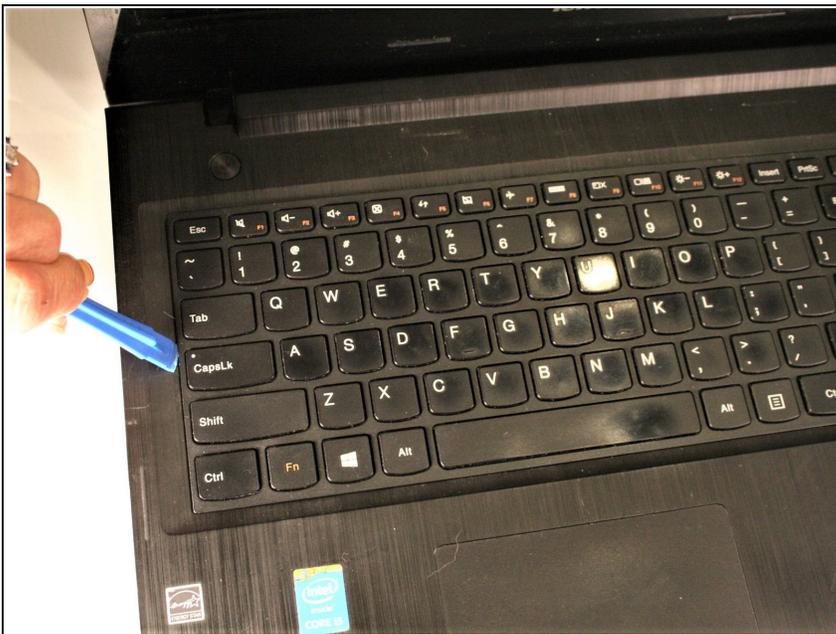


- Starting on side, gently pry up using spudger.

Step 9

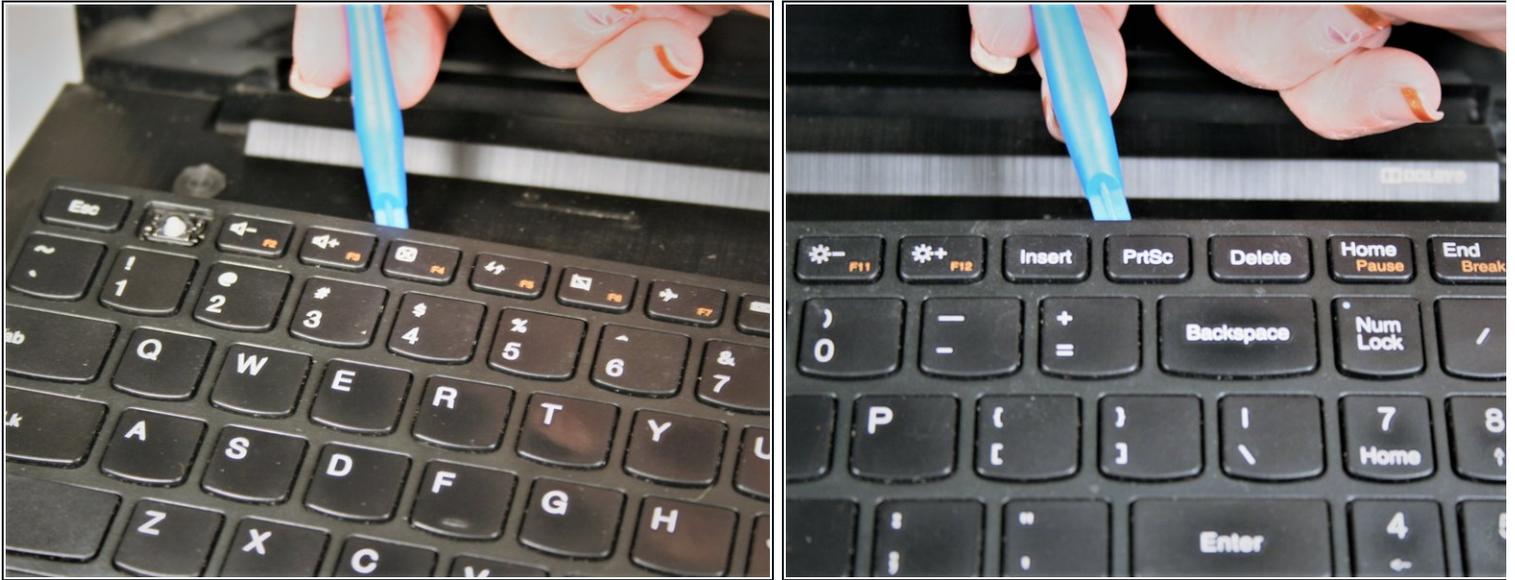


- Continue prying around top of keyboard

Step 10

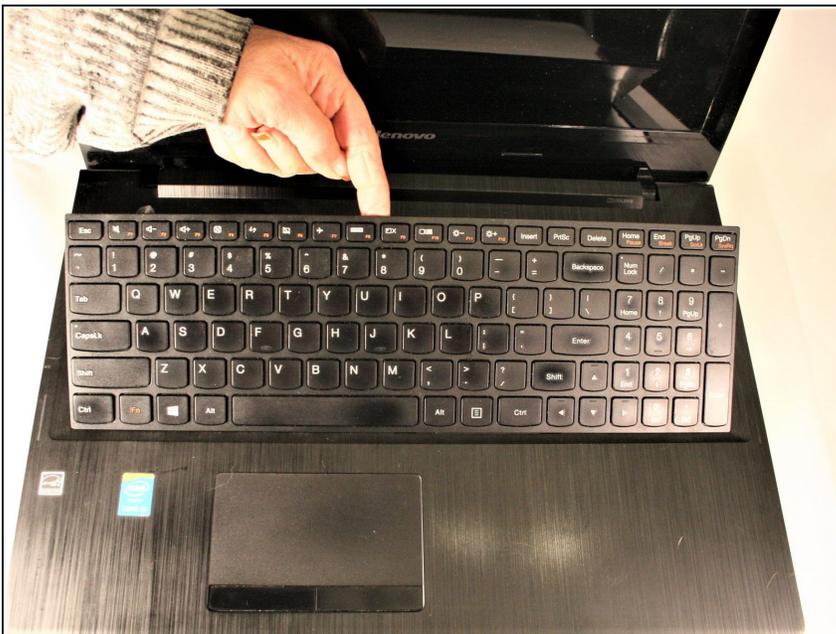


- Once the top of keyboard is loose, gently lift up

Step 11

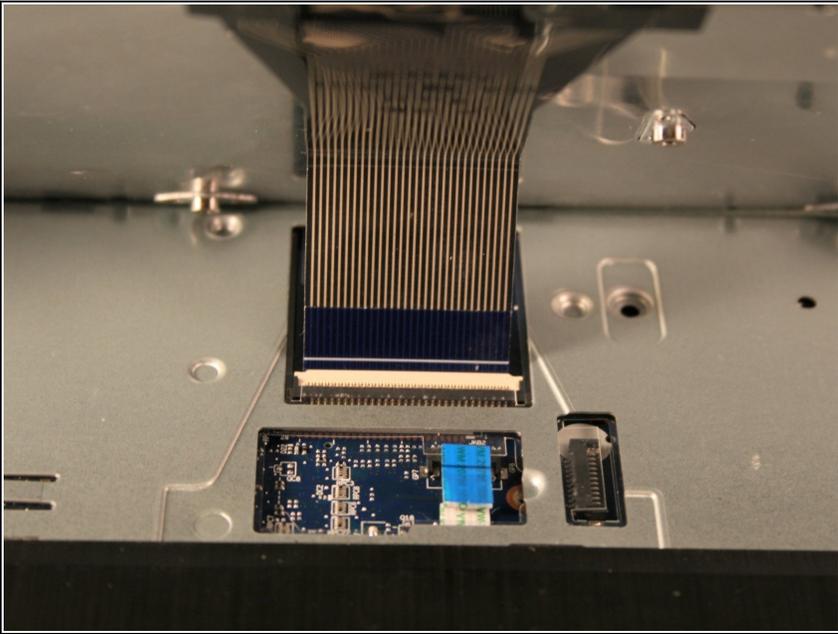


- lift up bottom of keyboard slightly, to access keyboard ribbon

Step 12

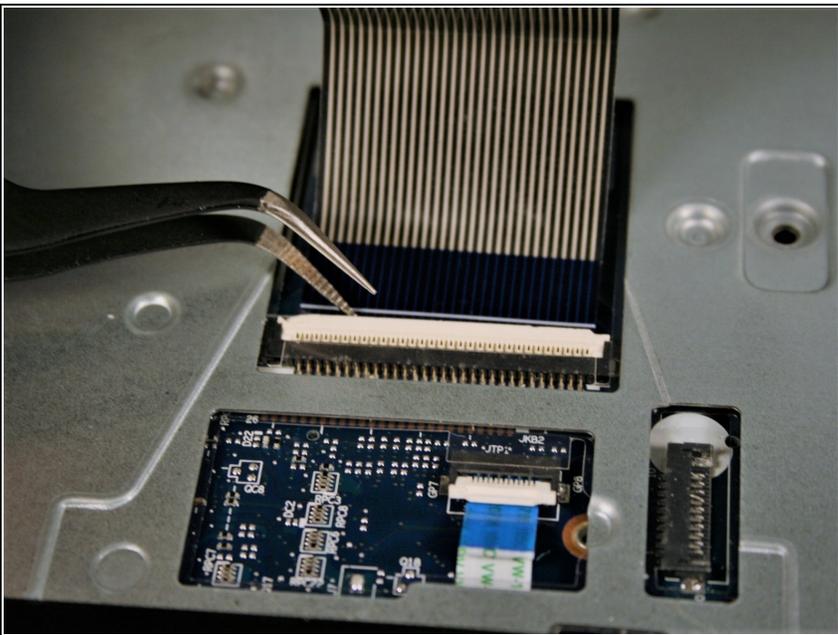

- Using tweezers, lift up clip to remove keyboard ribbon cable.

Step 13

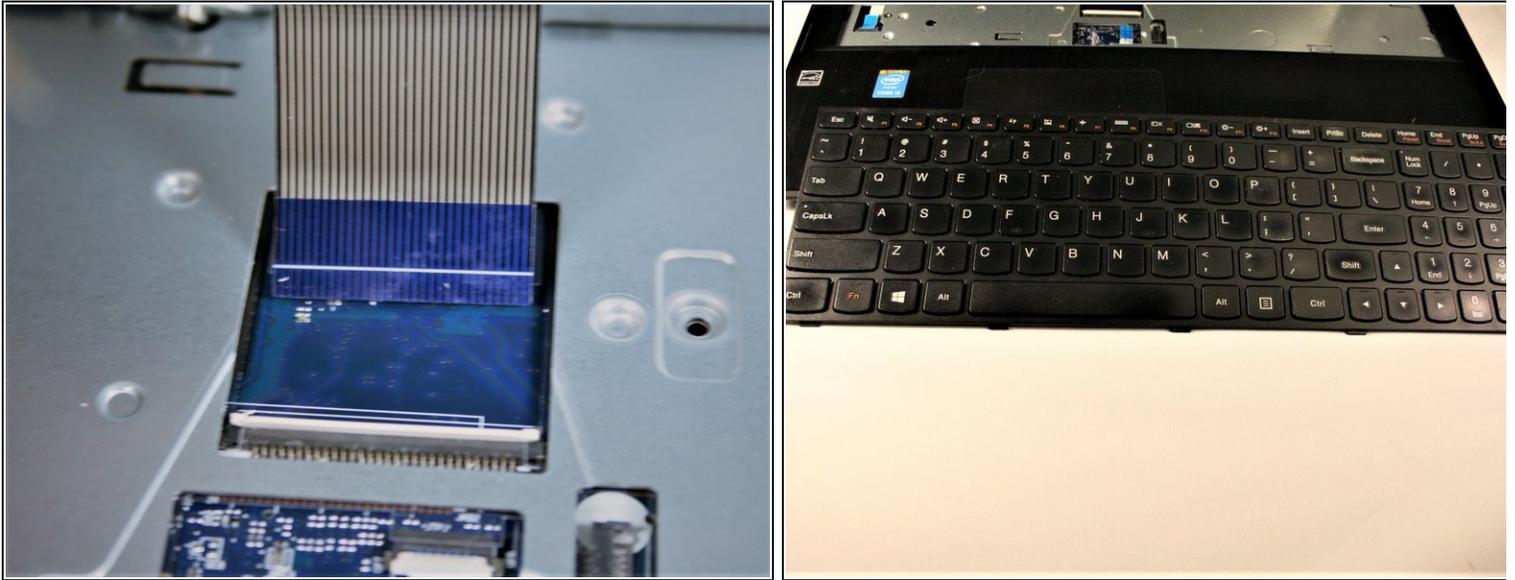


- Keyboard ribbon cable removed
- Once ribbon is removed, keyboard can be lifted out

Step 14 — Removing top panel




- Remove wifi wires by lifting up

Step 15

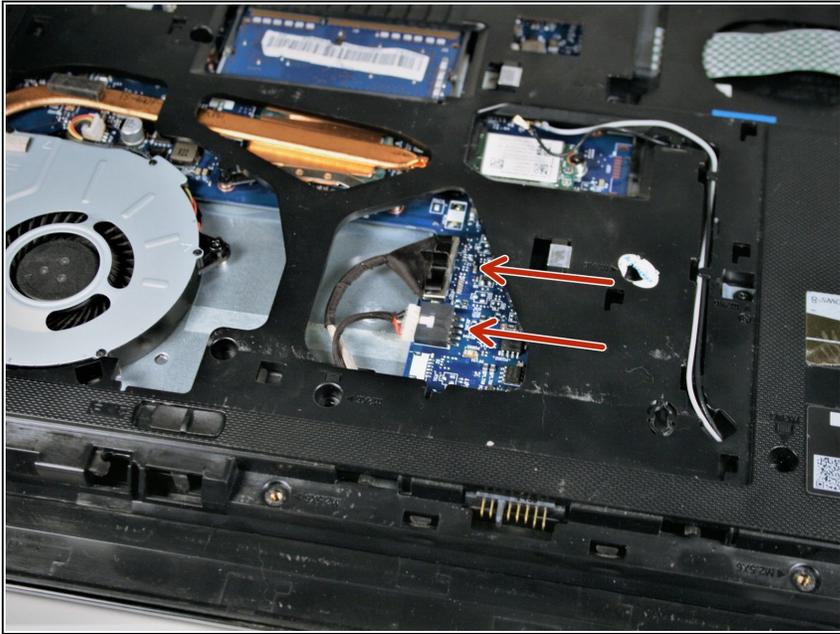


- locate power and monitor cable on bottom side next to fan

Step 16

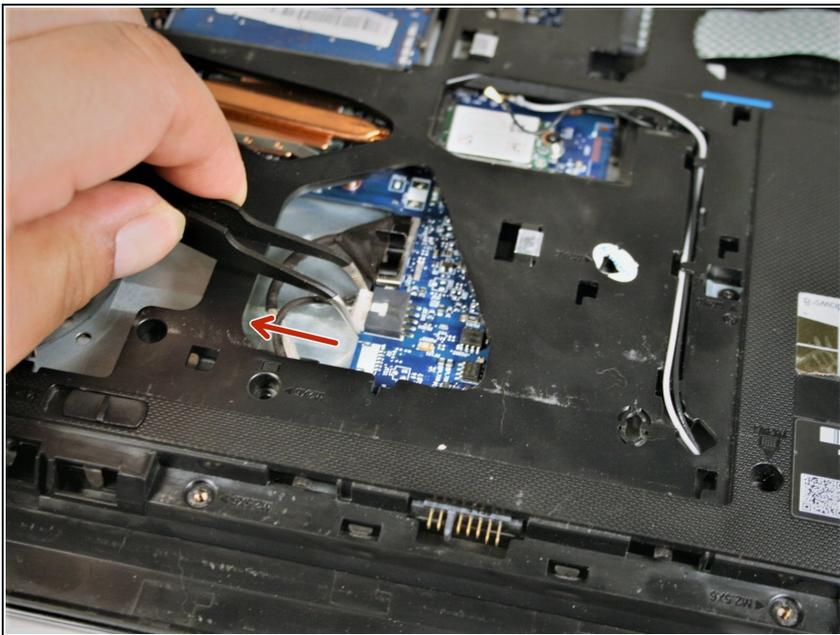


- remove power cable with tweezers by gently pulling

Step 17

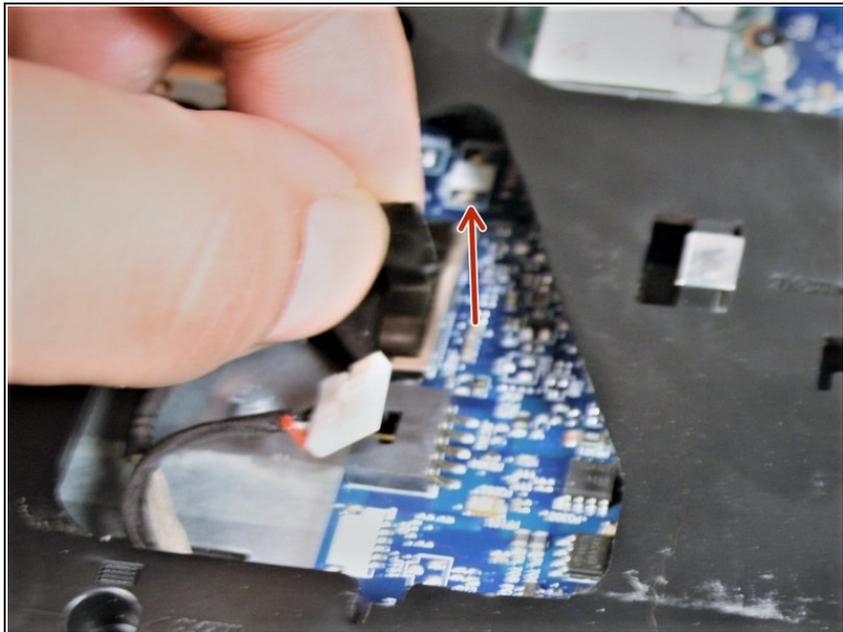


- remove monitor cable by gently pulling on tab straight up

Step 18

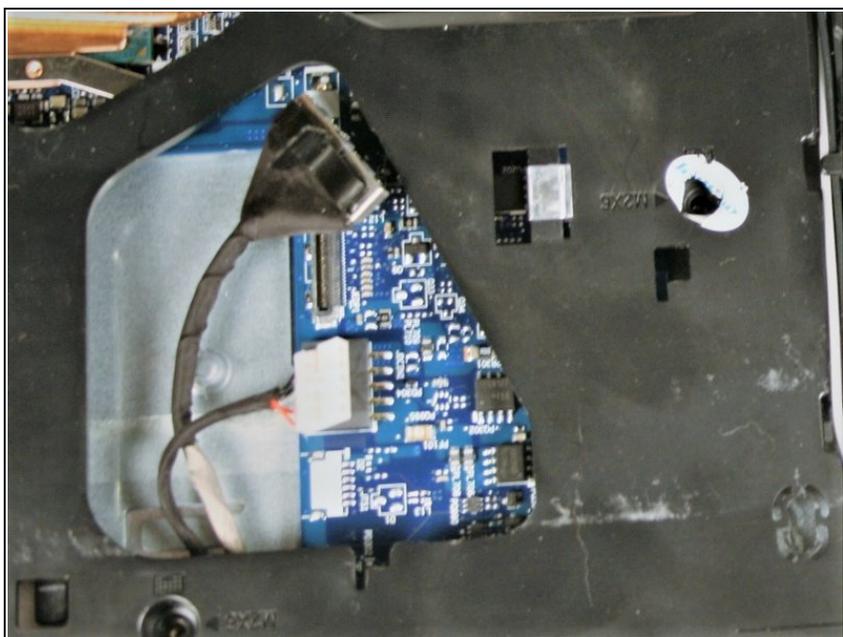



- Monitor and power cable disconnected

Step 19

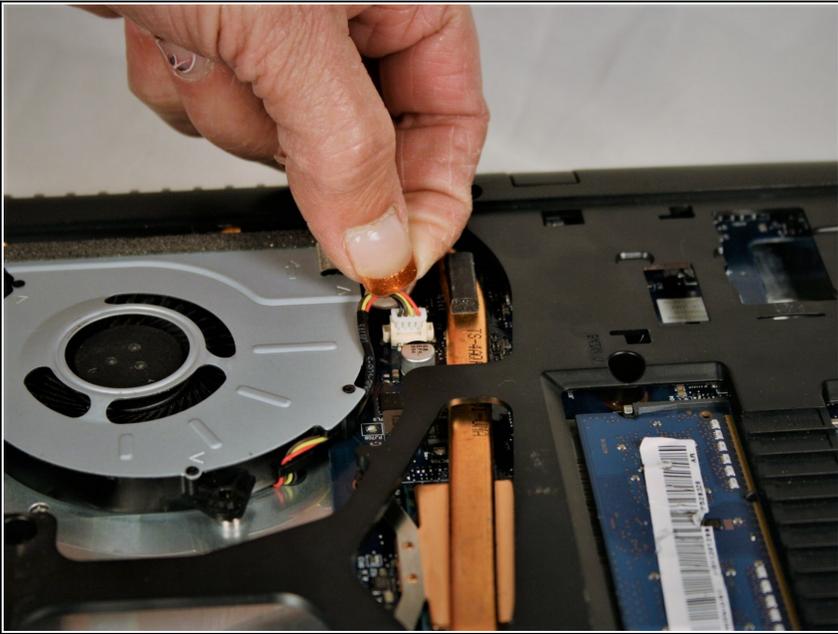

- Disconnect the fan wires from the motherboard by lifting upwards

Step 20

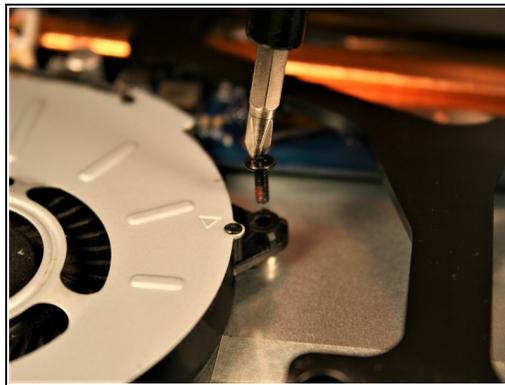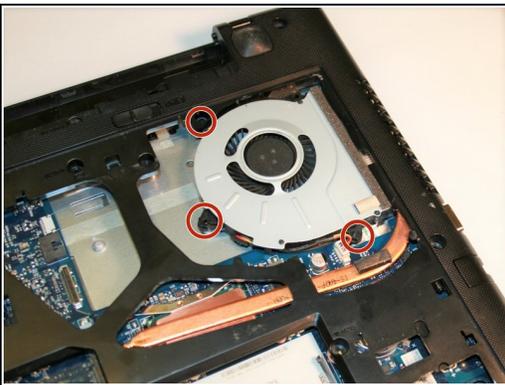



- Locate the 3 screws holding fan in place
- Remove 3 screws
- fan should lift out of place

Step 21



- lift clip to remove ribbon cable for think pad.

Step 22

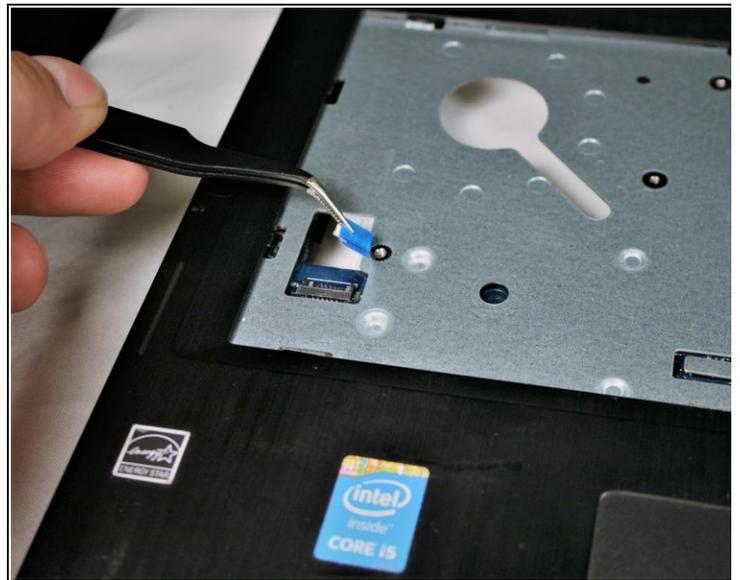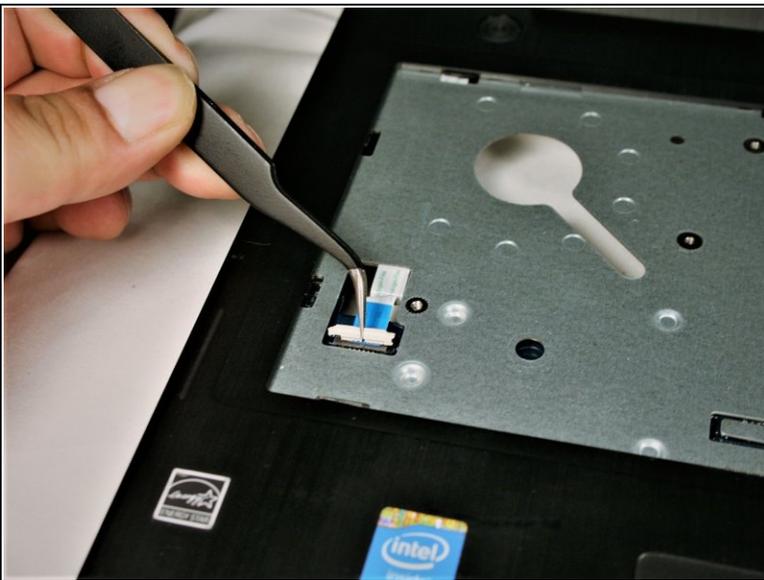


- lift clip to remove power button ribbon cable.

Step 23




- Begin by locating screws on bottom panel

Step 24

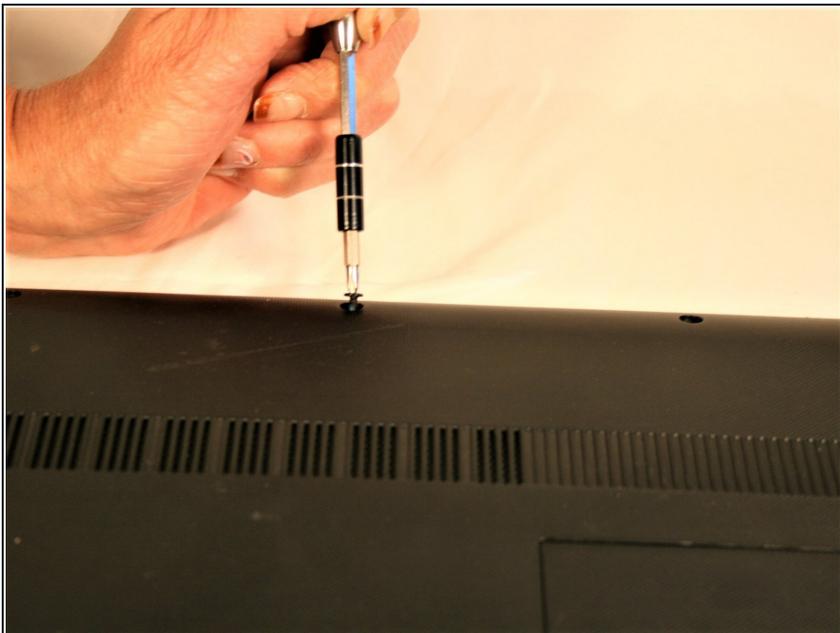


- Remove screws using a 001 phillips screw driver.

Step 25

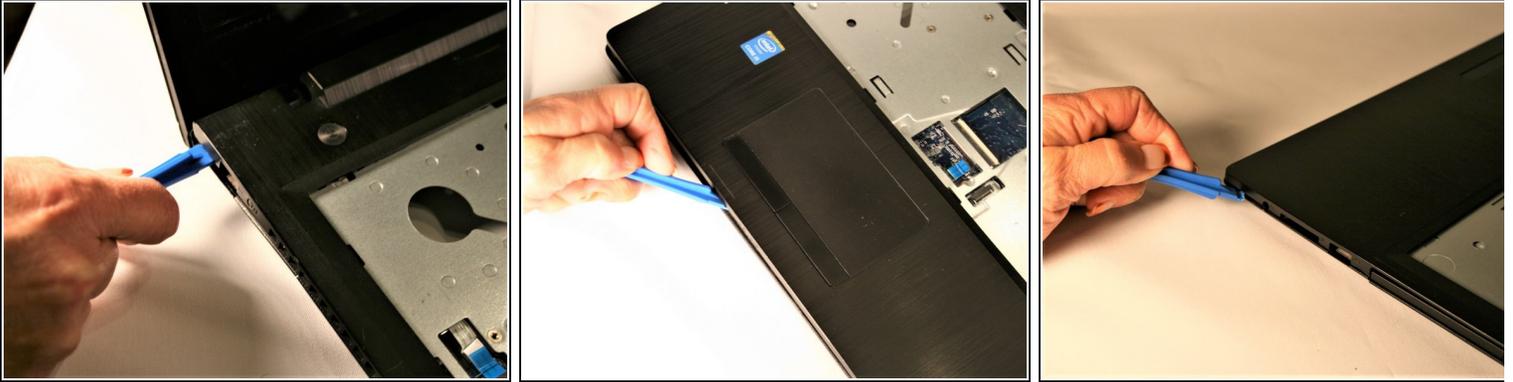

- Once screws are removed, begin by gently prying up in one corner using a spudger
- Continue to center and then around to opposite side.
- once all sides have been pried open, lift top half off

Step 26

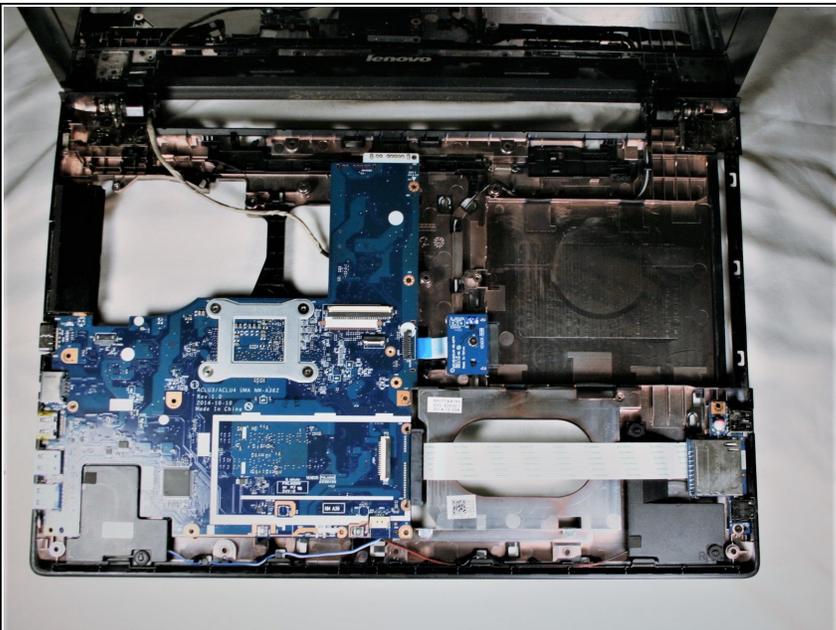

- Top cover removed

To reassemble your device, follow these instructions in reverse order.