



Acer Chromebook CB5-571-C5XU Battery Replacement

The battery supplies power to the laptop. The...

Written By: Kenneth Bowers



INTRODUCTION

The battery supplies power to the laptop. The battery may need to be replaced if the laptop is a few years old, as batteries will start to lose their life after being used for a few years.

TOOLS:

Phillips #0 Screwdriver (1)

Spudger (1)

iFixit Opening Tool (1)


Step 1 — Bottom Case



- Remove the following eighteen screws using a Phillips #0 screwdriver.


 Make sure the Chromebook is unplugged and shut down, so no files are lost and there is no risk of electrocution.

Step 2

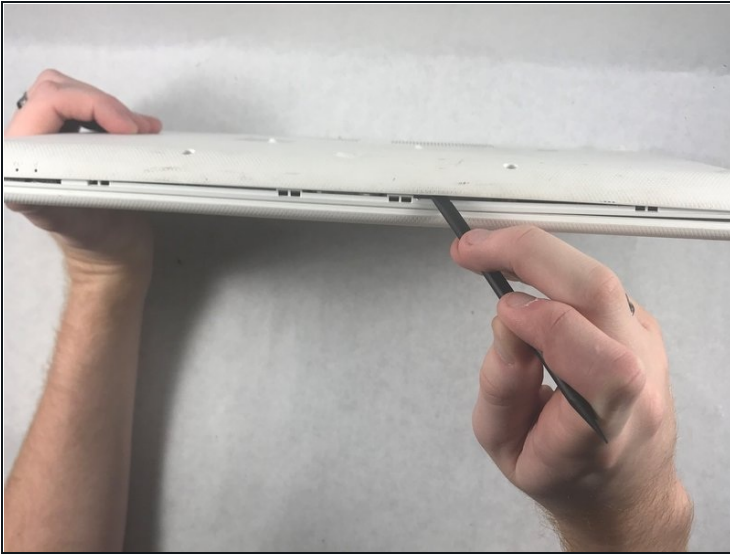


- Using the flat side of the spudger, pry open the bottom case of the laptop.
- ① Working from the front to the back, where it connects to the screen, proved to be the easiest way of popping the case off.

Step 3 — Battery

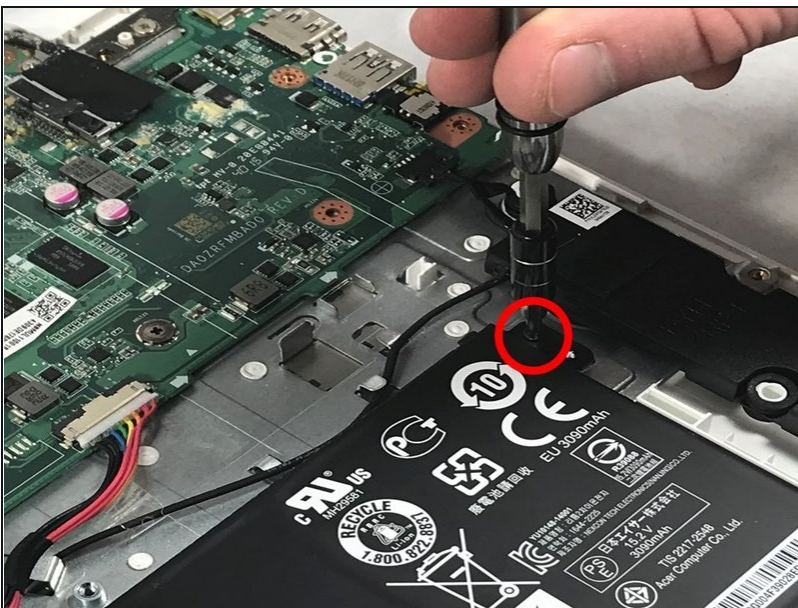

- Using a Phillips #0 screwdriver, unscrew the screw on right side of the battery placement.
- ☑ Be careful not to lose the screw and have a small container nearby to place it in.

Step 4

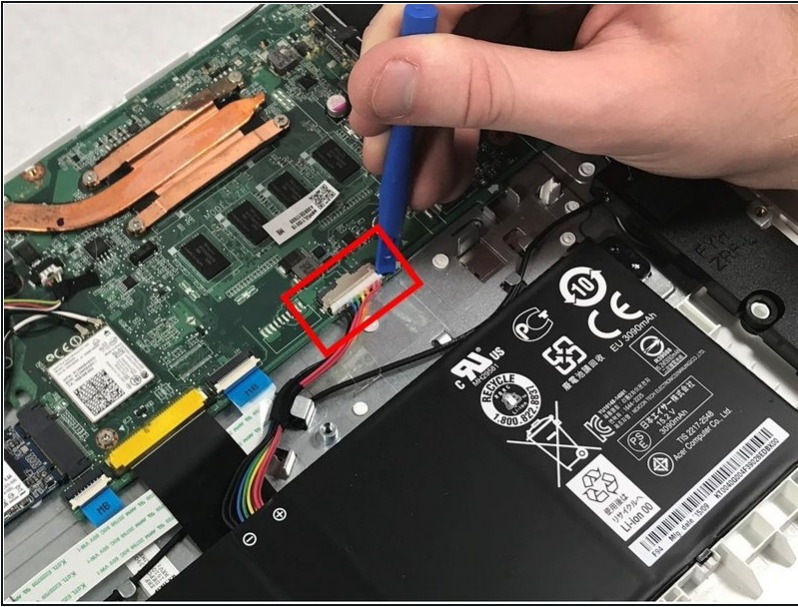

- Using a plastic opening tool, disconnect the wires connecting the battery to the motherboard.

Step 5



- Gently lift the battery out and remove it from the laptop casing.

To reassemble your device, follow these guidelines in reverse order.