



# Mitsubishi Diamondpoint NXM76LCD stand disassembly

This guide shows how to remove the stand from a Mitsubishi Diamondpoint LCD.

Written By: Padraic Hoselton



## **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Removing the stand.



- Lift the black cover off.
- Remove all 4 Phillips #2 screws.

To reassemble your device, follow these instructions in reverse order.