

Asus Zenbook UX501 Teardown

This guide is to show a teardown of an Asus Zenbook UX501.

Written By: Andy Lin



FOOLS:

- Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Current Condition




• Here is our shiny new UX501! we'll be tearing this laptop down!

Step 2 — Starting the disassembly!



- Flip the laptop down.
- Remove all the visible screws.

Step 3

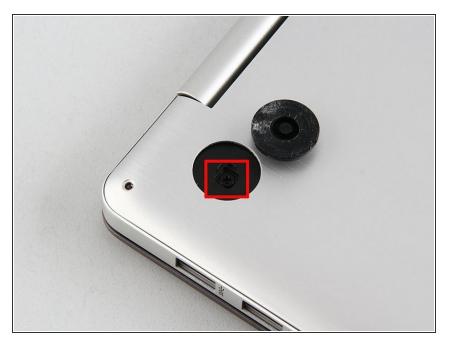

- Remove the rubber stoppers from all four corners of the laptop.
- Then remove the screws.

Step 4



• Remove the bottom case.

Step 5



• Here, we have access to the RAM, the WiFi card, and the SSD.