



Hoover T-Series WindTunnel Pet UH30310

Motor Replacement

The motor is the most important part of the vacuum as without it, the vacuum cannot create suction. This is a walkthrough on how to replace the motor.

Written By: Anthony Garcia



This document was generated on 2021-01-27 06:10:25 AM (MST).

INTRODUCTION

The motor is the most important part of the vacuum as without it, the vacuum cannot create suction. This is a walkthrough on how to replace the motor.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Motor



- Depress the hose-release tab.

Step 2



- Next, remove the hose from the connector, near the top of the vacuum's rear. This can be achieved by twisting and then pulling down.

Step 3



- Use a Phillips #1 screwdriver to remove the two screws on the part holding the hose to the back of the vacuum.

Step 4



- Use a Phillips #1 screwdriver to remove the two screws that secure the hose-release tab.

Step 5



- Use a Phillips #1 screwdriver to remove the two screws on the top of the vacuum holding the tab on the left of the vacuum.

Step 6



- Use a Phillips #1 screwdriver to remove the two screws on the top of the vacuum head holding down the tab on the right.
- To remove the tab, slide backwards and then pull up. There is a tab holding the piece down so use force if necessary.

Step 7



- Slide the belt off of the metal rod on the left of the vacuum shaft. Pull the vacuum up and it should easily separate into two pieces.

Step 8




- Use a Phillips #1 screwdriver to remove the 6 screws on the back and bottom of the vacuum shaft.

Step 9



- The top of the motor casing should then fold open, revealing the motor.

Step 10

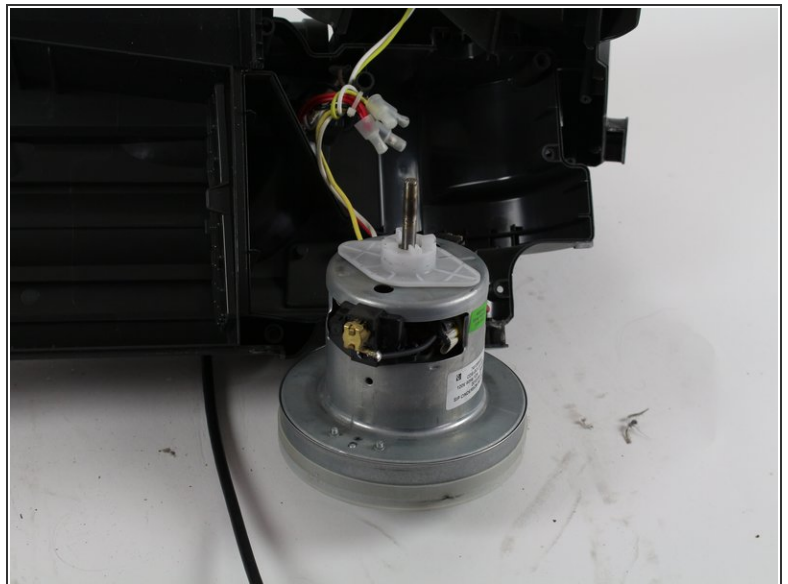

- The motor can now be accessed for replacement or repair

To reassemble your device, follow these instructions in reverse order.