




HP Laptop 15-g000sl Hardisk Replacement

Follow this guide to replace the hard disk and possibly other parts that can only be accessed through disassembly.

Written By: Smilzo





Step 1 — Hard Disk

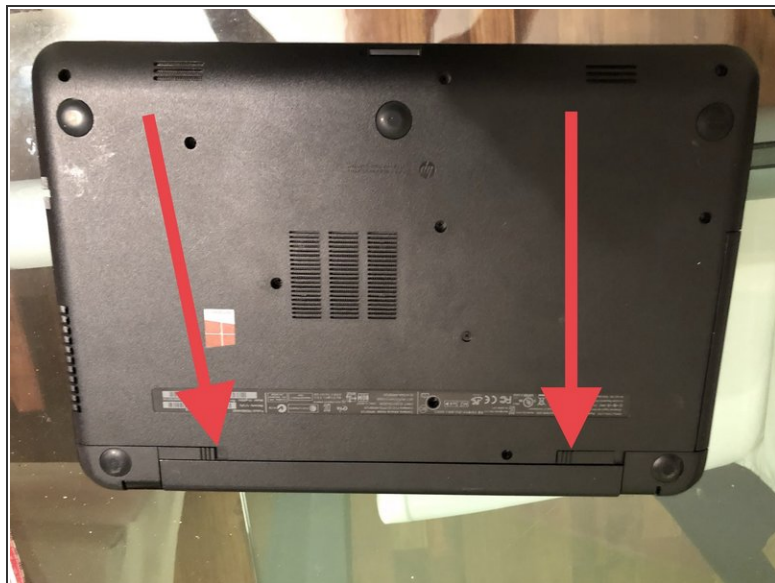


- Remove the battery by moving the points marked with an arrow towards the inside.

Step 2

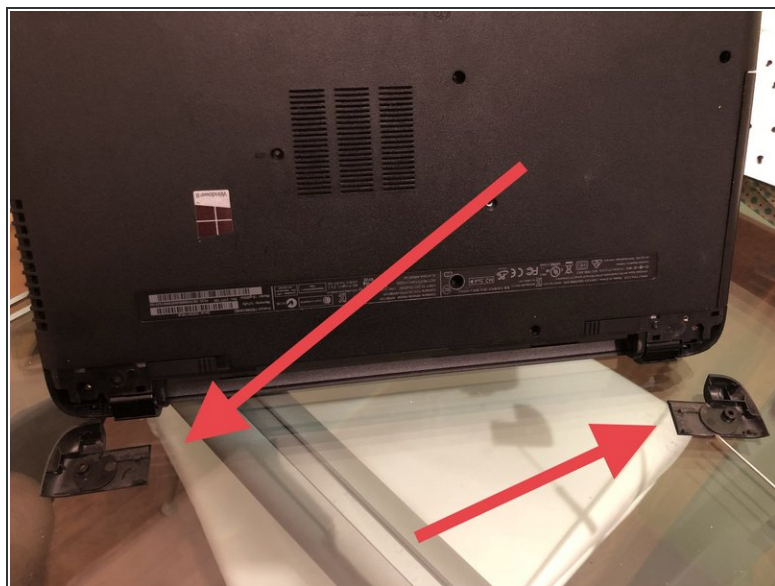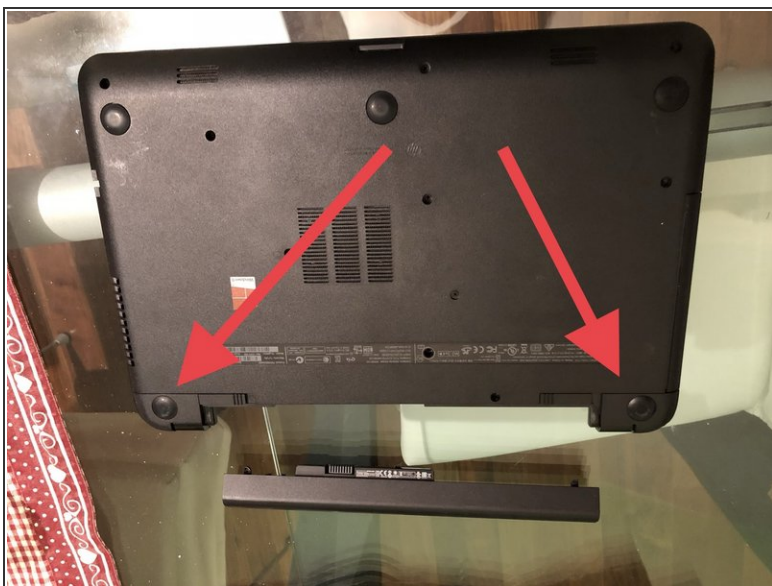



- Remove the glued rear rubber feet , optionally use a heat source such as a hair dryer
- Using a Phillips screwdriver, remove the 2 screws underneath the rubber stopper

Step 3

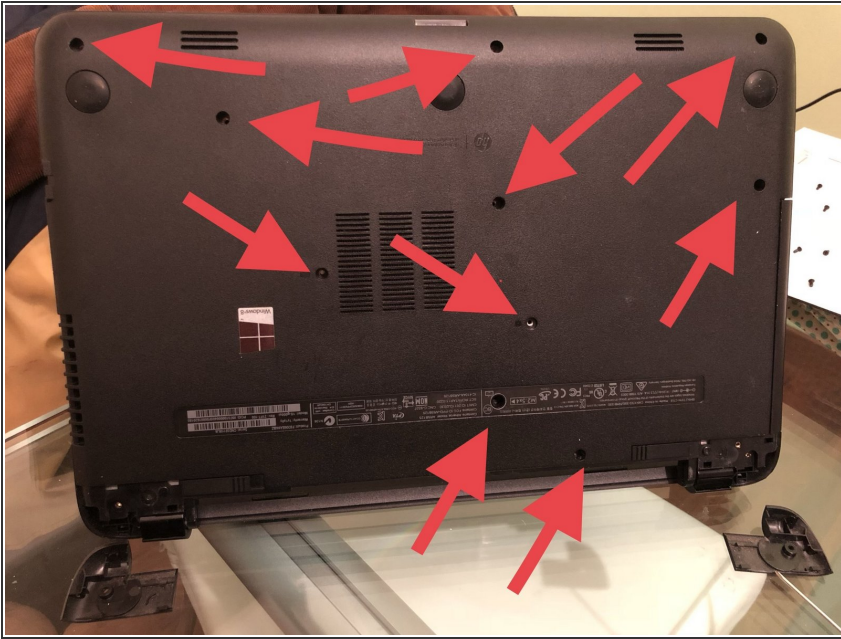


- Remove all visible screws at the bottom.

Step 4

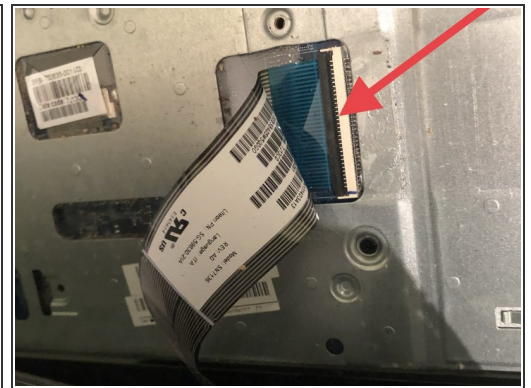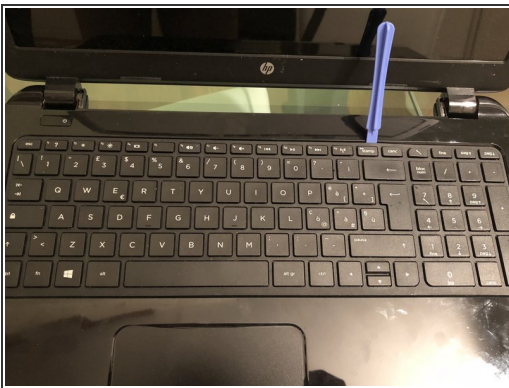


- Remove the keyboard with the help of a thin tool.
- ⓘ Be careful because it is connected to the cable, then unhook the connector.

Step 5

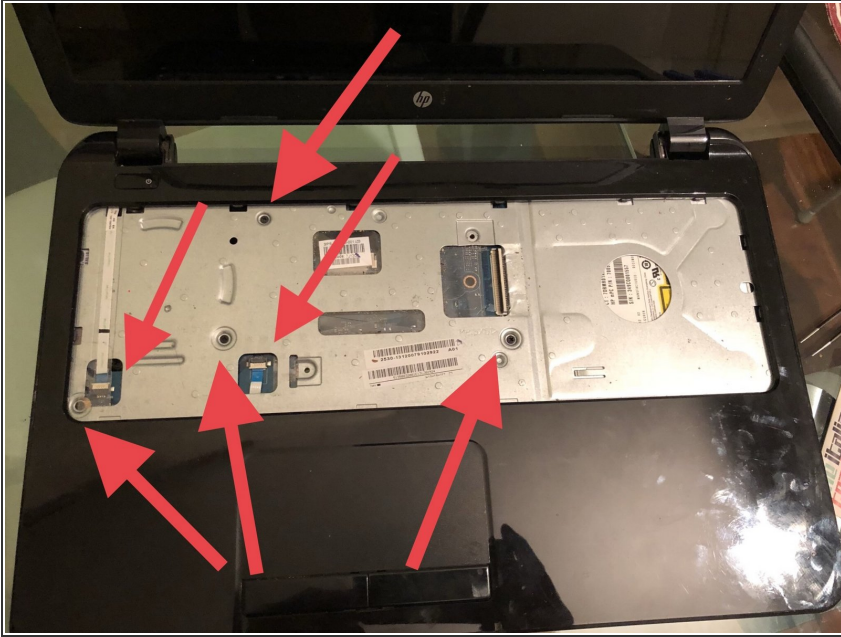

- Unhook the 2 connectors and remove the 4 screws.

Step 6

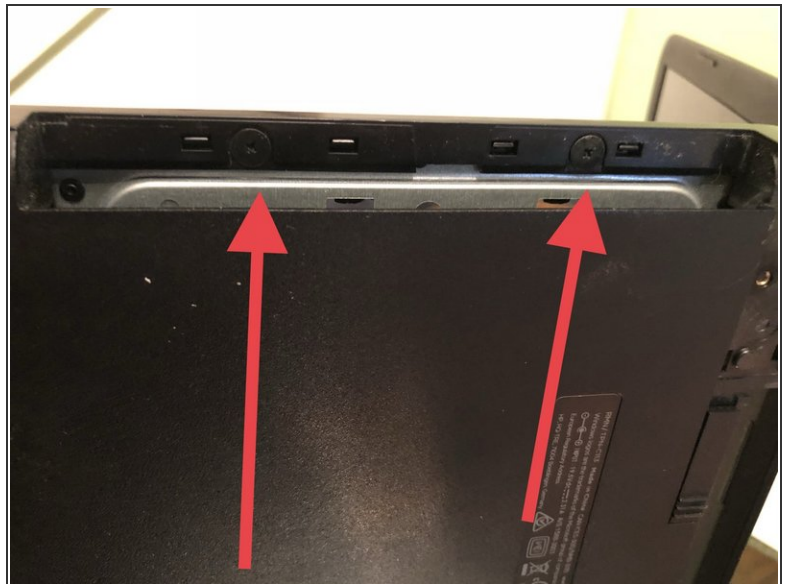


- Extract DVD player.
- Remove the 2 screws indicated in the second picture.

Step 7



- It is possible to remove the upper cover which is free of screws and only hooked by a joint with the help of a thin tool.

Step 8

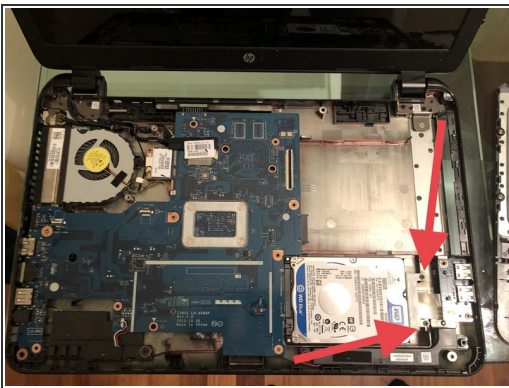

- Remove the 2 hard disk fastening screws.
- Remove the disc sideways.
- Take away the support by removing the 2 screws to place it on the new hard disk

To reassemble the device, follow the steps of this guide in reverse order.