




Dell Alienware 17 Battery Replacement

Written By: Terrence15

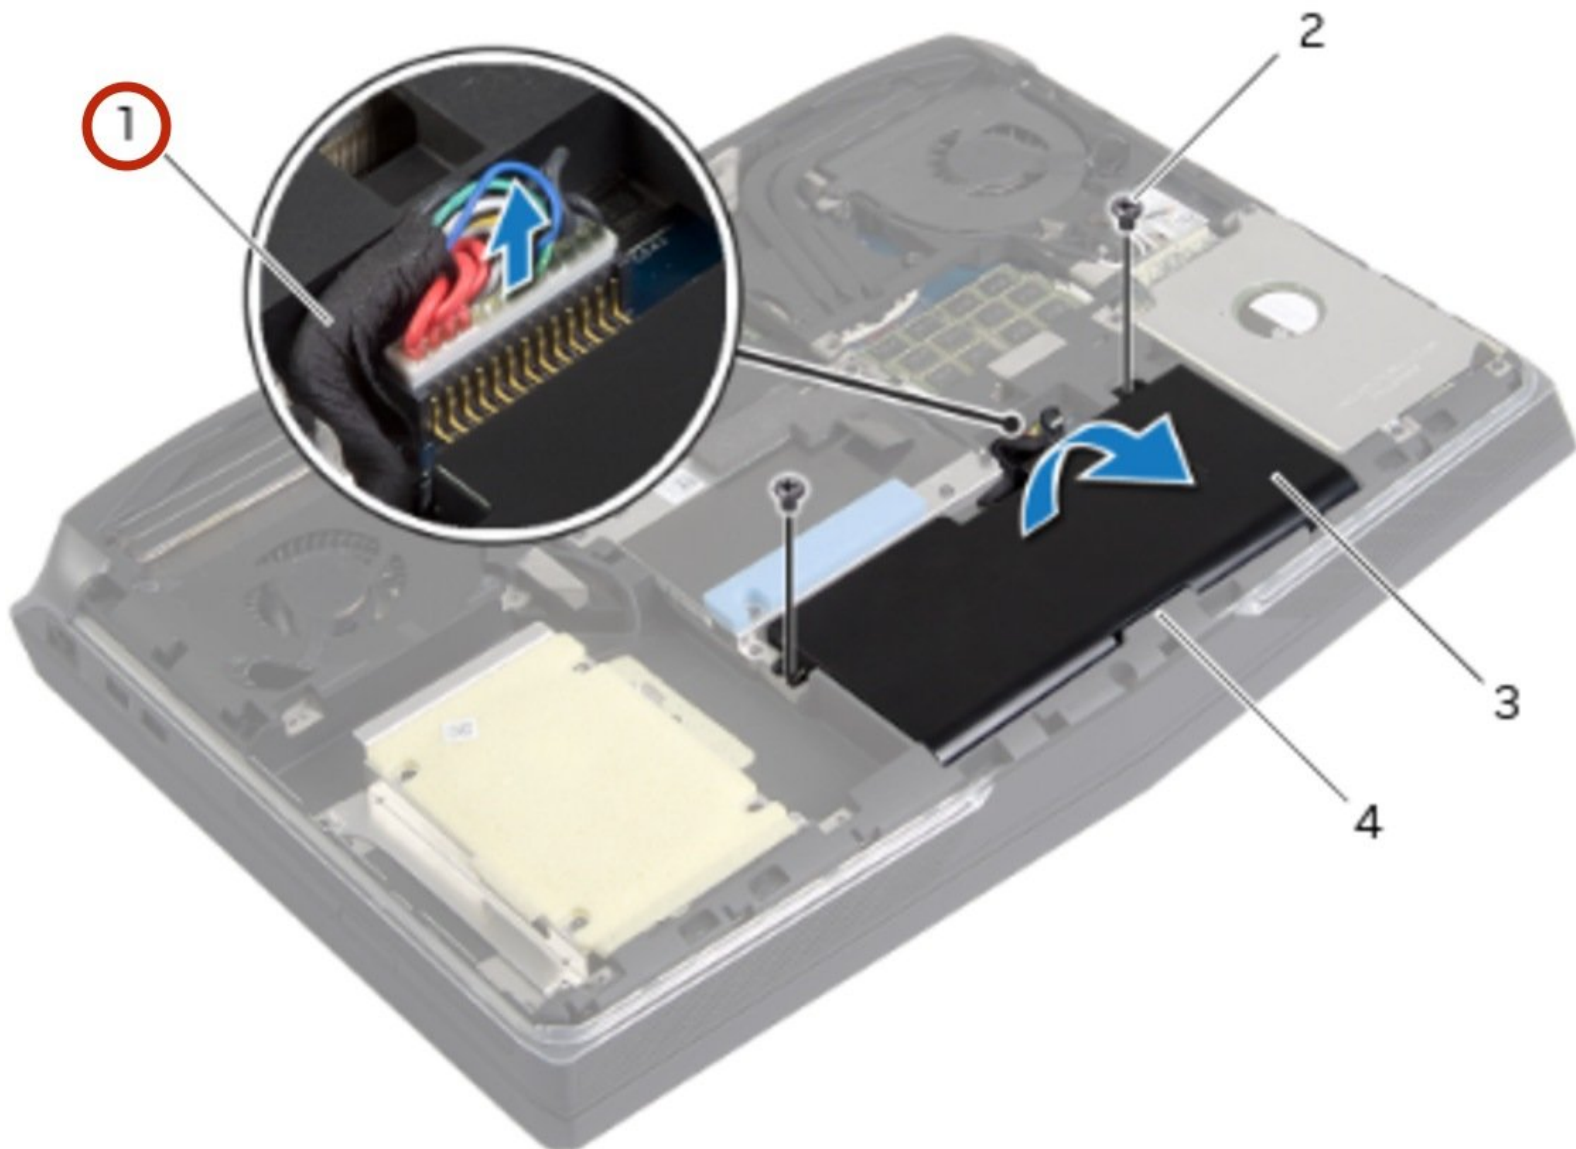

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Battery.



TOOLS:

- [Pro Tech Toolkit](#) (1)
-


Step 1 — Disconnecting the Battery Cable

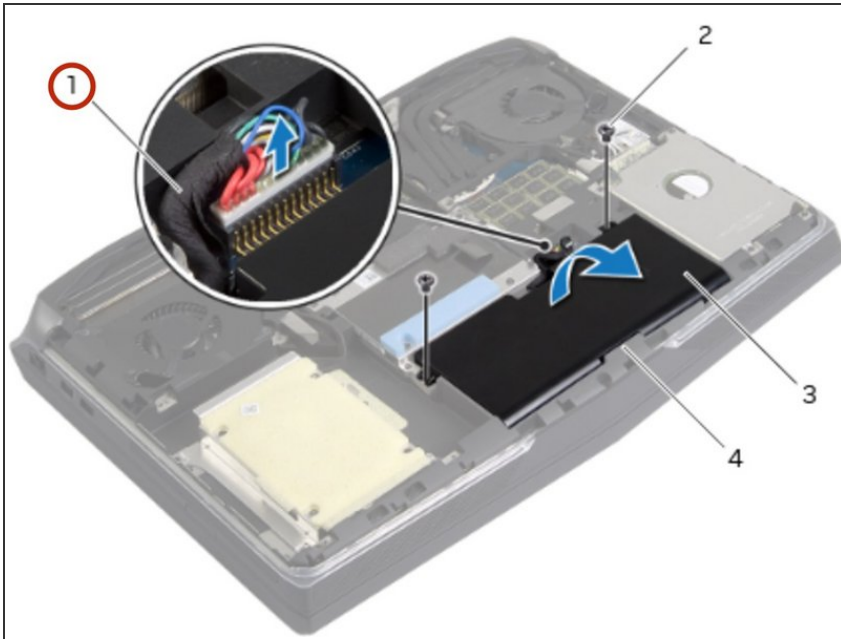

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Disconnect the battery cable from the system board.

Step 2 — Remove the Screws

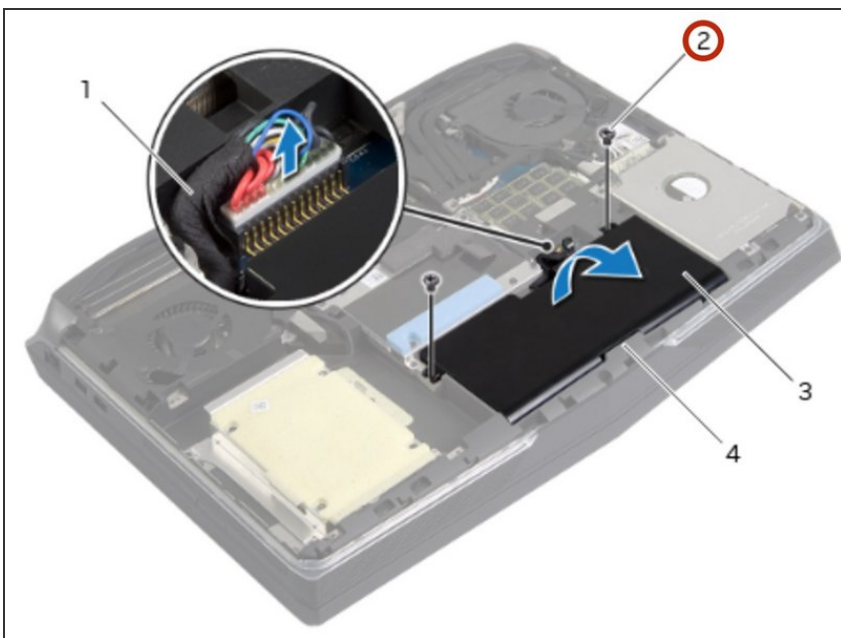


- Remove the screws that secure the battery to the computer base.

Step 3 — Releasing the Battery

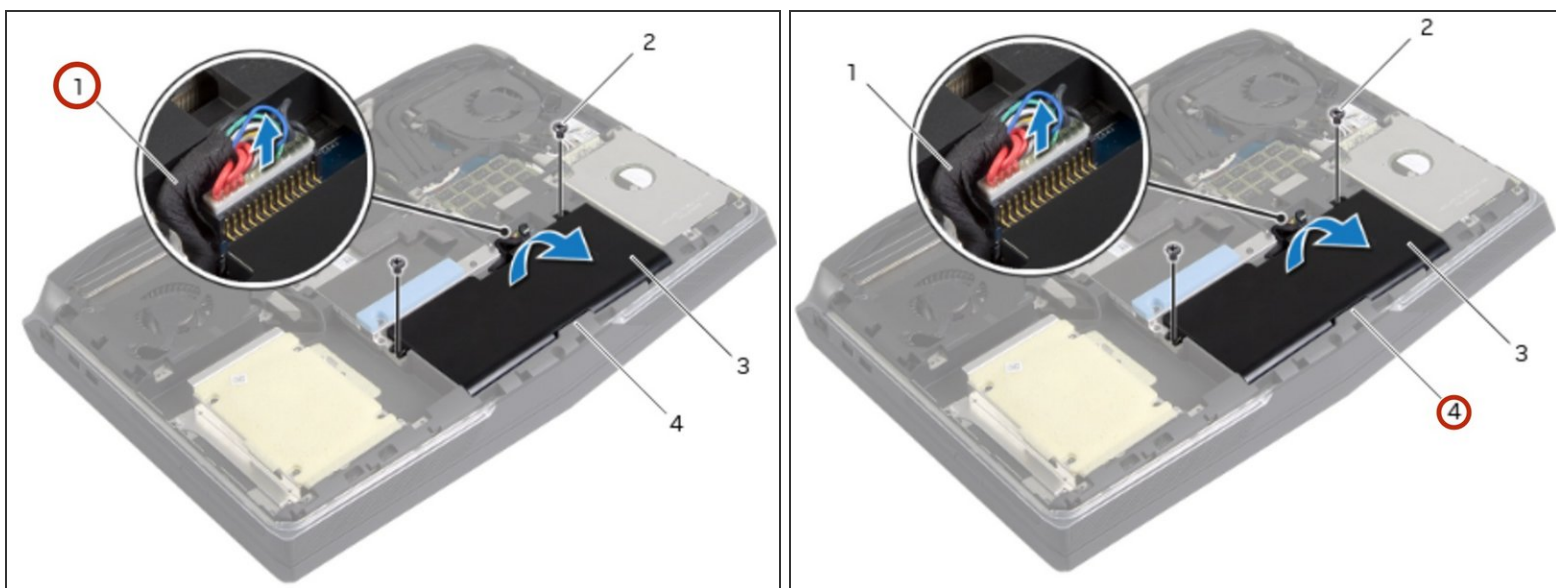


- Using the battery cable, lift and release the battery from the tabs on the computer base.

Step 4 — Opening the Display

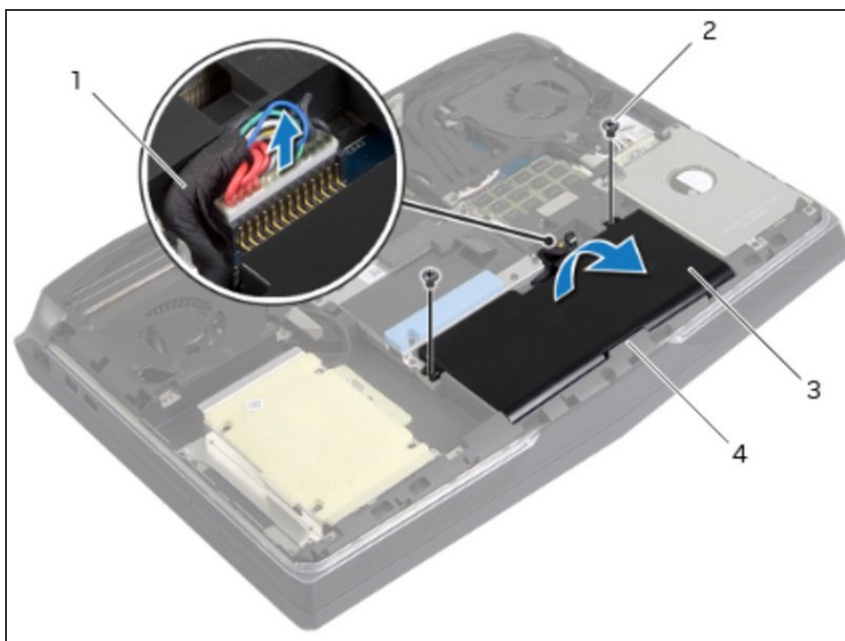


- Turn the computer over and open the display.

Step 5 — Grounding the System Board

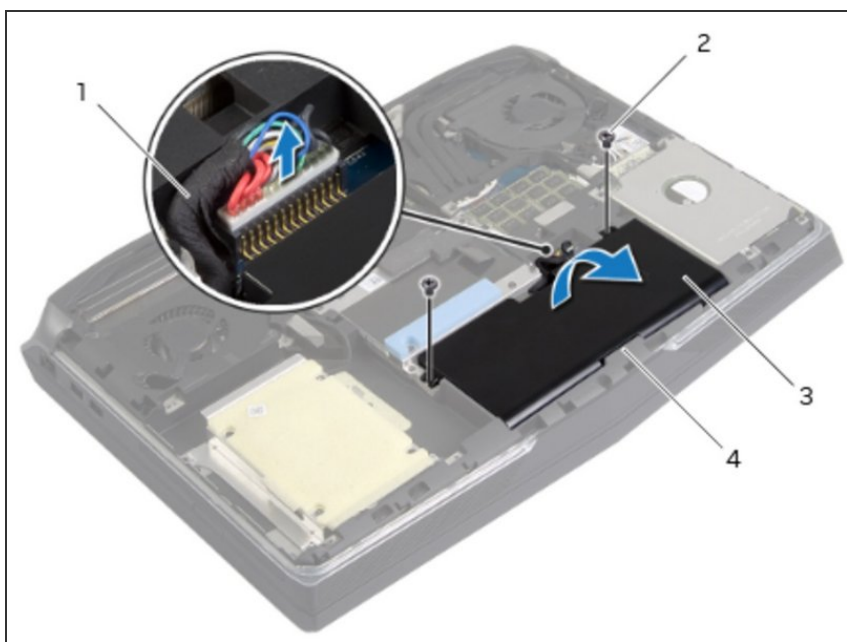


- Press and hold the power button for five seconds to ground the system board.

Step 6 — Slide the New Battery

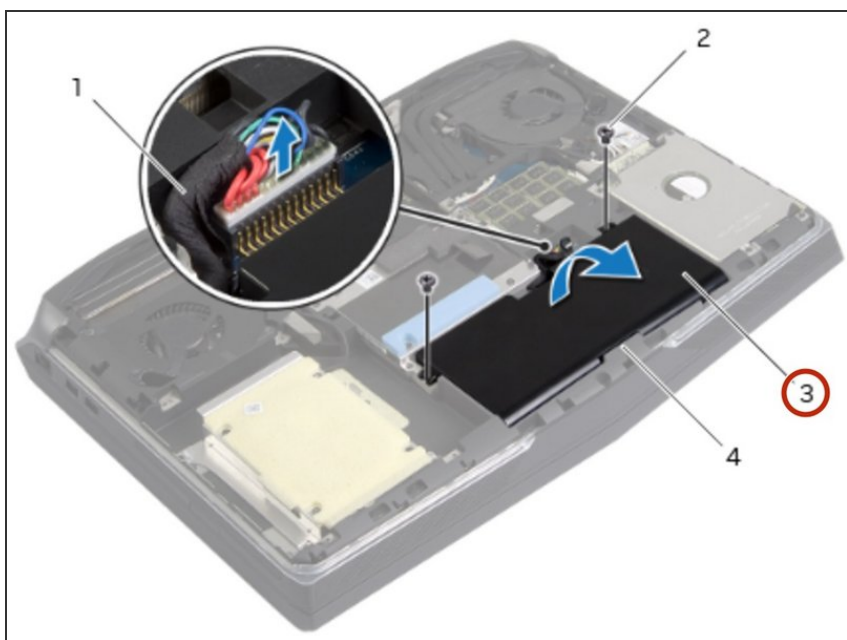


- Slide the **NEW** battery under the tabs on the computer base.

Step 7 — Aligning the Screw Holes

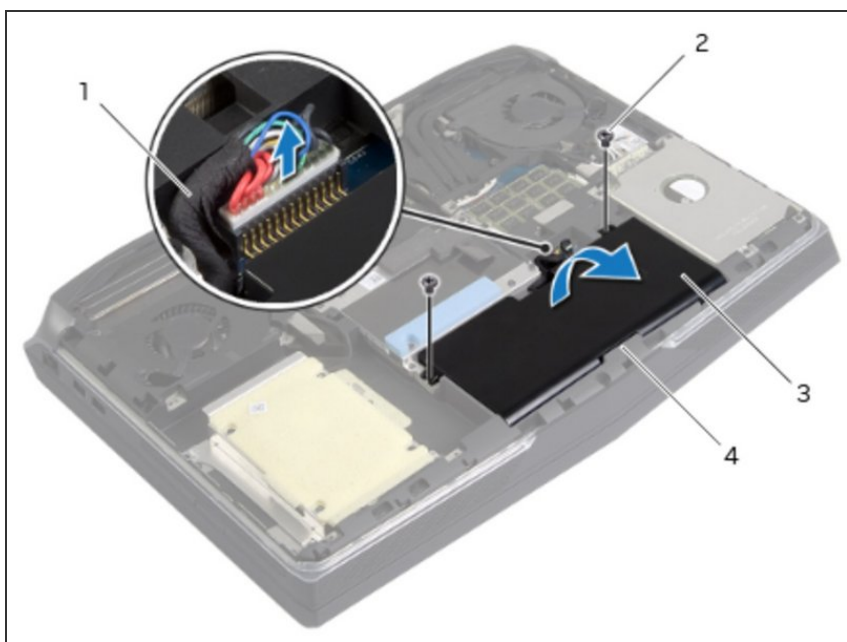


- Align the screw holes on the battery with the screw holes on the computer base.

Step 8 — Replace the Screws

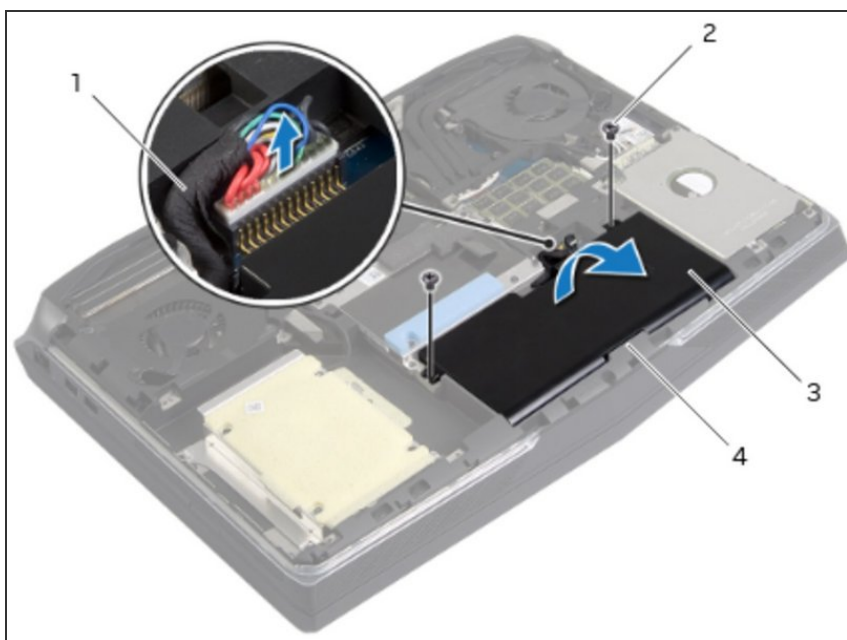

- Replace the screws that secure the battery to the computer base.

Step 9 — Connect the Battery Cable

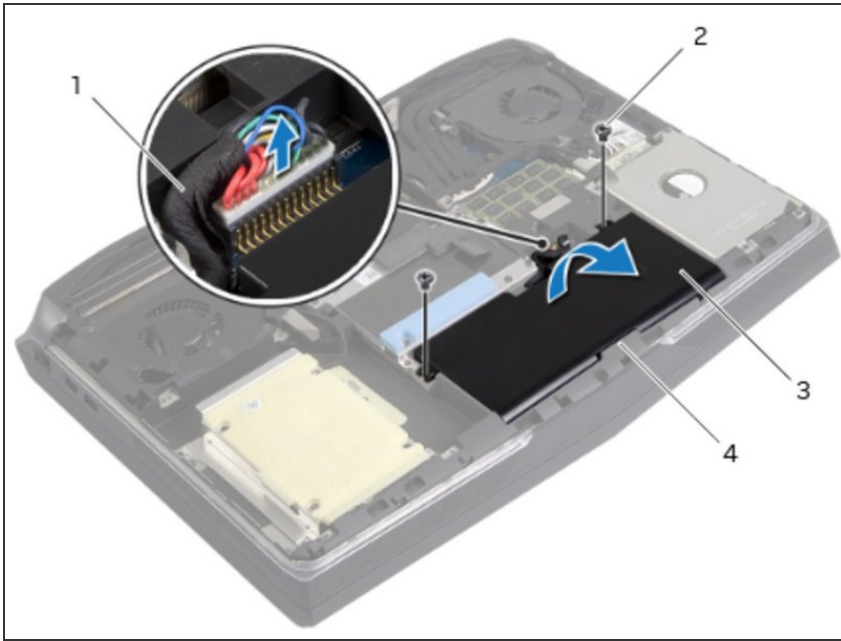

- Connect the battery cable to the system board.

To reassemble your device, follow these instructions in reverse order.