

# How to empty and clean Rival 16131 Toaster crumb tray


Written By: Grant Haug



#### TOOLS:


8" Needle Nose Plier (1) Tweezers (1)

## Step 1 — How to empty and clean Rival 16131 Toaster crumb tray

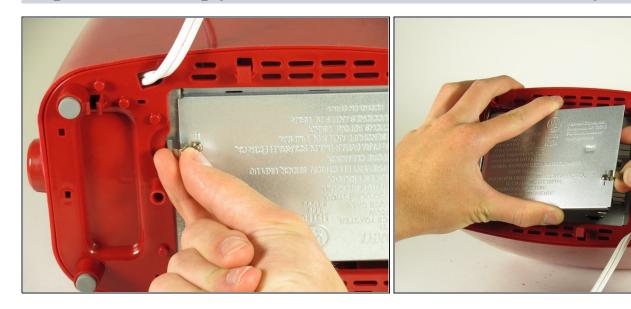

- To open the crumb tray, pinch the lever in the photo.
- If the lever does not keep the the crumb tray closed, stretch the lever so that to make sure the two horizontal pieces are aligned.

## Step 2

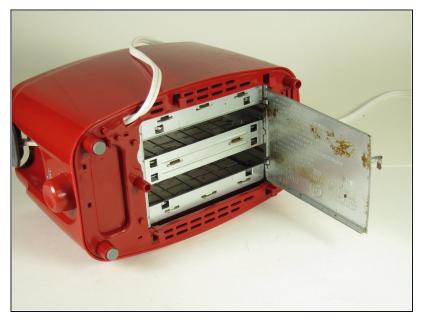

- Now that the tray is exposed, it is possible to clean the face here.
- ⚠ Try to not let water get into the toaster as this may damage the heating coil.
- If the tray can not be cleaned simply by opening it, keep going through the guide to fully remove it.

### Step 3







- To remove the tray, the metal hinges must be bent up.
- While applying pressure to the bottom of the toaster, use pliers or <u>tweezers</u> to bend up the bracket. The pressure applied to the bottom of the toaster should be just enough to allow the bracket to swing up.
- Remove the tray and clean.

To reassemble your device, follow these instructions in reverse order.