



# Samsung Galaxy S9 SIM Card or MicroSD Card Replacement

Replace the SD card or SIM card tray.

Written By: cPix



## INTRODUCTION

The SIM card tray houses both the SIM card for your cellular network as well as the (optional) SD card for expanded storage. Use this guide to eject the tray and remove or replace one or both cards.

## Step 1 — SIM Card or MicroSD Card



**⚠** The SIM card tray's ejection hole and the microphone hole look very similar, be very careful not to insert the tool inside the microphone hole or you might damage the microphone.

- Insert a SIM card ejector or anything as thin inside the SIM tray ejection hole, on the top of the phone above the camera.
- Press in to eject the tray.

## Step 2



- Grab the part of the tray that came out and pull it out of the phone.
- ⓘ The SIM/SD cards in the tray can easily fall off so be careful and make sure not to lose them.
- ⚠ When putting the tray back in place check that your cards are well positioned and fit in the tray or they might not work correctly, or worse, be broken when you put everything back inside.

To reassemble your device, follow the instructions backwards.