




# DigiTech RP70 Footswitch Replacement

This is the replacement guide for the RP70's footswitches.

Written By: Elijah Smith

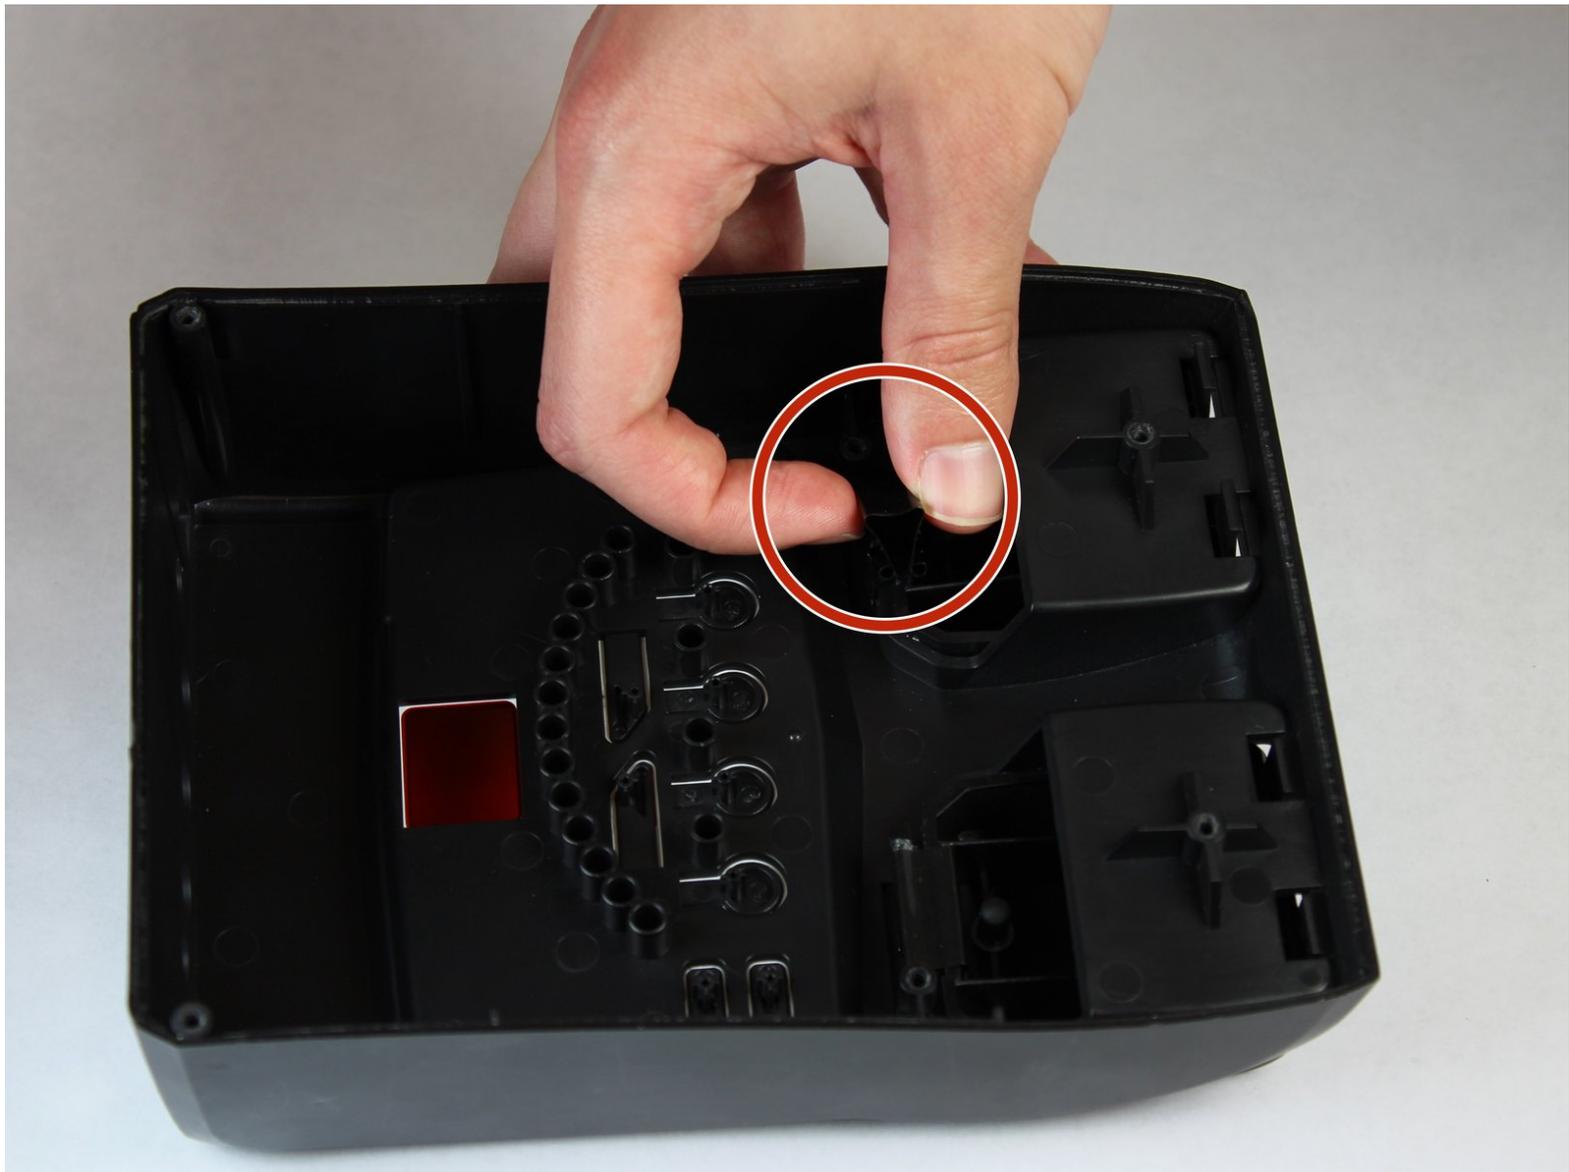

---

## INTRODUCTION

If one or both of the footswitches works inconsistently or not at all, refer to this guide.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Binder Clip](#) (1)
-

## Step 1 — Motherboard



 Unplug the device from its AC power adapter; unplug anything connected to the input/output jacks.


- Remove the four 8mm Phillips #0 screws located on the back panel.

## Step 2



- Remove the back panel to expose the motherboard.

### Step 3

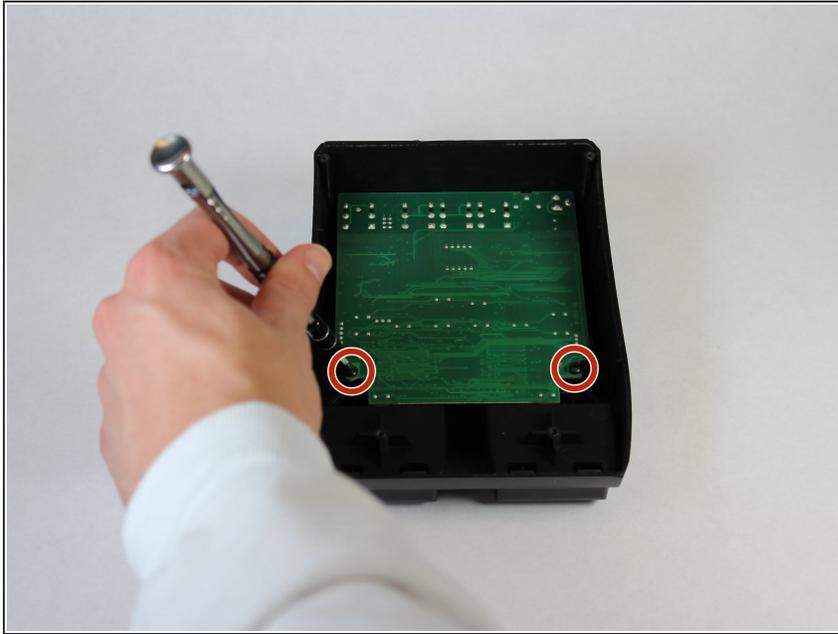


- Remove the two 11mm #0 Phillips screws located at the bottom of the motherboard.

## Step 4



- Lift the indented end of the motherboard opposite the input/output jacks. Then, pull away from the input/output jacks to slide the motherboard out of the casing.

## Step 5 — Footswitches

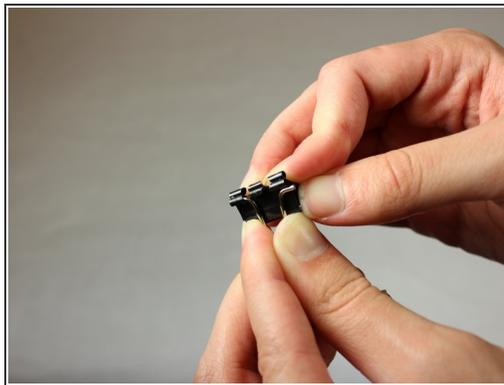

- Pull firmly on the binder clips that are holding the footswitches in place to remove them.
- ☑ To get the binder clips back in place, you will need to attach handles from another binder clip to hold them open.

## Step 6



- Pull the footswitch down and upwards to remove it from the casing.

To reassemble your device, follow these instructions in reverse order.