


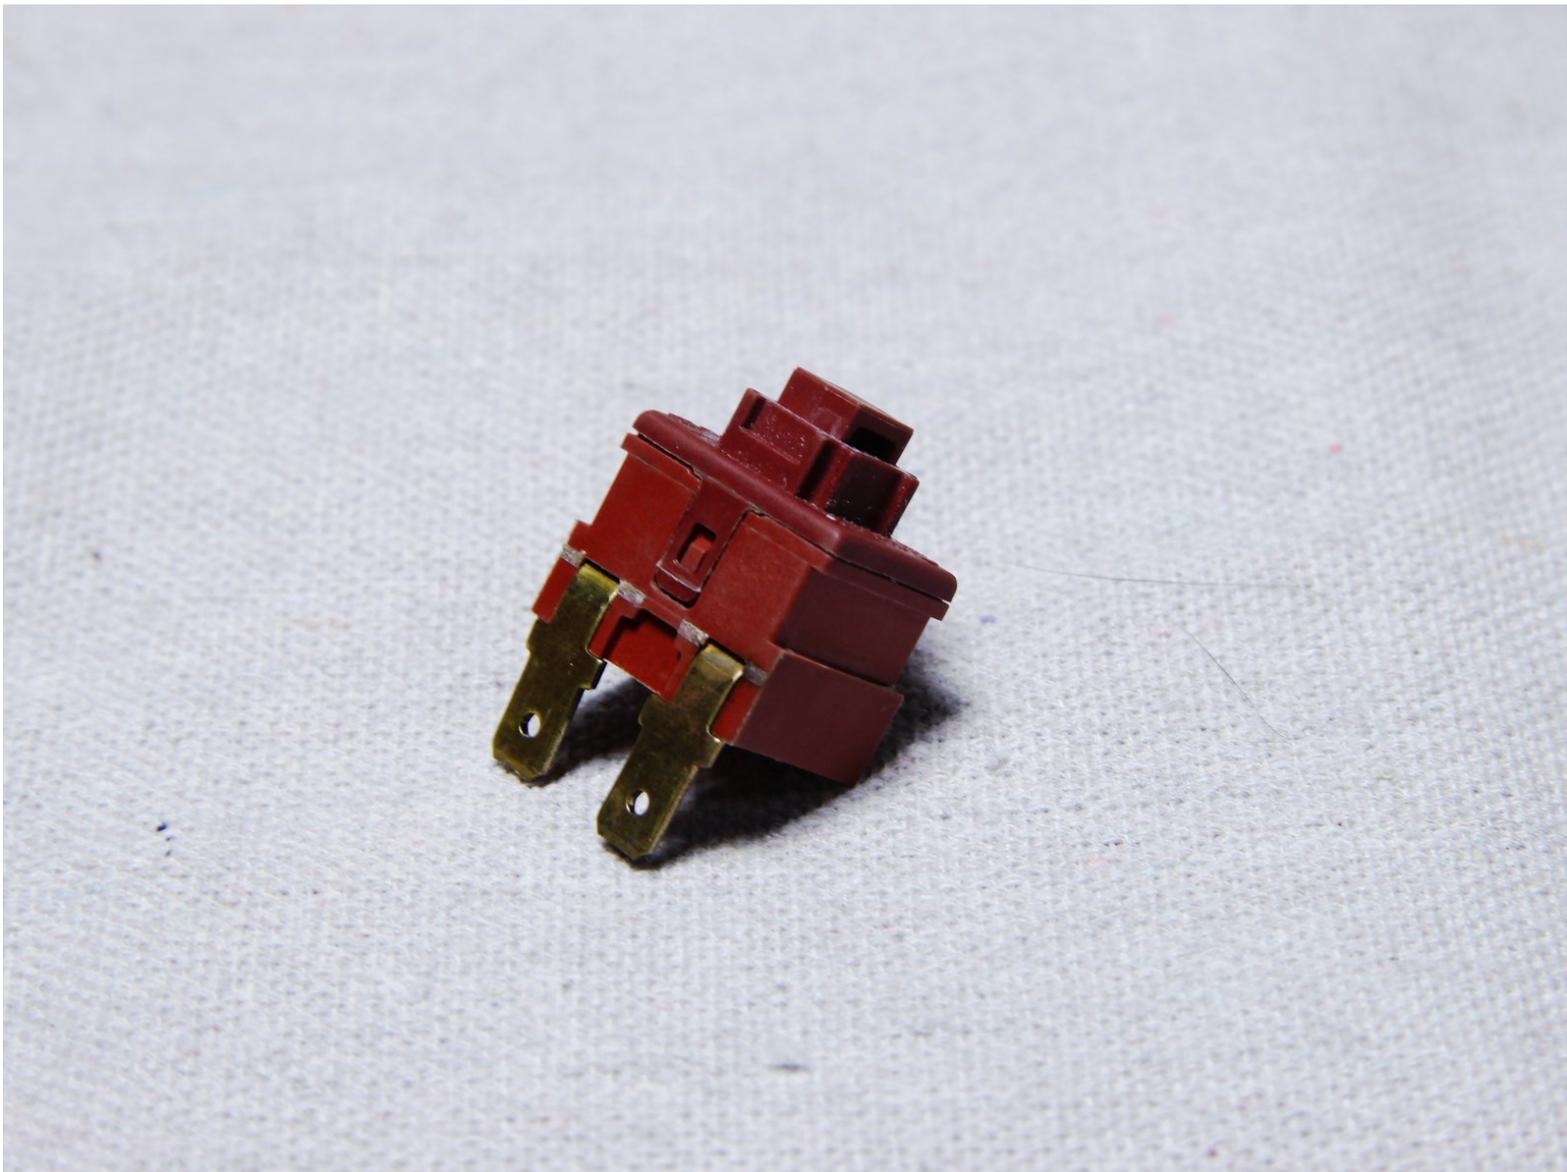

Dyson DC14 Power Switch Replacement

This guide will lead you through the process of replacing your Dyson DC14 Power Cord.

Written By: Zachary



INTRODUCTION

This guide will show you the necessary steps to replace the power switch on your Dyson DC14 Vacuum cleaner.

TOOLS:

- [T15 Torx Screwdriver](#) (1)

PARTS:

- [Dyson DC14 Power Switch](#) (1)

Step 1 — Power Switch



- ① Start with your Dyson DC14 unplugged, standing upright and facing towards you.
 - Remove the canister from the vacuum.
 - Disconnect the telescopic vacuum wand.
 - Remove the two T15 Torx screws securing the switch cover to the vacuum.

Step 2




- Push outward on the two plastic clips that secure the switch cover to the vacuum.

Step 3



- Remove the switch cover from the vacuum.
- ⓘ The purple switch button may separate from the rest of the switch cover.

Step 4

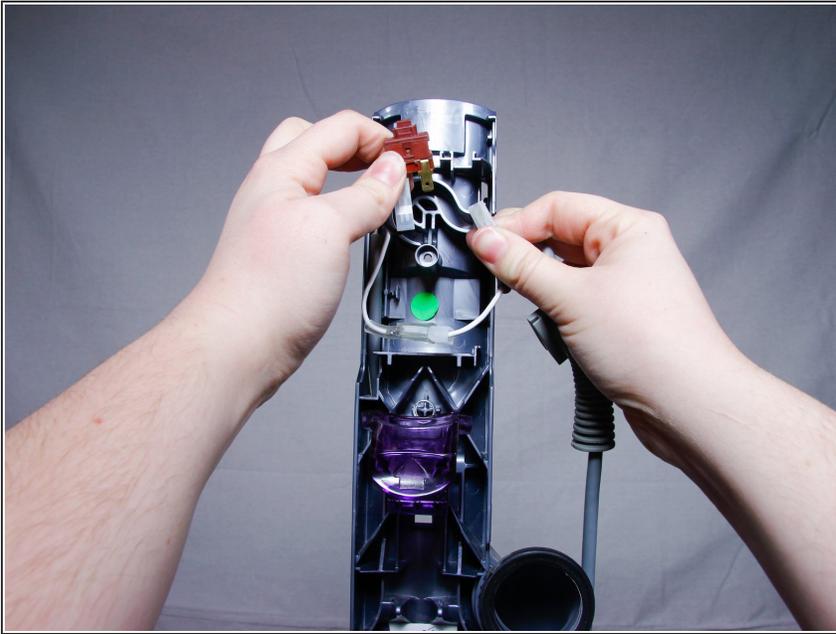

- Holding them by their white plastic coverings, firmly pull the two wires from the power switch.
- ⚠ Be sure to grip the wires from their attached connectors. Pulling directly on the wires could damage your vacuum.
- 👉 The terminals will only fit one way during reassembly. Only one of the wires is long enough to reach the far terminal of the switch.

To reassemble your device, follow these instructions in reverse order.