


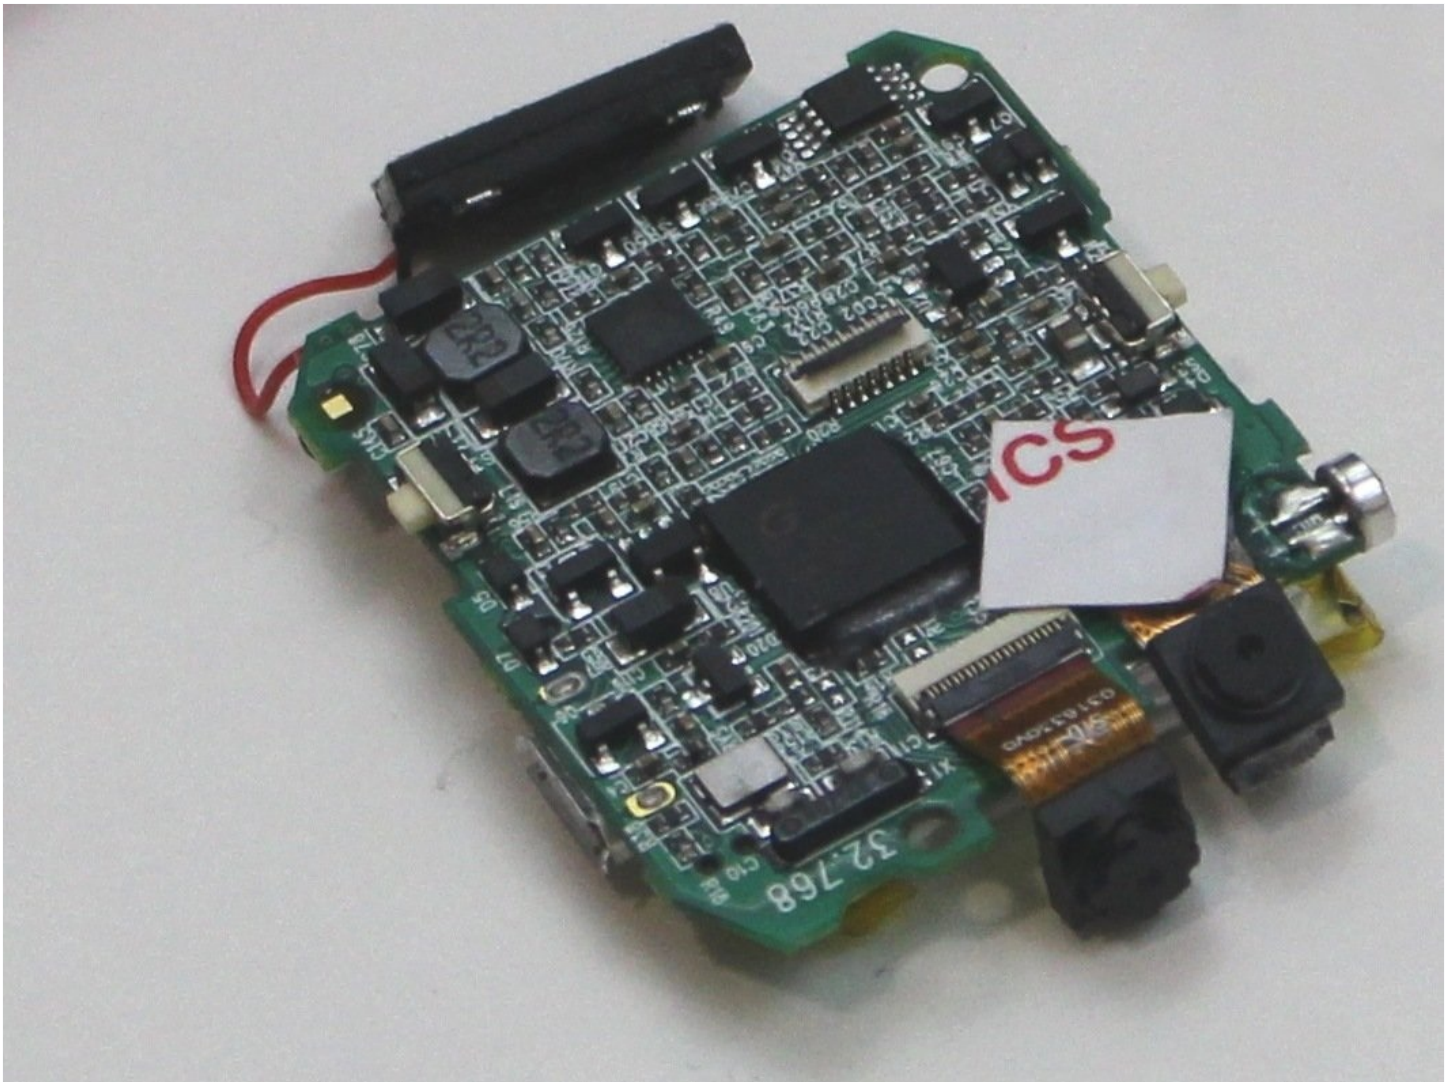

# VTech Kidizoom Smartwatch DX2 Motherboard Replacement

In order to remove the screen or the battery,...

Written By: Jessica Richard



# INTRODUCTION

In order to remove the screen or the battery, the main board will have to be removed first. Follow this guide to set you on your way.

---

## TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)


---

### Step 1 — Master Switch



- Begin by flipping the watch over with its back facing upwards.

## Step 2

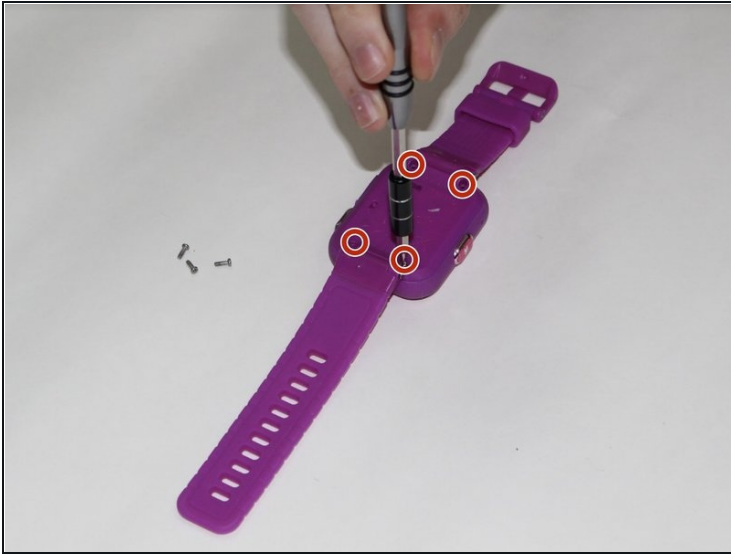



- Next, use the Phillips #00 screwdriver to unscrew the four 6.0 mm screws located in each corner of the watch to remove the backplate.

## Step 3



- Gently lift the backplate up to remove it.

## Step 4

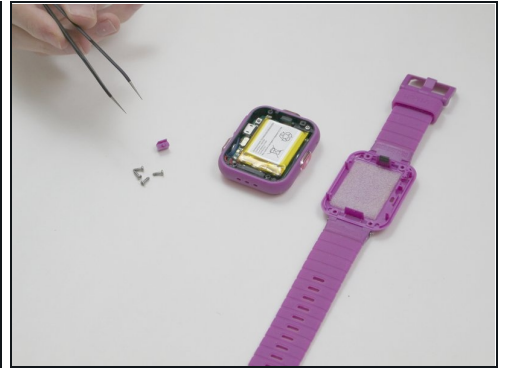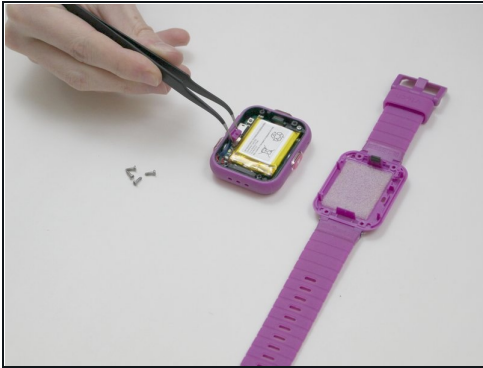

- After removing the backplate, lift the master switch up from the circuit board.

## Step 5 — Motherboard



- Using a Phillips #00 screwdriver, remove the 0.6 mm screw.





## Step 6



- Carefully remove the speaker from the case without disconnecting it from the motherboard.

## Step 7

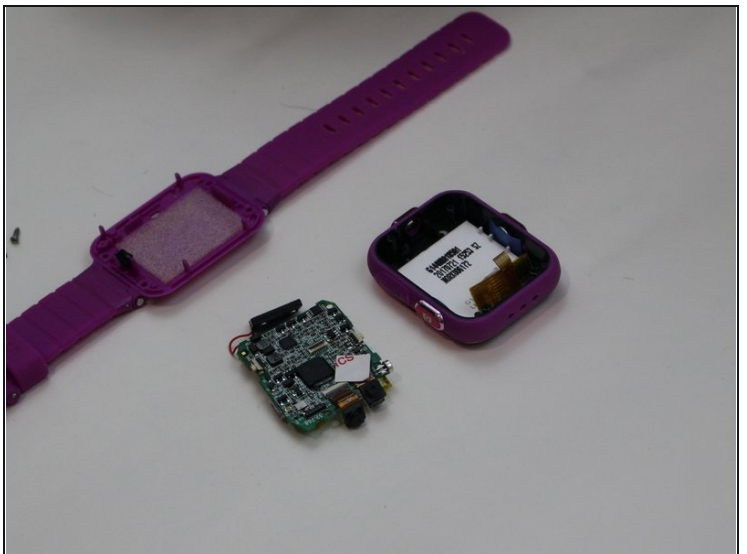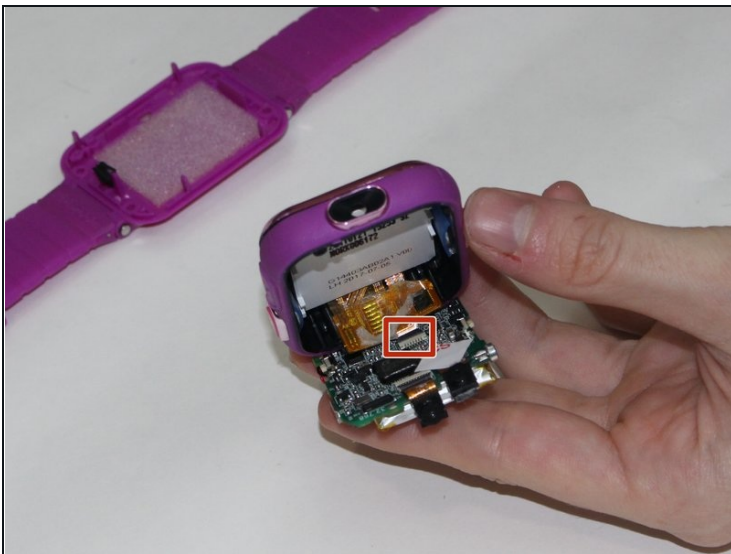

- Using the [tweezers](#), carefully lift the bar holding the connection to the screen.
- Remove the motherboard from the device.

---

To reassemble your device, follow these instructions in reverse order.

