



Logitech G710+ Disassembly

Complete Disassembly of the Logitech G710+

Written By: thefluffyfist




**TOOLS:**

- [Phillips #1 Screwdriver](#) (1)

**PARTS:**



- [Spudger](#) (1)

Step 1 — Body

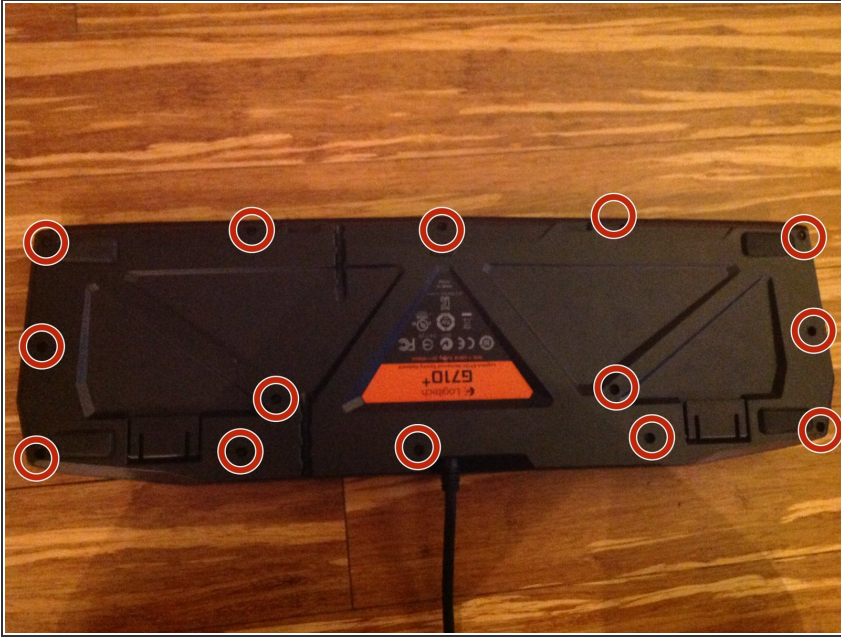


- Remove 14 Phillips screws on the bottom of the keyboard.
- Use a plastic tool to release the clips holding the case together.
 - ⓘ There are two hidden clips above the left and right arrow keys.
- Gently pry the two halves of the case apart.
 - ⓘ Don't worry if any of the clips break, the screws will still hold the keyboard together once reassembled.

Step 2 — Mother board

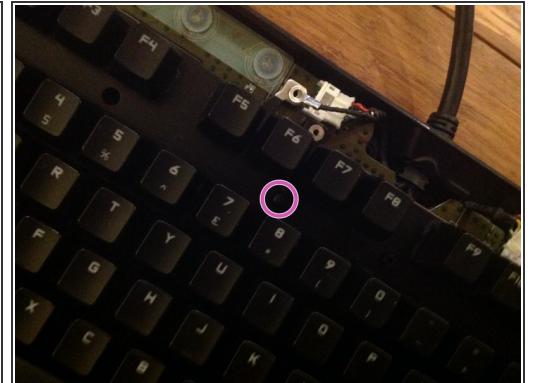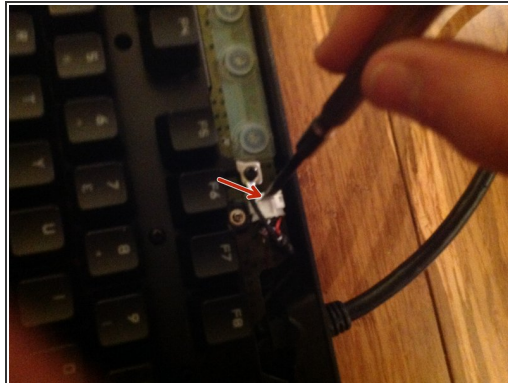

- Unscrew the one screw holding on the ground and pull out the cables.
- A good way of getting the cables out is by putting a screwdriver right there and twisting.
- Unscrew this screw

Step 3 — Scroll Wheel

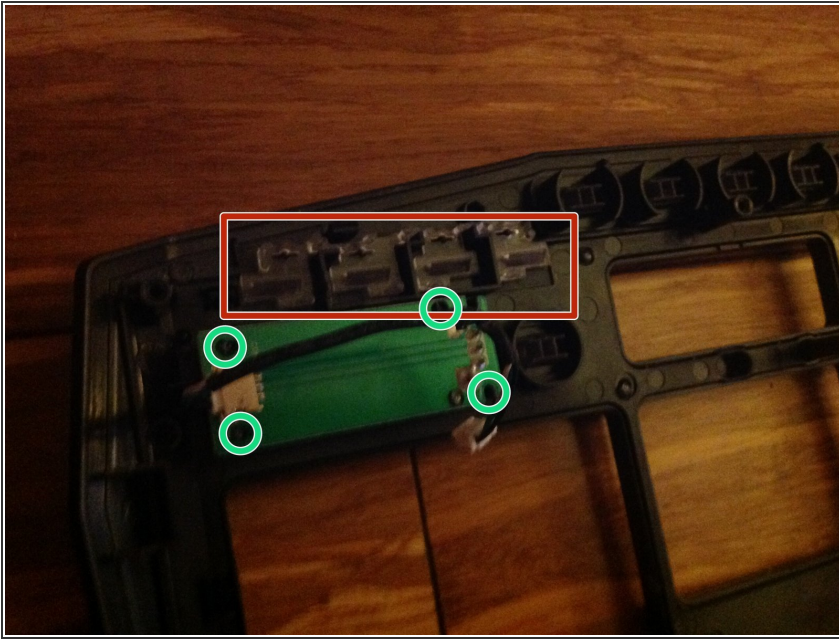

- The light thing comes out with a wiggle.
- The scroll wheel on the other is harder because you have to melt or brake the supports off.
- Then you have to get the wheel out which comes out with a very gentle wiggle.

Step 4 — Pads



- You can then take off the little pads

To reassemble your device, follow these instructions in reverse order.