



iPhone XR Taptic Engine Replacement

Prereq-only guide to remove the Taptic Engine in the iPhone XR.

Written By: Adam O'Camb




INTRODUCTION

Prereq-only guide to remove the Taptic Engine en-route to replacing the battery in an iPhone XR.

TOOLS:


- [P2 Pentalobe Screwdriver iPhone](#) (1)
 - [iOpener](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
 - [Suction Handle](#) (1)
 - [iSlack](#) (1)
 - [Tri-point Y000 Screwdriver](#) (1)
 - [Phillips PH000 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Standoff Screwdriver for iPhones](#) (1)
-

Step 1 — Taptic Engine

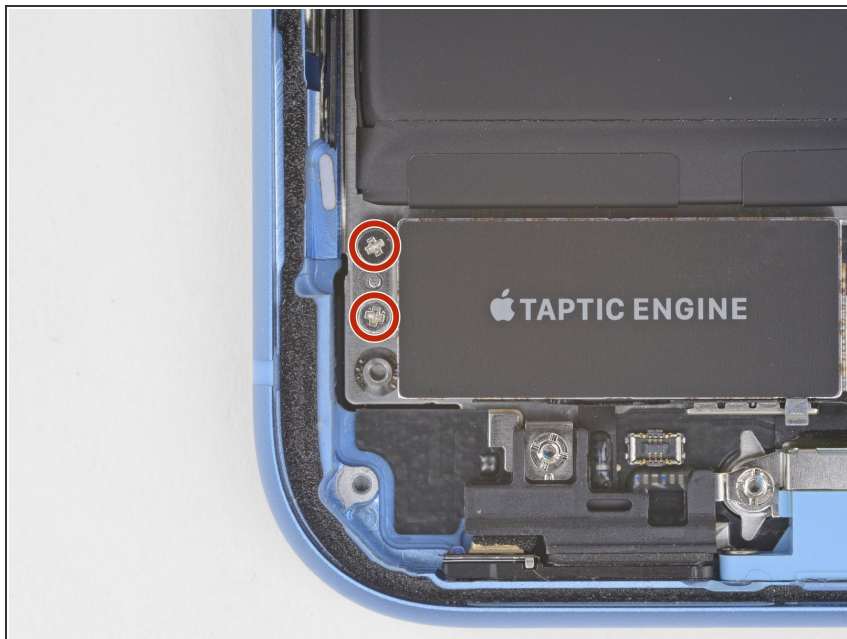


- Remove the two 1.8 mm Phillips screws securing the Taptic Engine.

Step 2

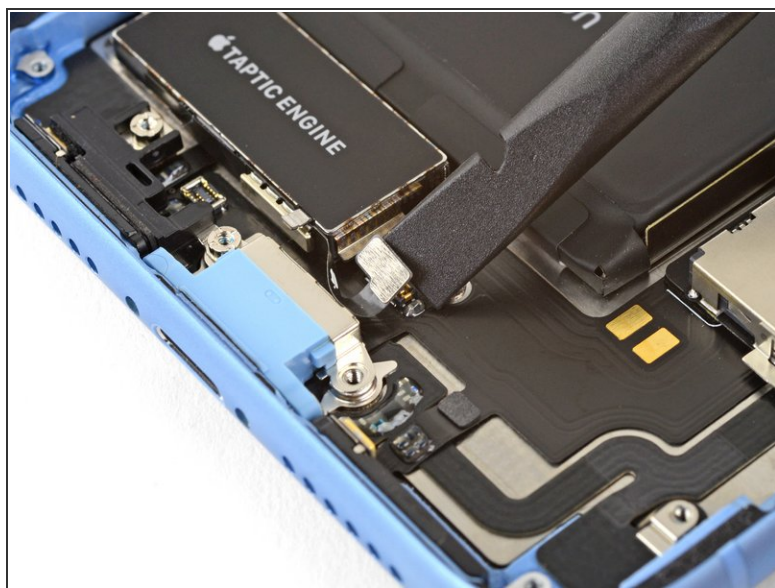

- Use a spudger to disconnect the Taptic Engine flex cable by prying it straight up from its socket.

Step 3

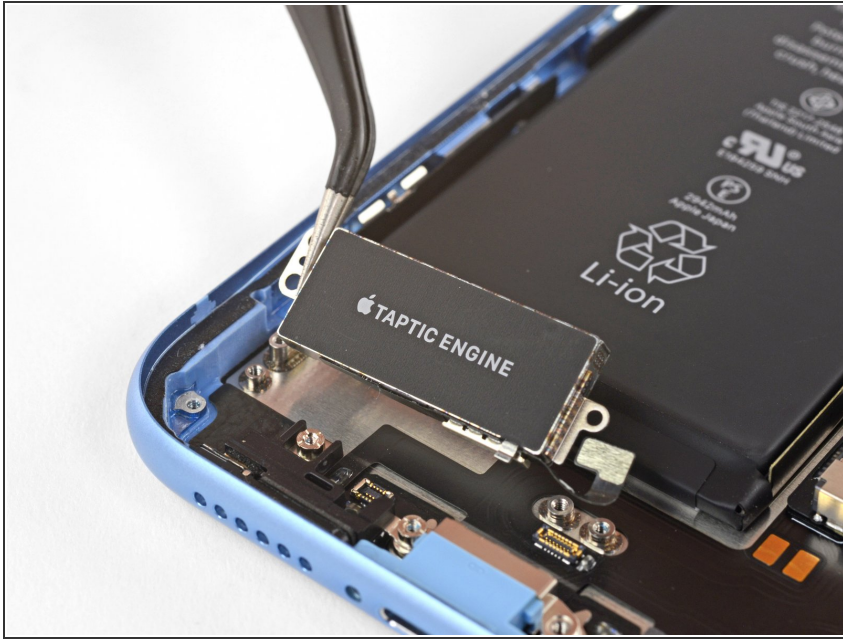

- Remove the Taptic Engine.

To reassemble your device, follow these instructions in reverse order.