

Acer Aspire 7741Z-4643 RAMReplacement

This guide will show you how to correctly replace the RAM in your Acer Aspire 7741Z-4643.

Written By: Amy Endo



INTRODUCTION

Is your computer not loading properly? Consider using this guide to replace the RAM in your device.



• Phillips #0 Screwdriver (1)



Step 1 — RAM







- Begin with the bottom of the laptop facing up.
- With a screwdriver, unscrew the four phillips #0 7.5mm screw around the bottom panel.
- Lift the panel at the top and pull towards you to remove it from the laptop.

Step 2







- The memory should be to the right, after you have removed the bottom panel.
- Towards the bottom of the memory card, push outwards on the two small silver levers to release the memory card.
- Pull the memory card out towards you to remove it.

To reassemble your device, follow these instructions in reverse order.