




# ASUS Chromebook C100PA-RBRKT07

## Trackpad Replacement

How to replace the trackpad for the ASUS Chromebook C100PA-RBRKT07.

Written By: Lauren Schirle

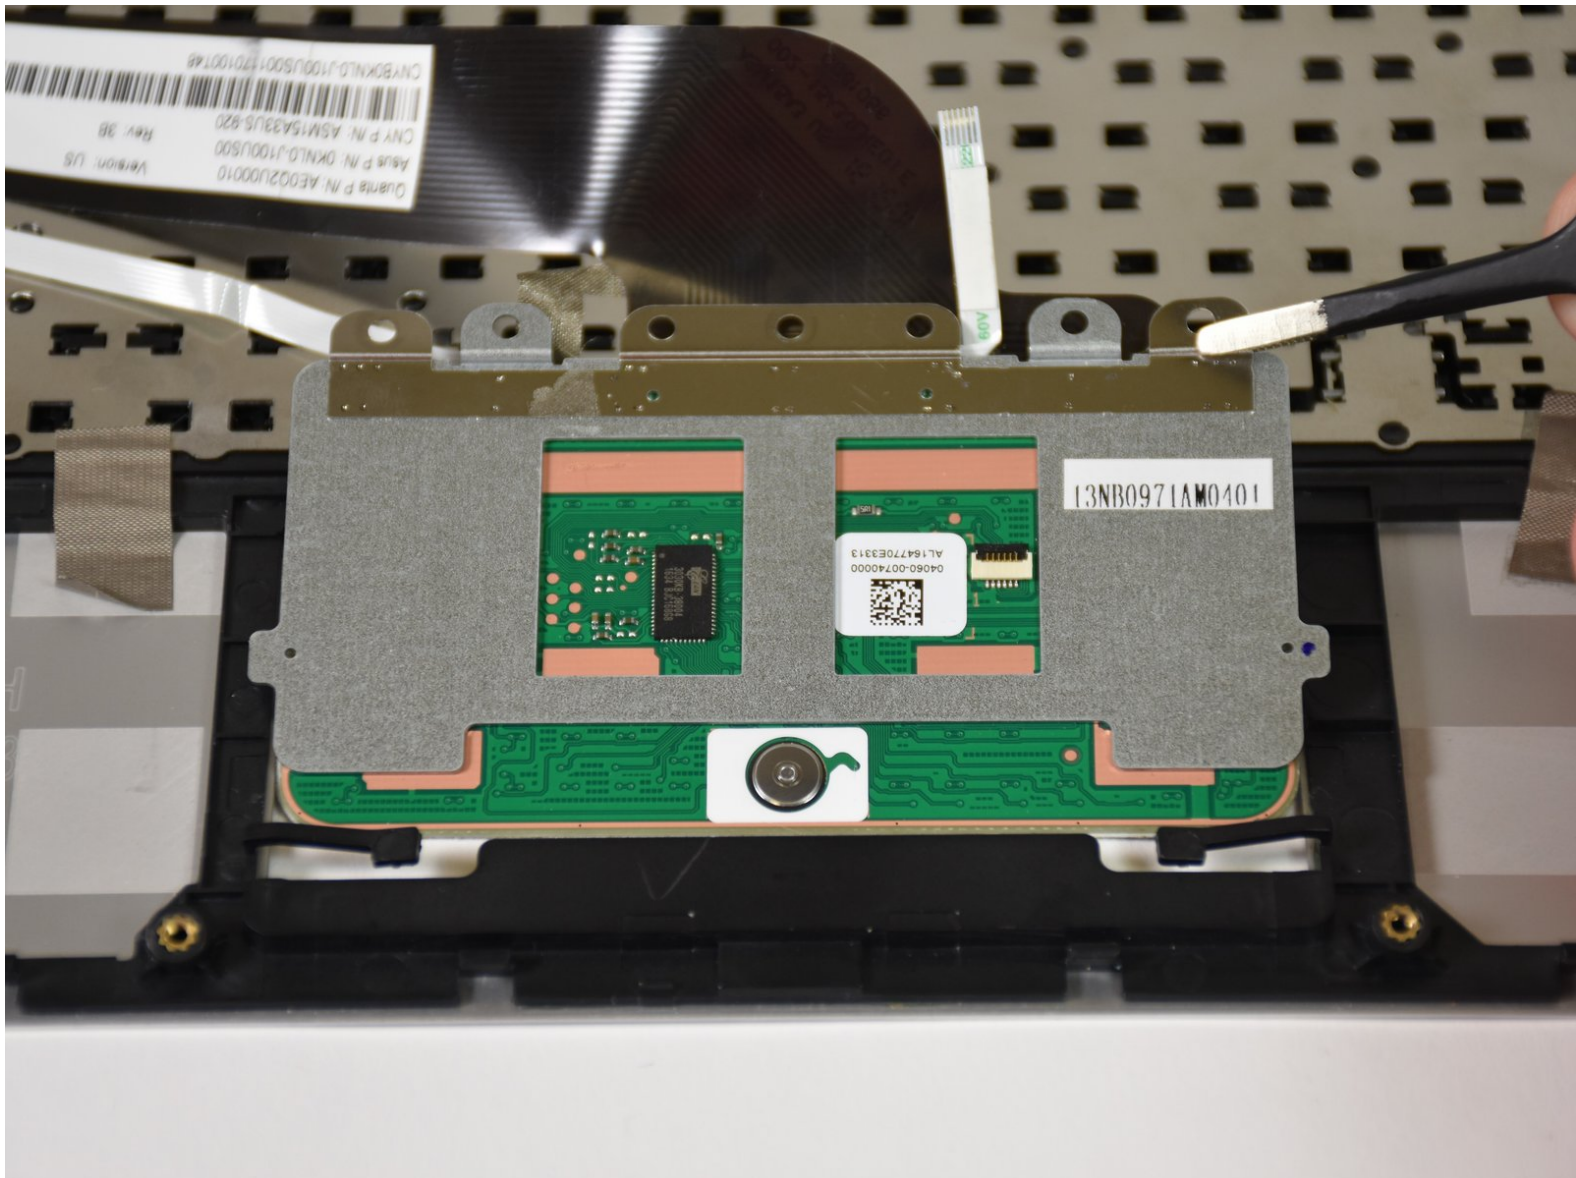

# INTRODUCTION

Details to remove the trackpad of ASUS Chromebook Flip C100PA-RBRKT07



## TOOLS:


- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [JIS #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



## PARTS:

- [ASUS Chromebook C100P Trackpad](#) (1)

## Step 1 — Lower Case

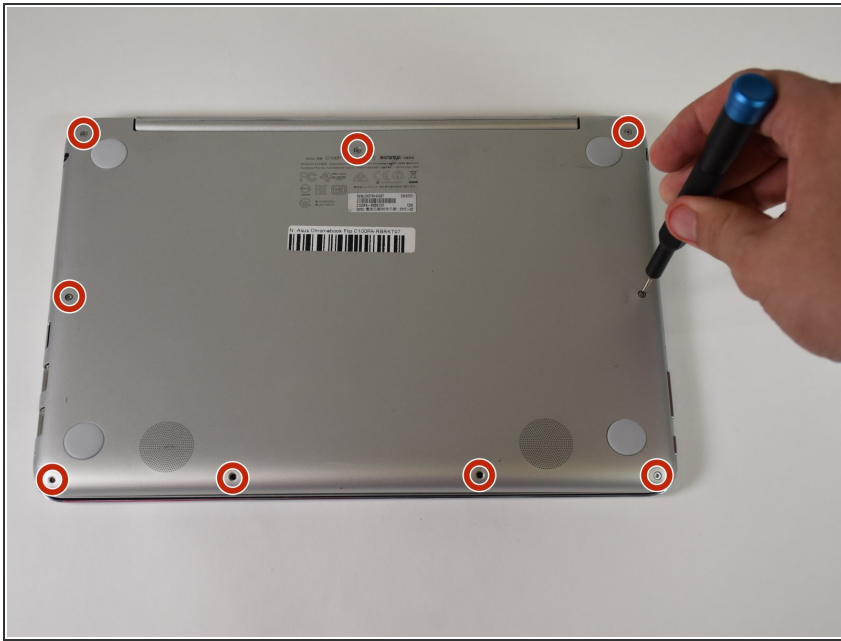

- Use the T5 screwdriver to remove the nine 2.1 mm screws from the bottom of the device.

## Step 2



- Use the iFixit opening tool to remove the 4 pads to reveal six 3.1 mm screws underneath.

## Step 3



- Use the T5 screwdriver to remove the six 3.1 mm screws under the pads.
- ⓘ There might be a layer of tape that covers the screws. Remove the tape first with a pair of tweezers.


## Step 4



- Use the iFixit opening tool to remove the back of the laptop.



## Step 5

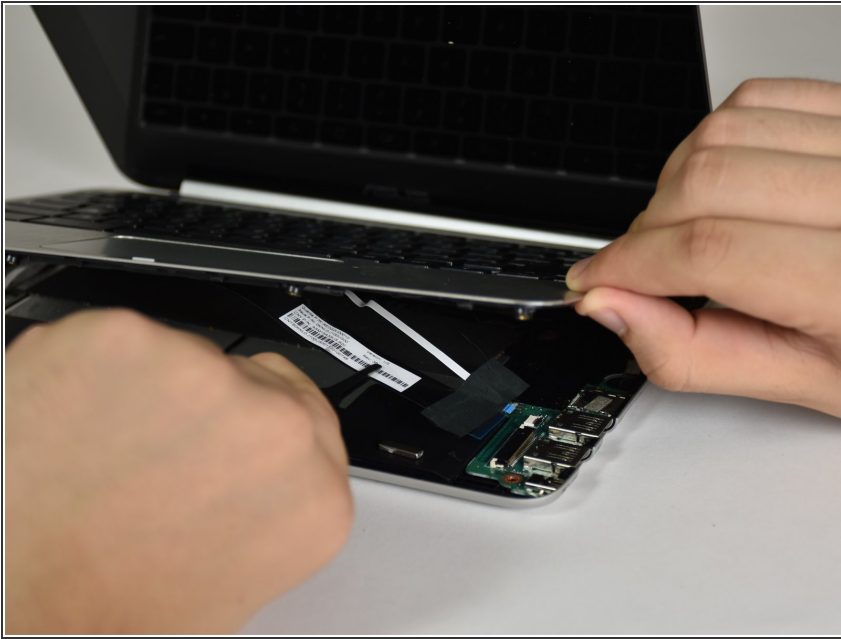



- Use the blunt nose tweezers to separate the keyboard from the internal components.

## Step 6 — Trackpad




- Grip the keyboard and carefully pull it off the device.

## Step 7

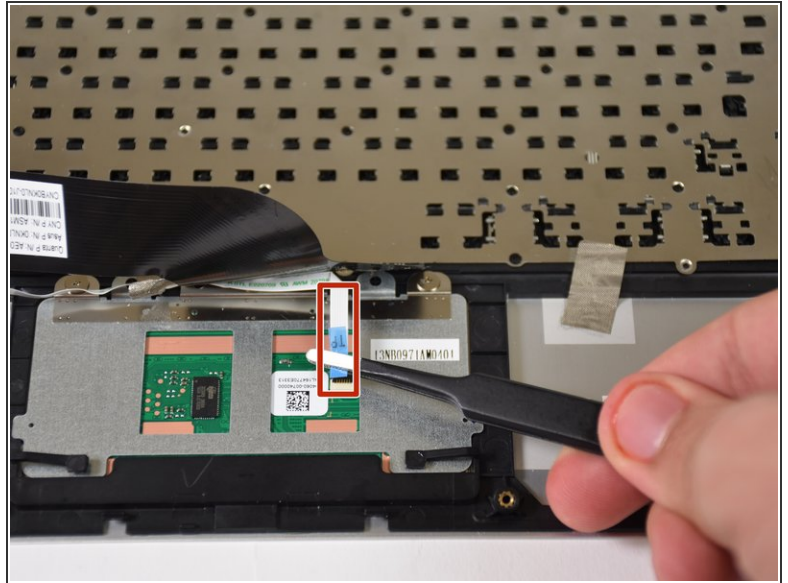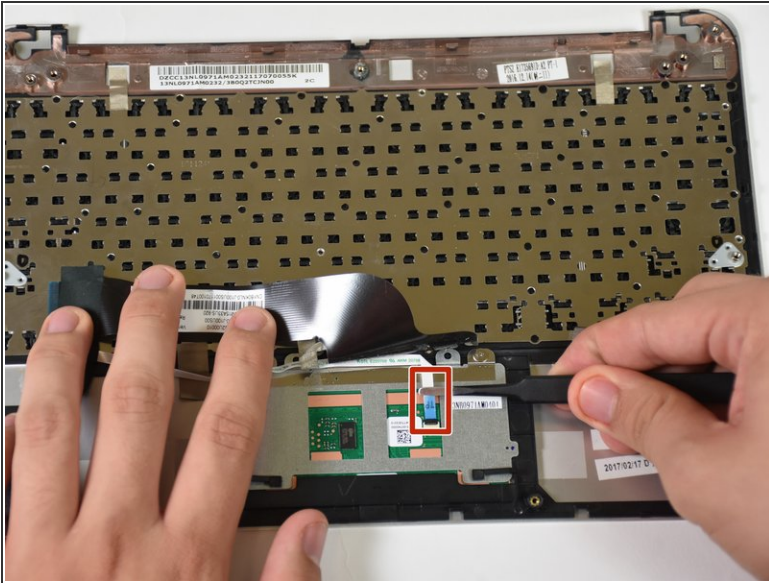



- On the back of the keyboard assembly, use the tweezers to pull the white cable from the track pad.

## Step 8

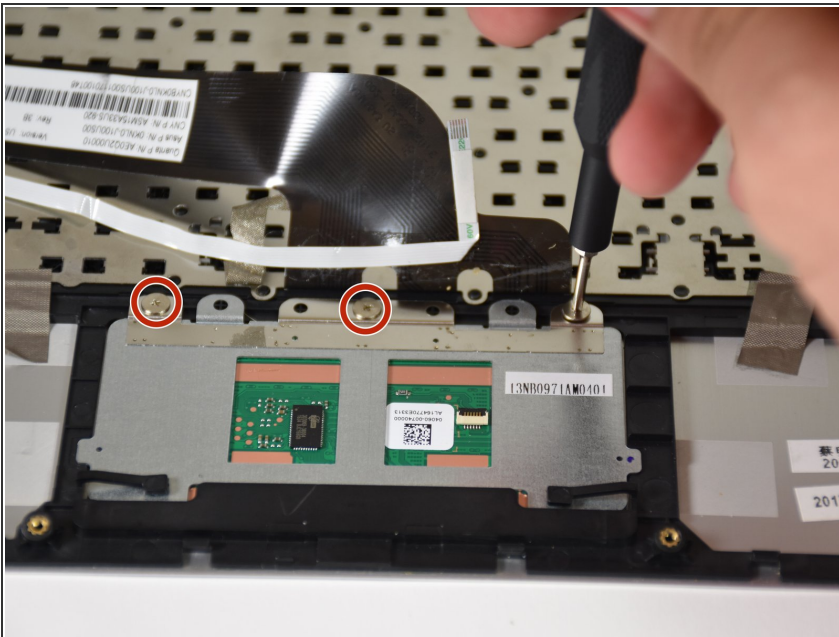

- Remove the three 1 mm screws from the track pad using the JIS 00 screwdriver.

## Step 9

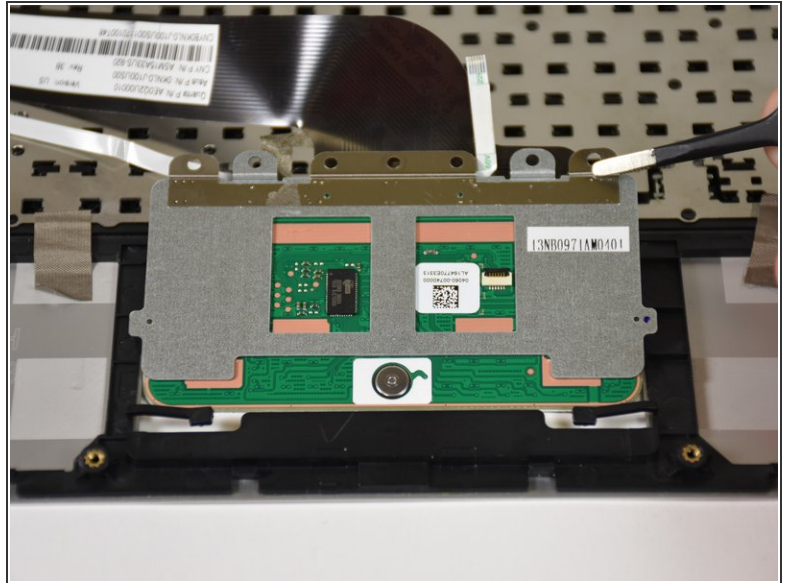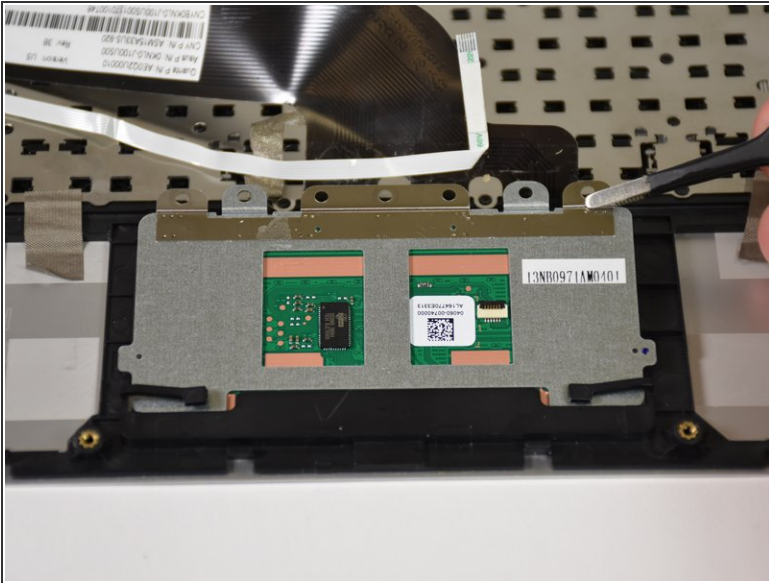

- Grip the track pad with the tweezers and slide it up and out of the keyboard assembly.

To reassemble your device, follow these instructions in reverse order.