



Shark Rotator Slim-Light Lift-Away Upright HEPA Filter Replacement

How to replace a Shark Rotator Slim-Light Lift-Away Upright HEPA Filter.

Written By: Carson Craft



INTRODUCTION

This guide will show you how to replace the HEPA filter which is responsible for trapping small particles that can be easily recirculated into the air. When the HEPA Filter is extremely dirty, you may want to consider replacing it.

Step 1 — HEPA Filter




- Push the red Lift Away button down and lift up on the vacuum handle to detach the base.
- ⓘ The handle was removed for convenience but is not required.

Step 2



- Remove the red cover from the front of the vacuum by pulling the latch found at the bottom of the cover forward and moving the whole cover downward.

Step 3

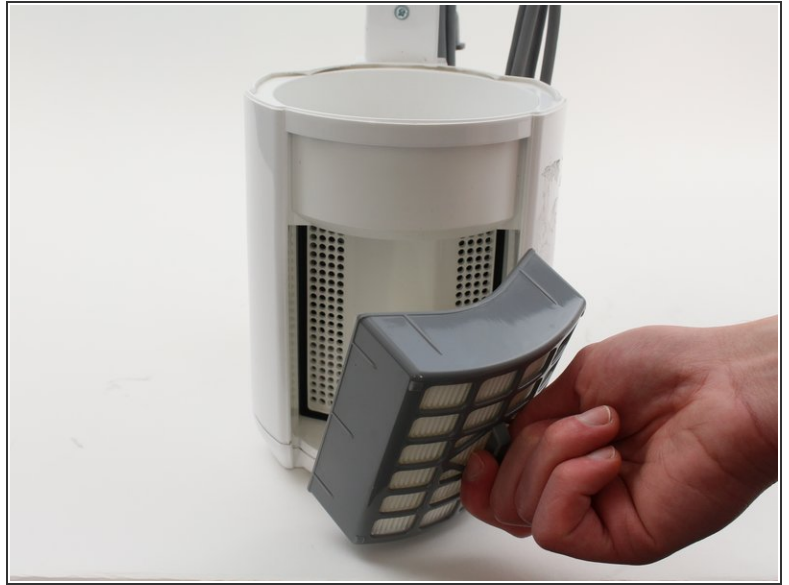

- Remove the filter by pulling it straight out.
- To clean the filter, rinse it under water and allow it to dry before placing it back in the vacuum.

To reassemble your device, follow these instructions in reverse order.