 




Ring Stick Up Cam Battery Replacement

In this guide, we will show you how to replace the battery in a Ring Stick Up Cam.

Written By: Nicholas Frey

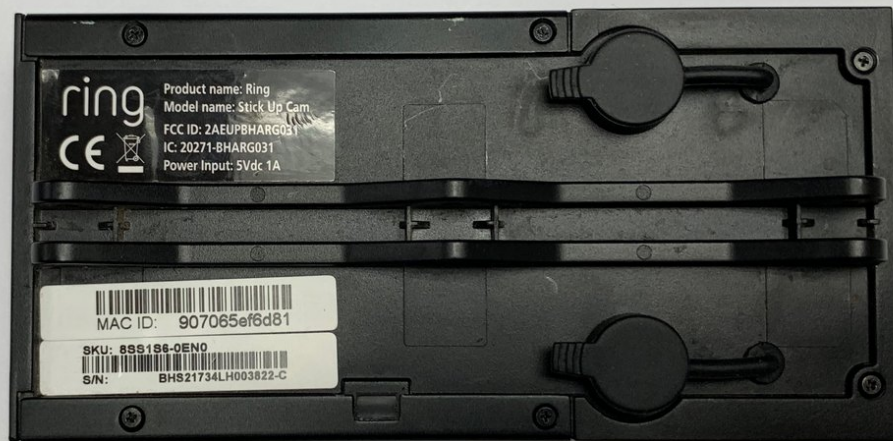

INTRODUCTION

In this guide, we will show you how to open the Ring Stick Up Cam housing and remove the battery from the device. You will need a Phillips #00 screwdriver and a plastic opening tool.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Remove the six 6mm Phillips #00 screws from the back of the device.

Step 2



- Pry off the aluminum plate using a plastic opening tool.

Step 3



- Remove the two 6mm Phillips #00 screws that were under the aluminum plate.

Step 4



 
- Pry off the back cover using a plastic opening tool.

Step 5



- Disconnect the battery power leads using a plastic opening tool.

Step 6

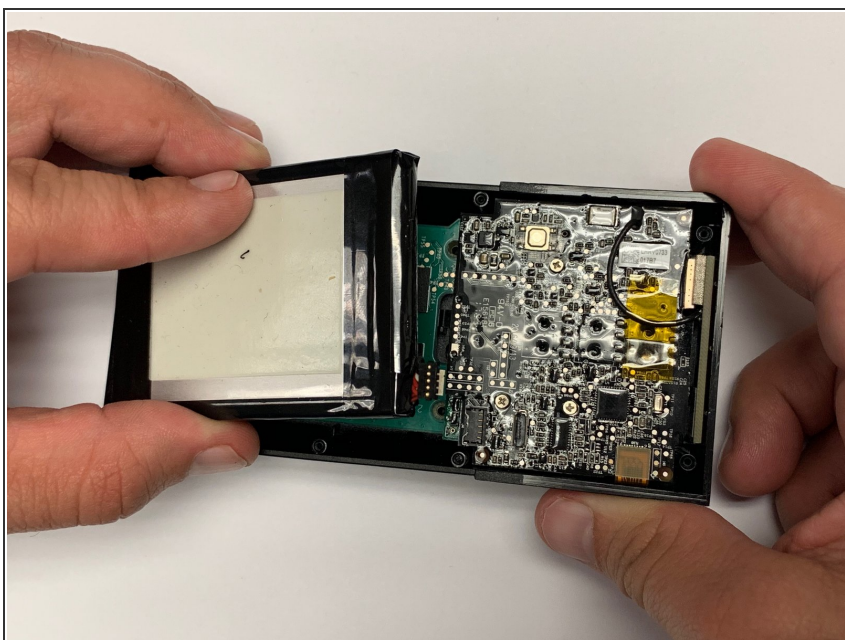

- Use a plastic opening tool to loosen the adhesive holding the battery in place and remove the battery by hand.

To reassemble your device, follow these instructions in reverse order.