



Dell Latitude E5500 Battery Replacement

How to replace the battery on the Dell Latitude E5500.

Written By: Maxwell Whalen



INTRODUCTION


By learning how to replace the battery on our laptop for a new one we can give it a new life. With this guide you will learn how to replace the Dell Latitude E5500 battery. Remember to turn off and disconnect the laptop before proceeding with any repair.

Step 1 — Battery



- Place the laptop face-down with the hinges facing towards yourself

Step 2

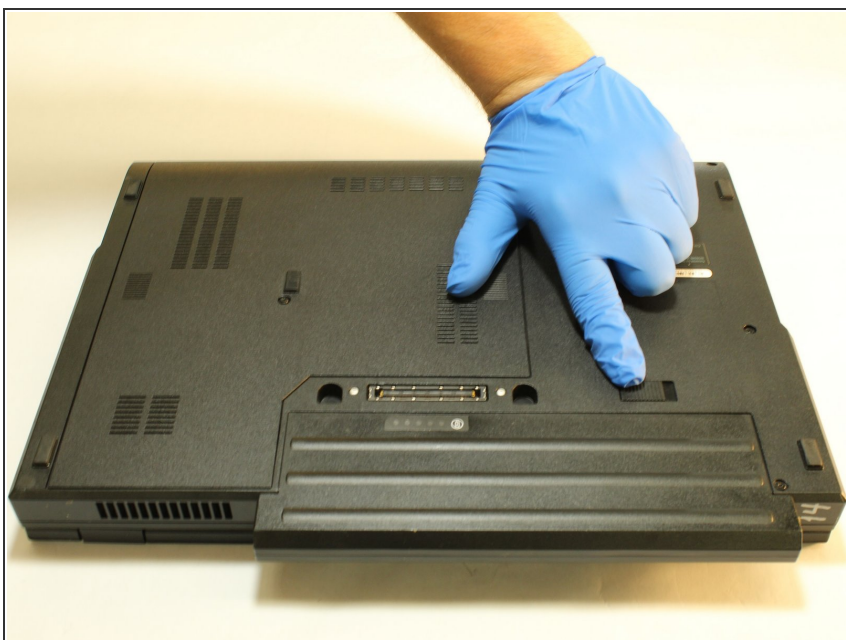

- Locate the battery's release switch and slide it to the right

Step 3



- Once the switch had been slid, pull the battery out laterally towards yourself

To reassemble your device, follow these instructions in reverse order.