




# Ring Stick Up Cam Speakers Replacement

A guide to replacing the speakers in a Ring Stick Up Cam.

Written By: Chunyue Liu

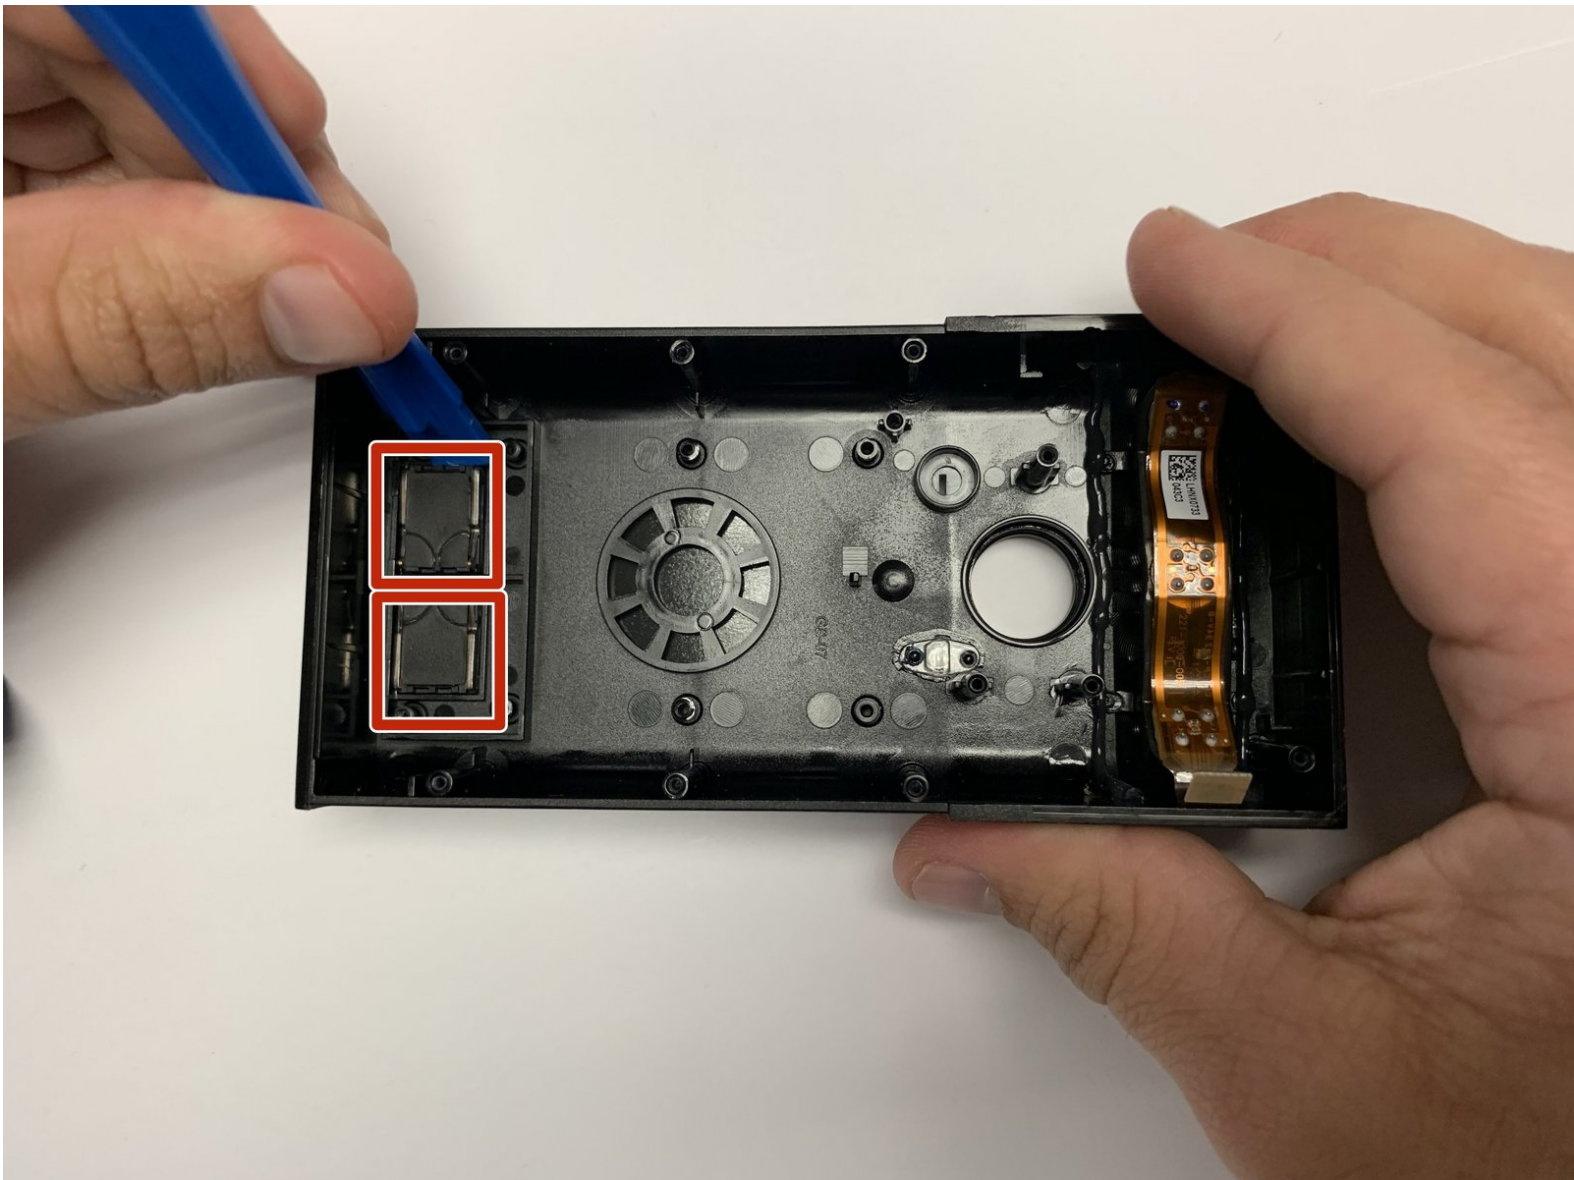

## INTRODUCTION

In this guide, we will show you how to replace the battery in a Ring Stick Up Cam. You will need a Phillips #00 screwdriver and a plastic opening tool.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Remove the six 6mm Phillips #00 screws from the back of the device.

## Step 2



- Pry off the aluminum plate using a plastic opening tool.

### Step 3



- Remove the two 6mm Phillips #00 screws that were under the aluminum plate.

### Step 4



- Pry off the back cover using a plastic opening tool.




## Step 5




- Disconnect the battery power leads using a plastic opening tool.

## Step 6

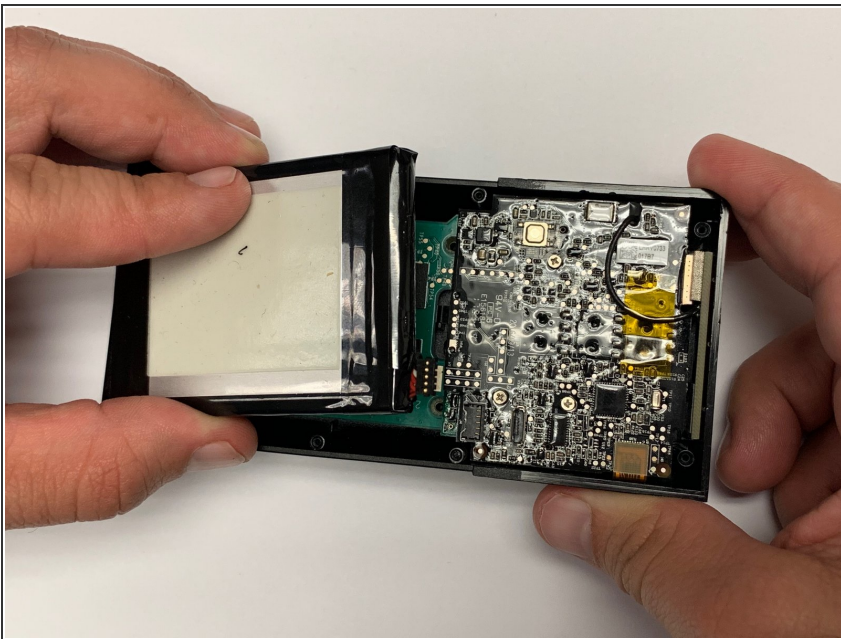


- Use a plastic opening tool to loosen the adhesive holding the battery in place and remove the battery by hand.

## Step 7 — Camera

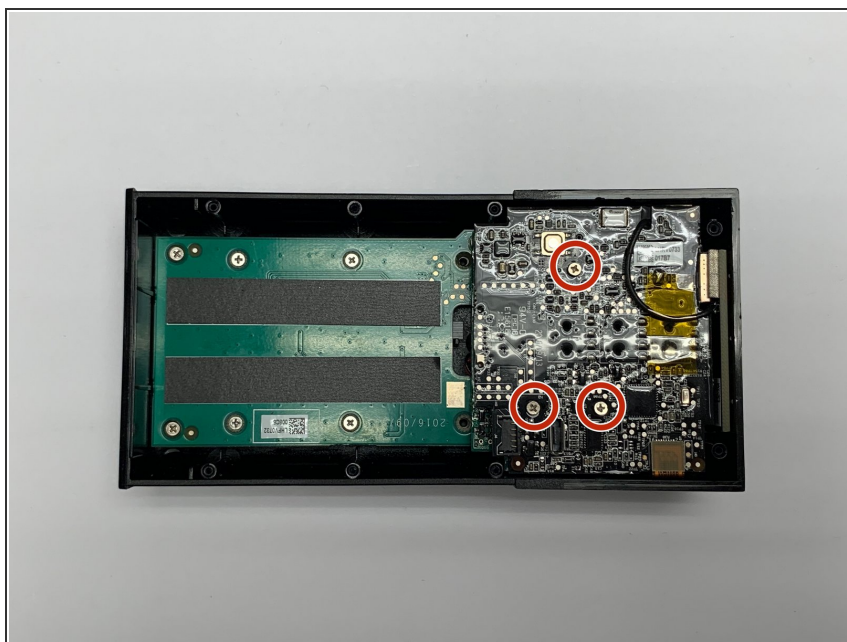


- Remove the three silver 6mm Phillips #00 screws holding the motherboard in the device.

## Step 8

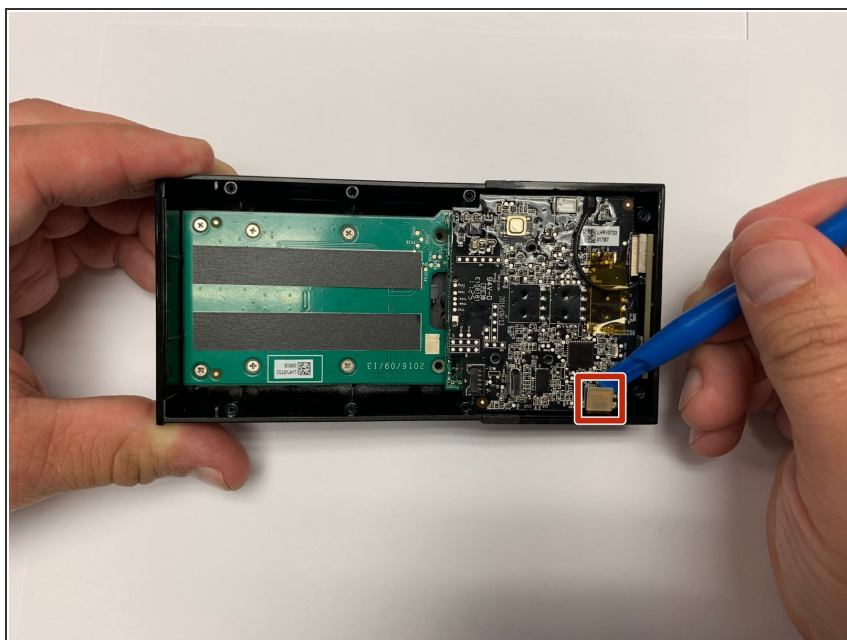


- Disconnect the ribbon connector shown in the photo.

## Step 9

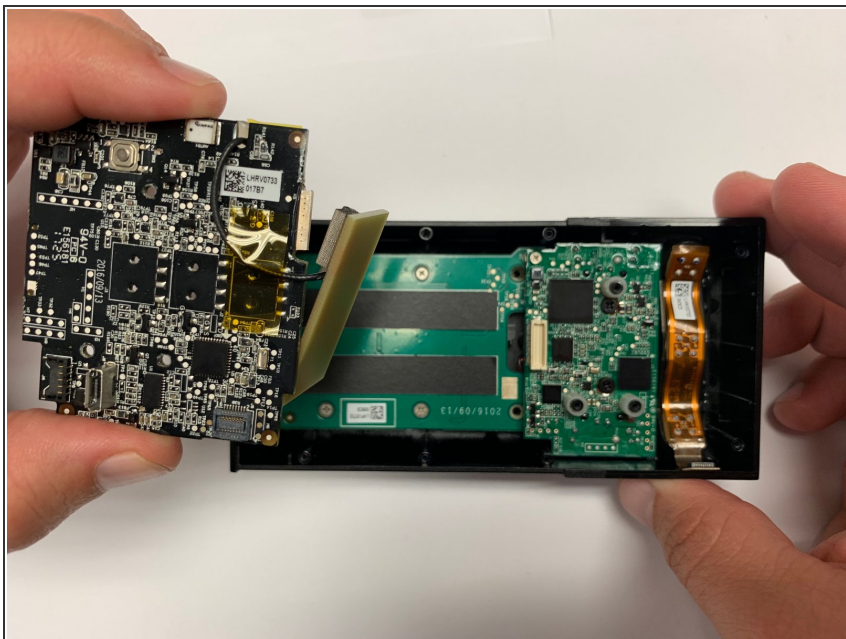

- Remove the motherboard from the device by hand.


## Step 10

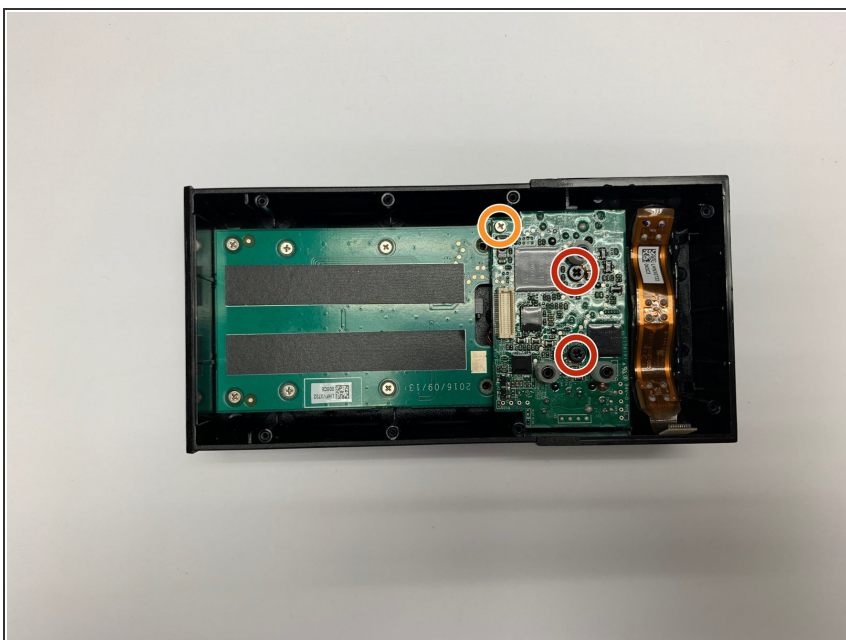

- Remove the two black 5mm Phillips #00 screws holding the camera board into the device.
- Remove the single silver 10mm Phillips #00 screw holding the camera board into the device.



## Step 11

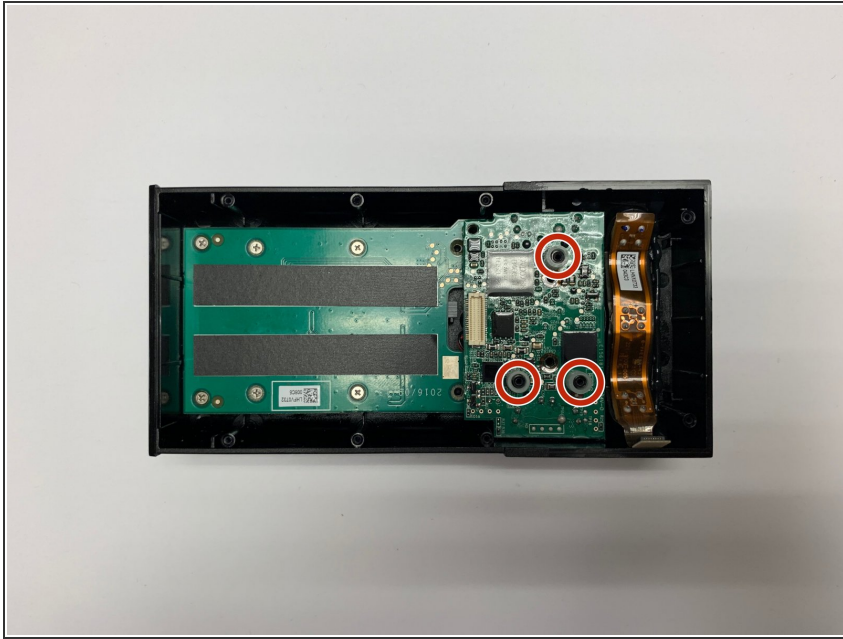

- Remove the three plastic spacers shown in the photo by hand.




## Step 12




- Carefully disconnect the camera board from the daughterboard by sliding a plastic opening tool between the camera board and the daughterboard.

## Step 13

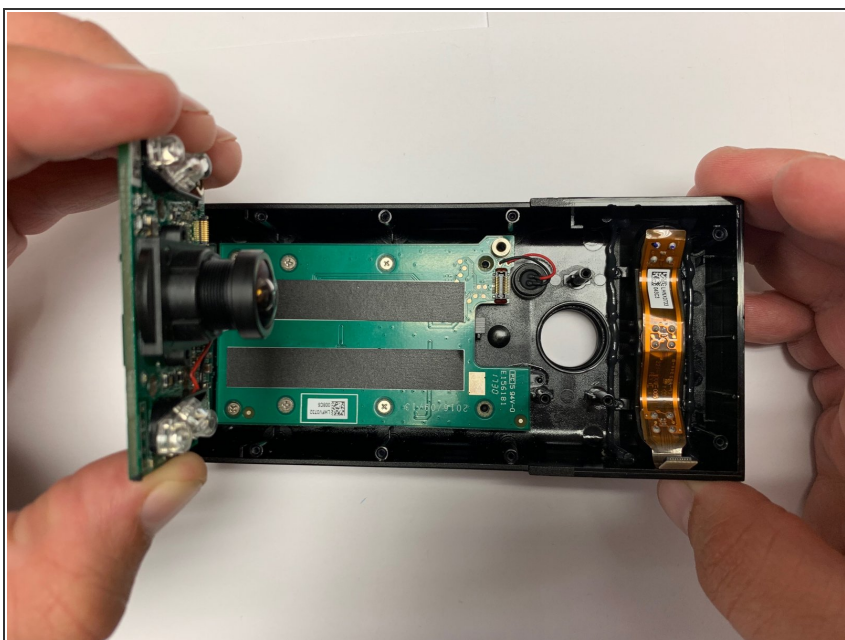


- Lift the camera board out of the housing using your hand.

## Step 14 — Microphone

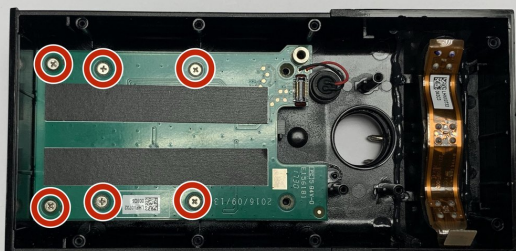


- Remove the six silver 4.5mm Phillips #00 screws holding the daughterboard into the device.

## Step 15

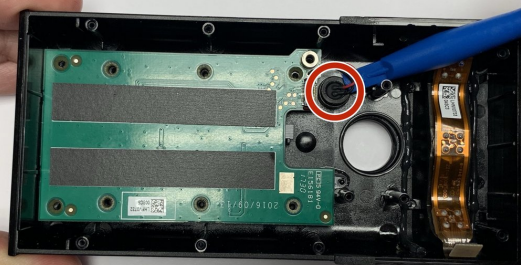


- Use a plastic opening tool to carefully pry the microphone from the housing.

## Step 16

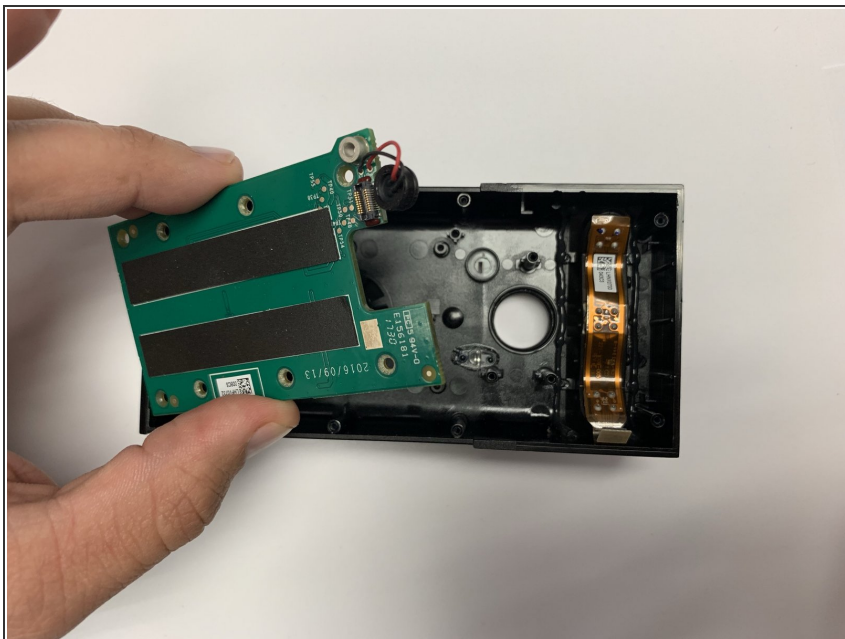

- Use your hands to remove the daughterboard containing the microphone from the housing.

## Step 17 — Speakers

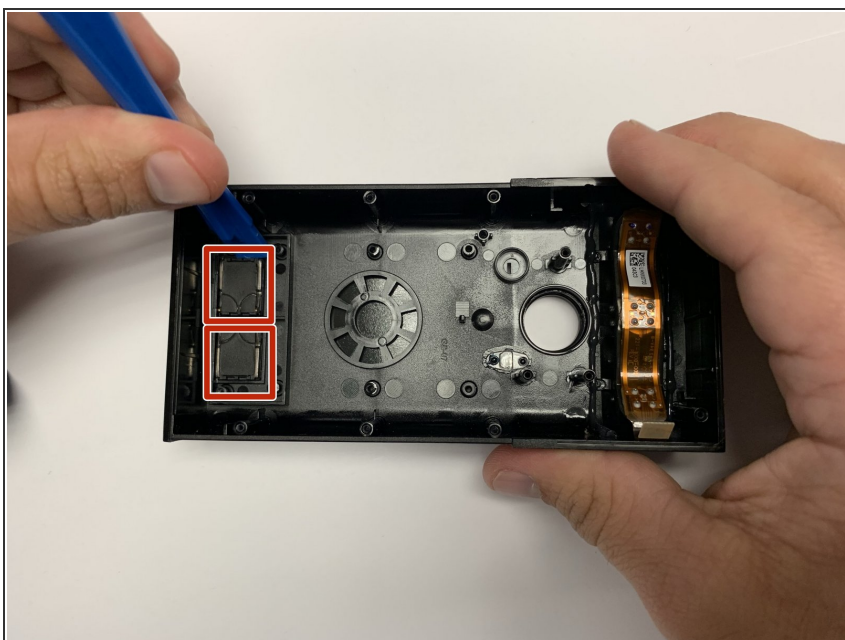

- Using a plastic opening tool, remove both of the speakers.

To reassemble your device, follow these instructions in reverse order.