


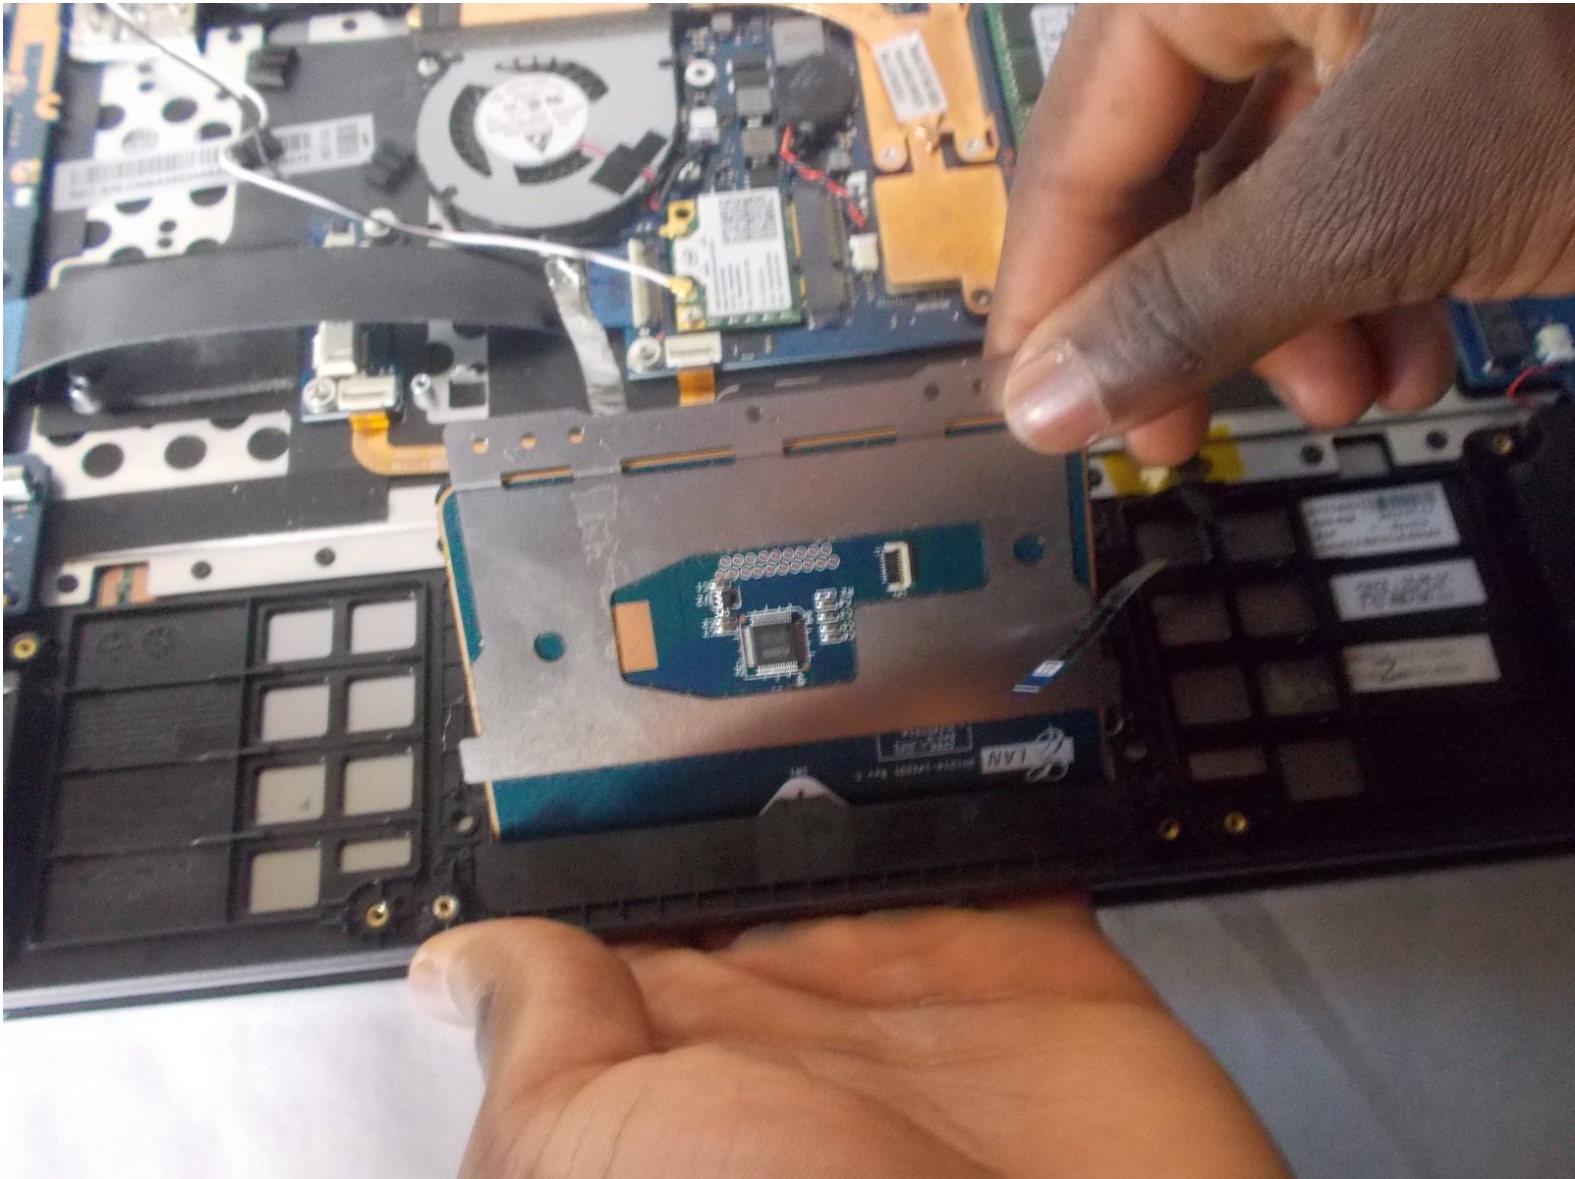

Samsung ATIV Book 7 NP740U3E-K01UB Track Pad Replacement

A guide to replacing the track pad in your Samsung ATIV Book 7 NP740U3E-K01UB.

Written By: Jonathan Robidoux



INTRODUCTION


This guide will show you how to remove and replace the track pad in your laptop.



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Backplate

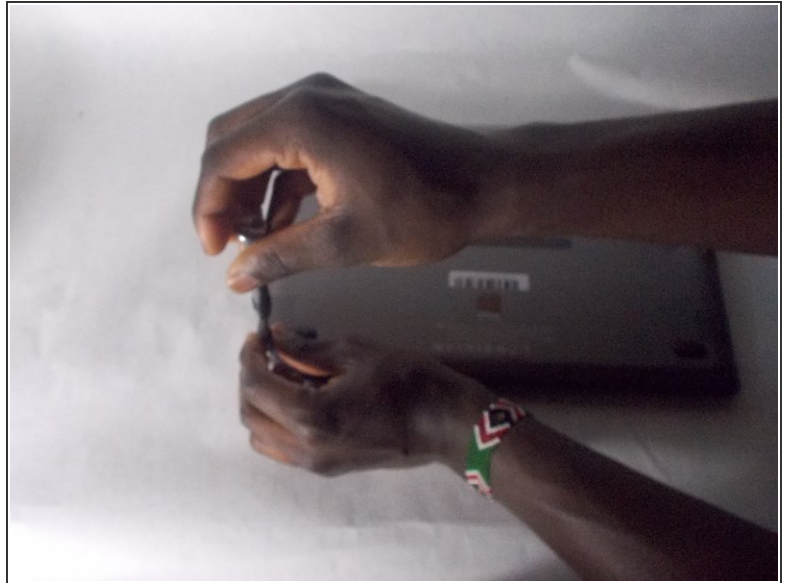


- Remove the ten 5 mm screws that hold the backplate using the Phillips #000 screwdriver.

Step 2

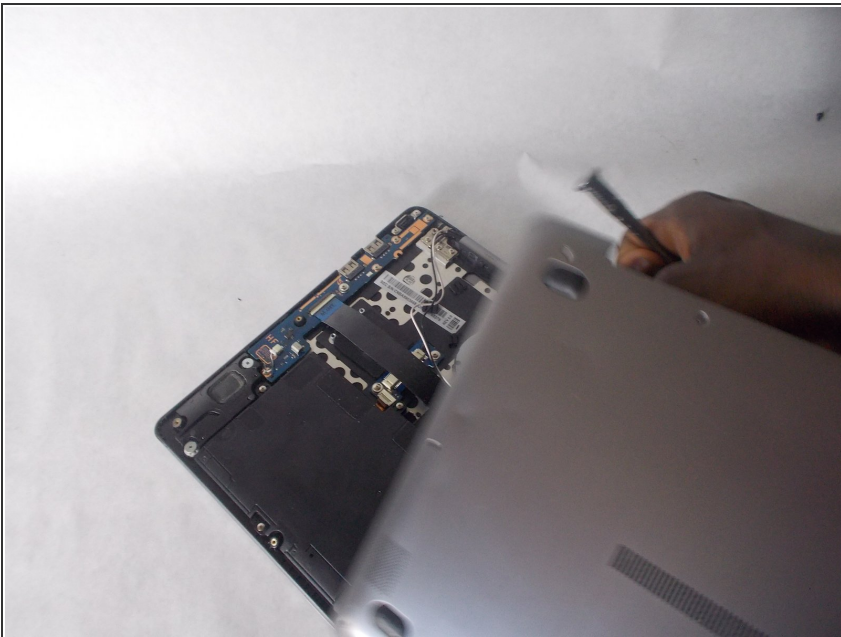


- Remove the backplate.

Step 3 — Battery

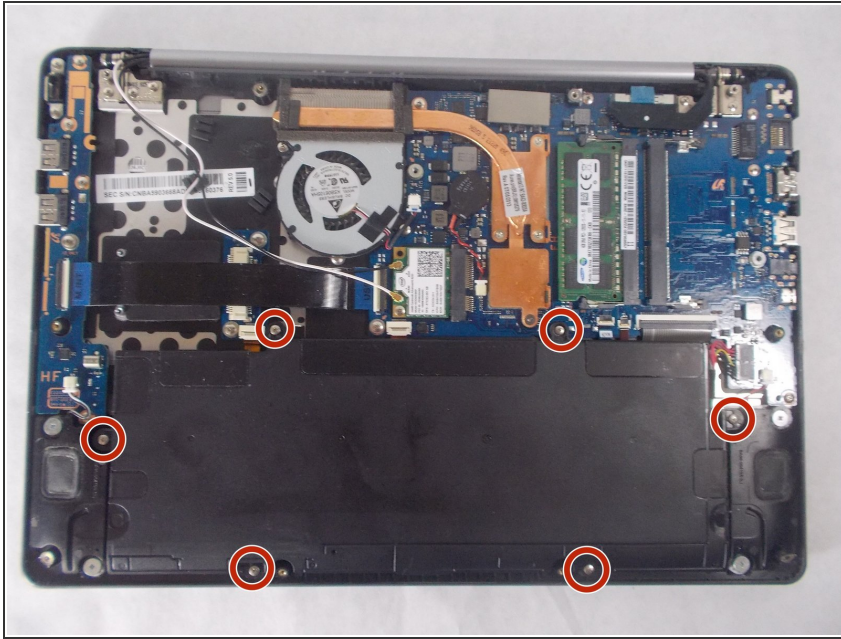


- Remove the six 5mm screws that hold the battery by using the Phillips #0 screwdriver.

Step 4

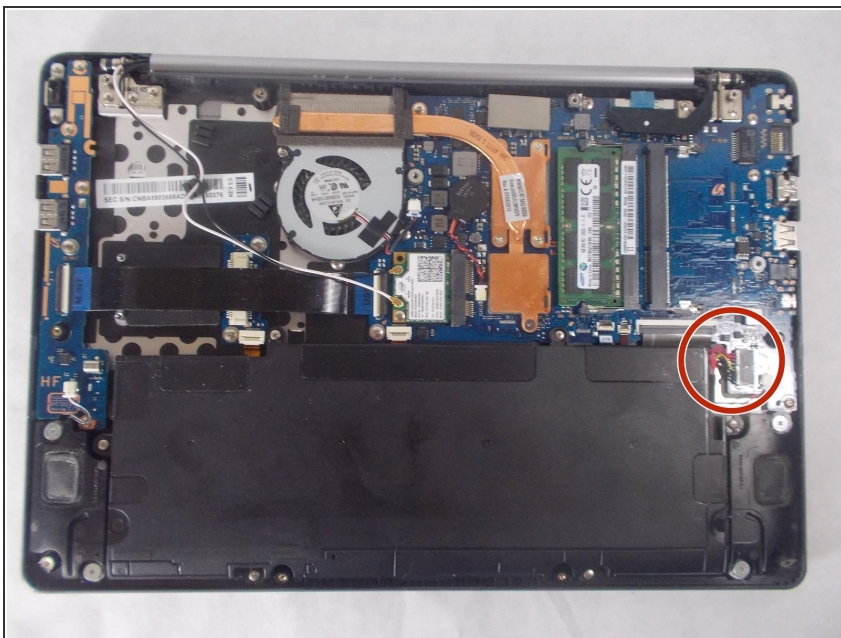


- Disconnect the battery from the motherboard and remove the battery.

Step 5 — Track Pad

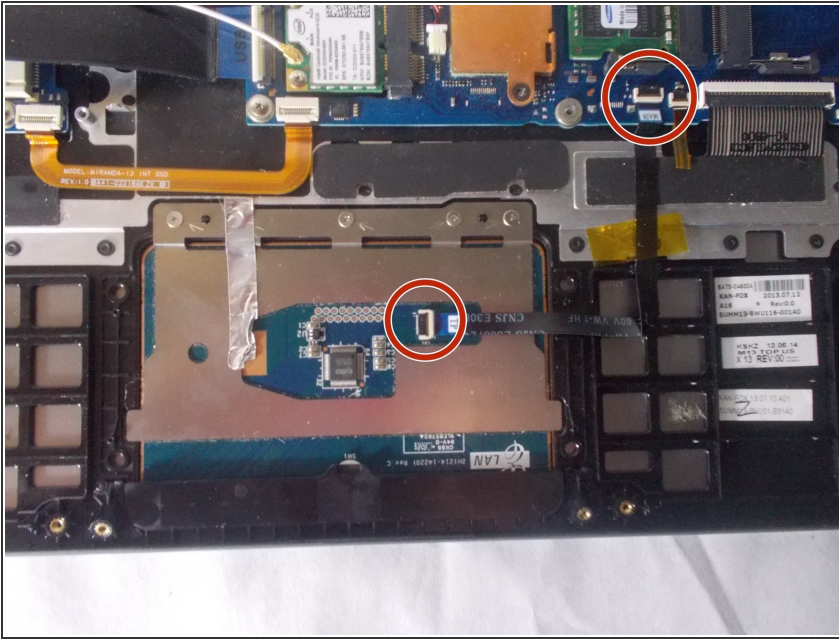

- Disconnect the track pad from the motherboard.

Step 6

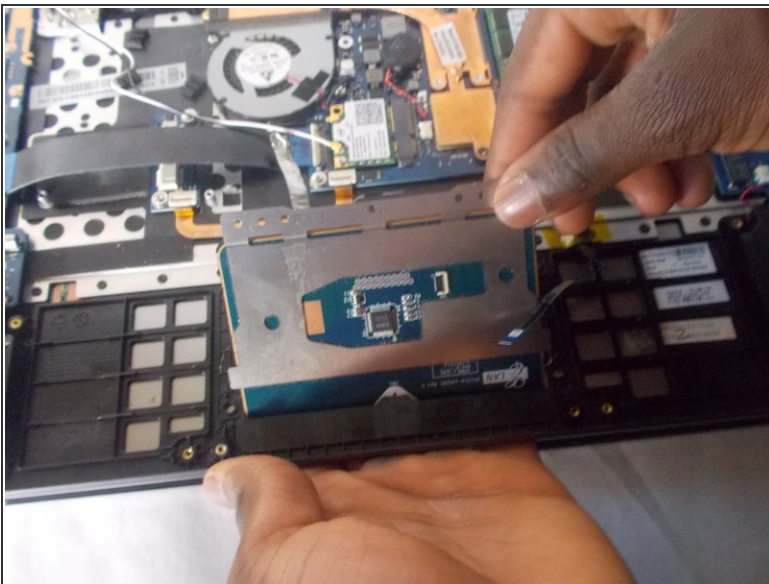

- Peel the tape on the track pad back.
- Unscrew the five 2mm screws with the Phillips #0 screwdriver.
- Rotate the track pad out of the case.

To reassemble your device, follow these instructions in reverse order.