




Samsung ATIV Book 7 NP740U3E-K01UB

Speaker Replacement

This would aid in the replacement of the speakers of your Samsung ATIV Book 7 NP740U3E-K01UB.

Written By: Alexander Nwonye

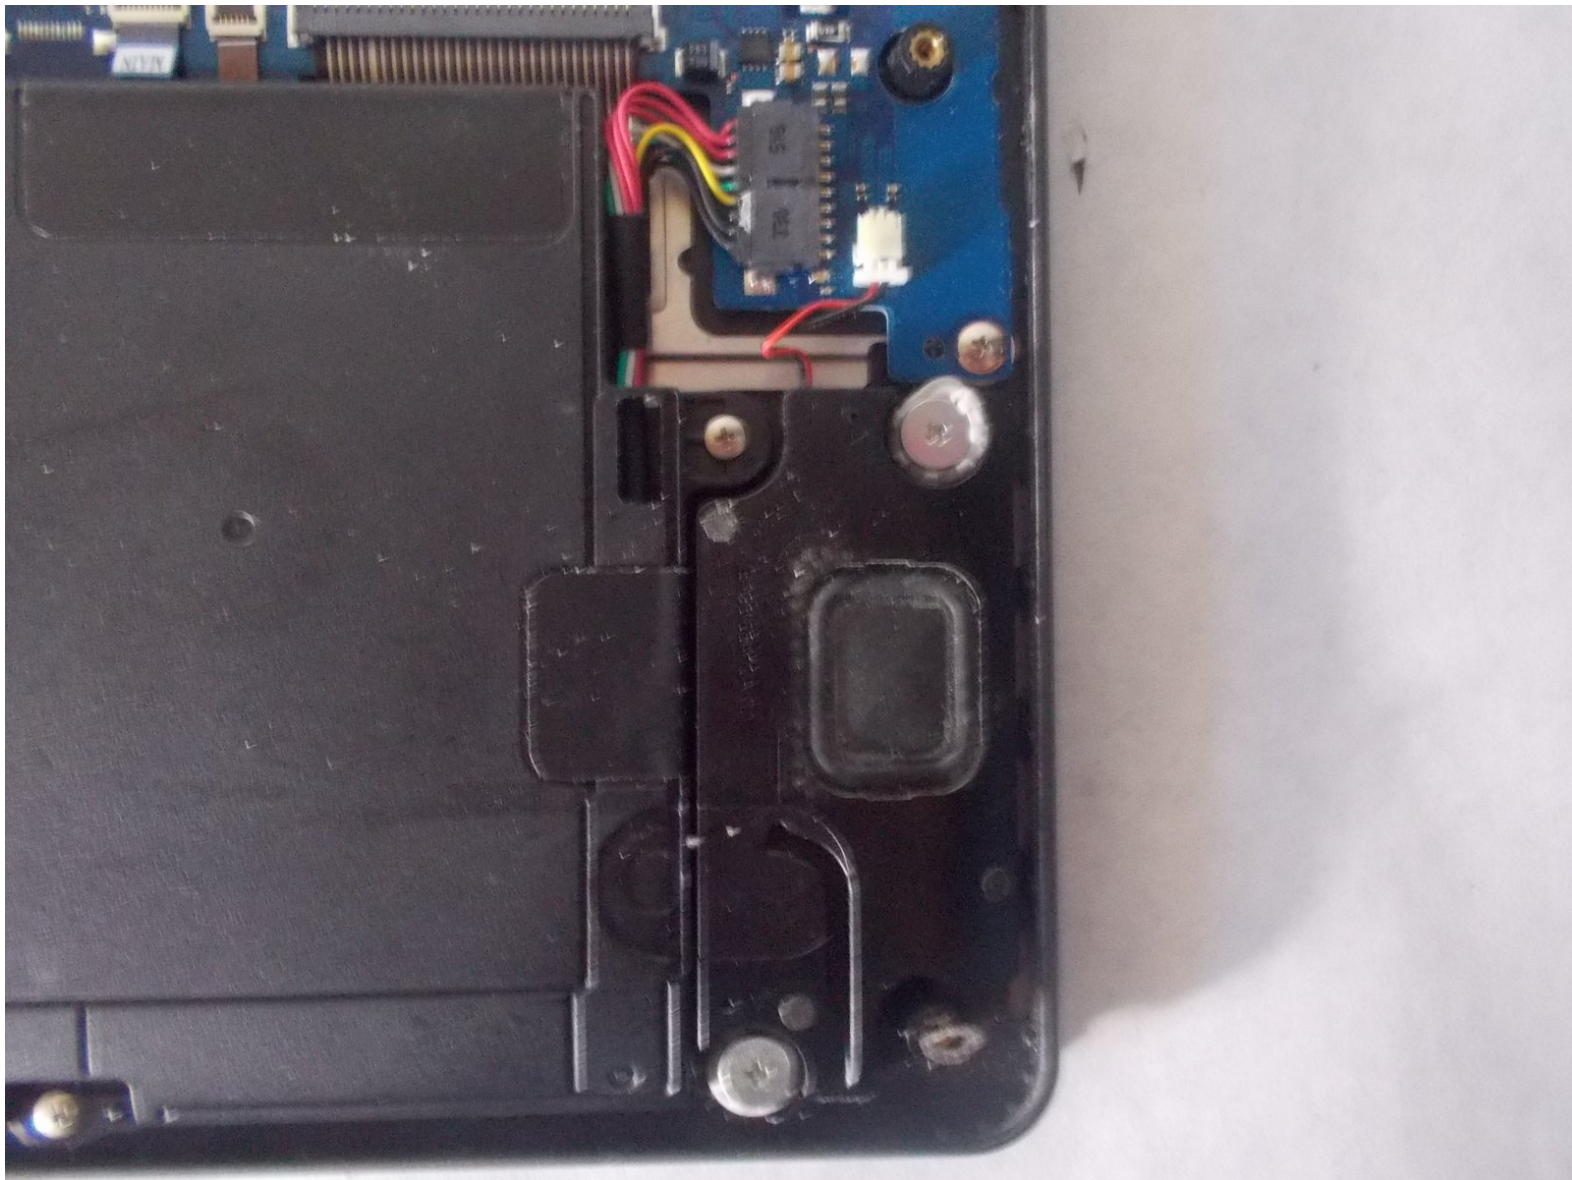

INTRODUCTION


This replacement guide will aid the replacement of the speakers showing you a thorough breakdown on what steps to follow to achieve this task efficiently.



TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Backplate

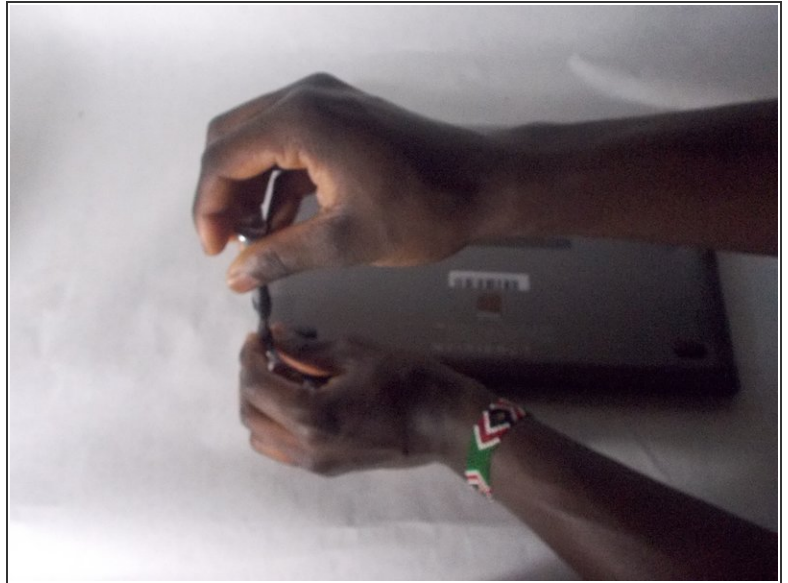


- Remove the ten 5 mm screws that hold the backplate using the Phillips #000 screwdriver.

Step 2

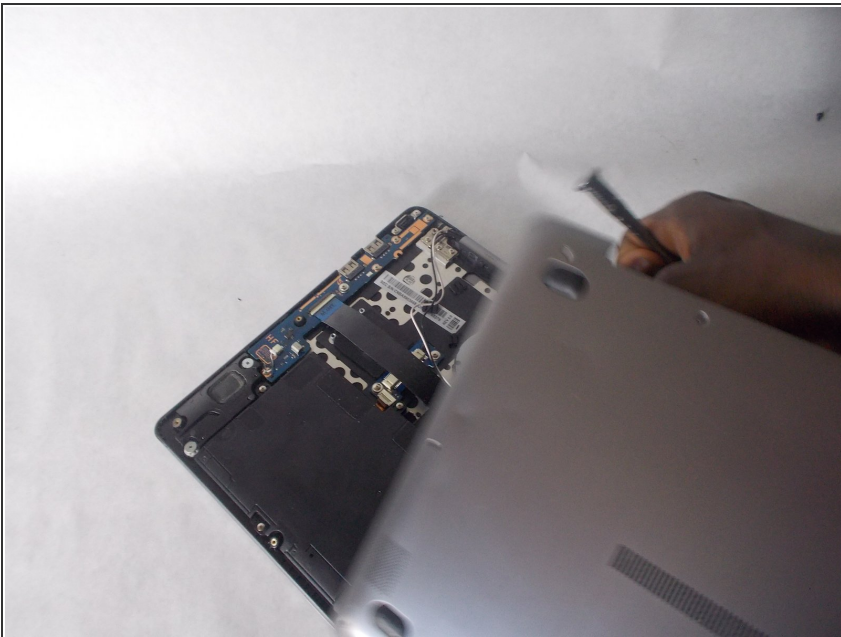


- Remove the backplate.

Step 3 — Battery

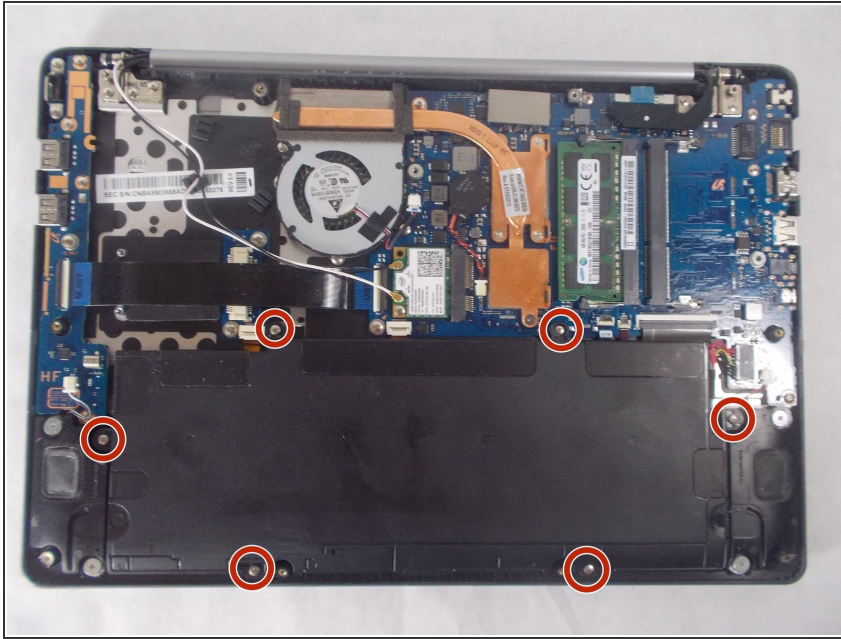


- Remove the six 5mm screws that hold the battery by using the Phillips #0 screwdriver.

Step 4

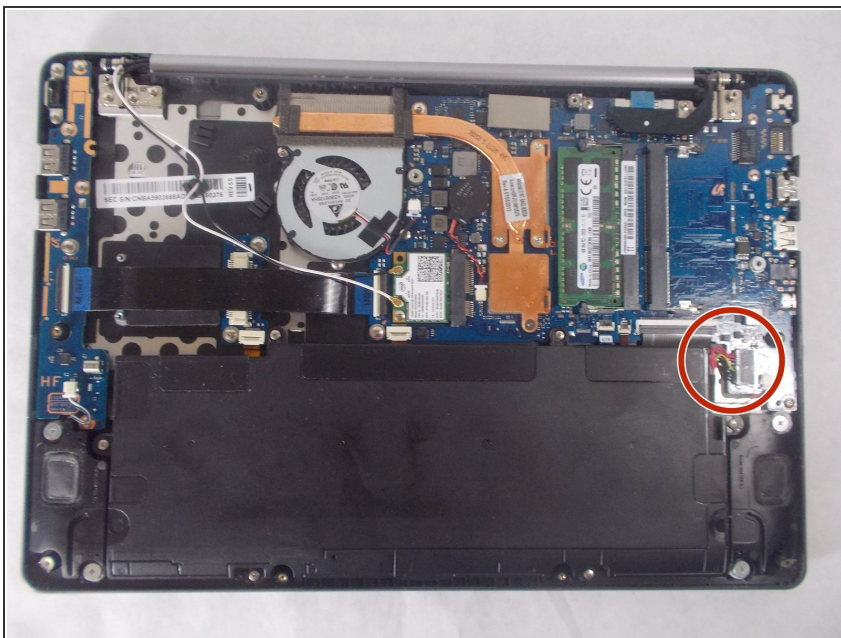




- Disconnect the battery from the motherboard and remove the battery.

Step 5 — Speaker

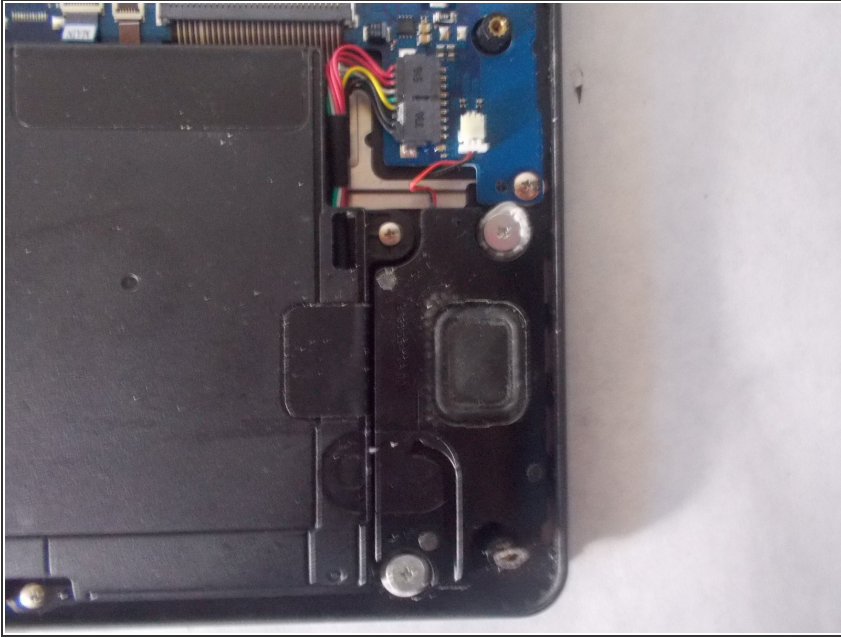


- There are two speakers which are found on the lower left and right side of the laptop, beside the battery.

Step 6

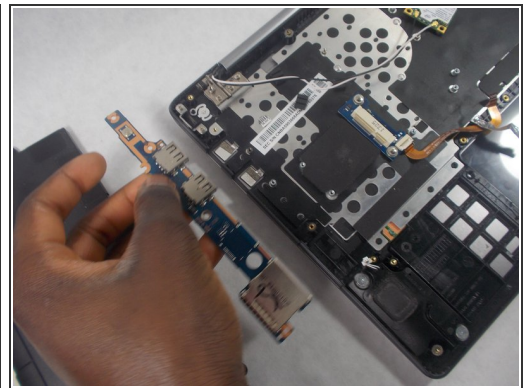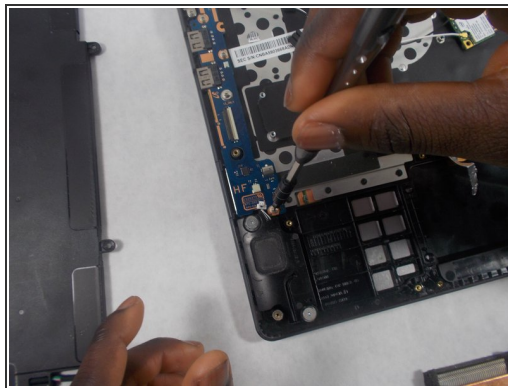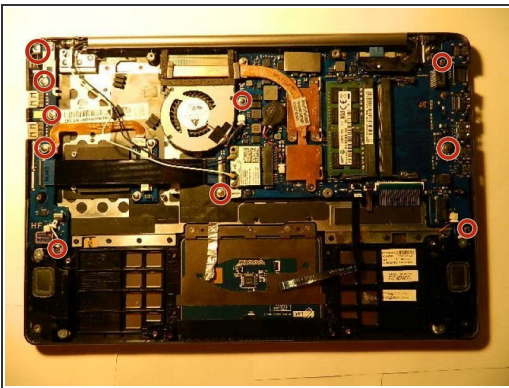

- Remove the screws of the motherboard to disconnect the motherboard from the speakers using a Phillips #0 screwdriver.

Step 7

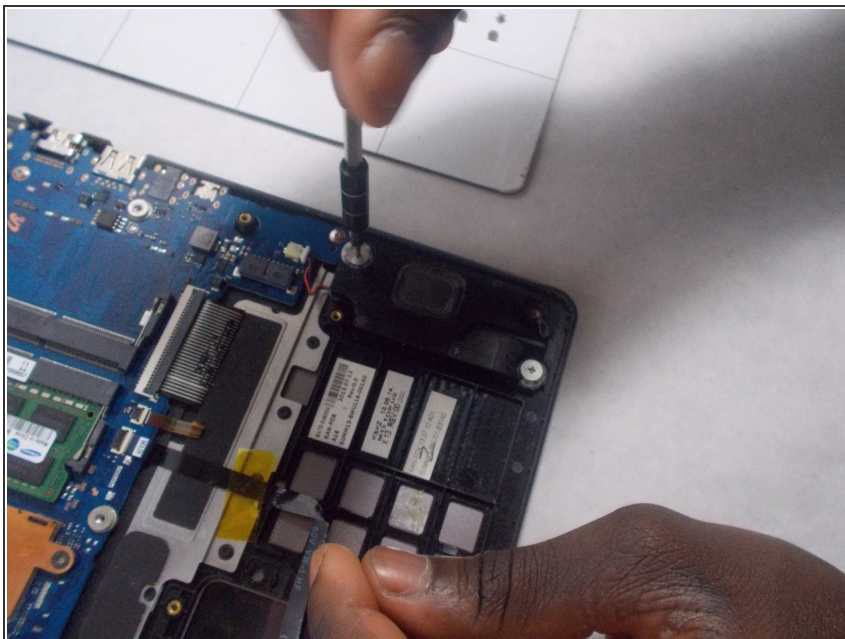

- Remove the 4 mm screw with the Phillips #000 screwdriver and remove the speaker.

To reassemble your device, follow these instructions in reverse order.