



ACER Aspire 7750G-6645 RAM Replacement

This guide shows how to access, remove, and replace the RAM of your Acer Aspire 7750G-6645.

Written By: Dylan Souza



INTRODUCTION

This guide demonstrates the removal of the RAM for an ACER Aspire 7750G-6645 laptop. This may be helpful if the computer is running slowly, or is having general memory issues.

TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [ACER Aspire 7750G-6645 Back Cover](#) (1)

Step 1 — Back Cover




- Remove three 60mm Phillips #00 screws that are holding the bottom cover in place.

Step 2



- Lift up the back cover of the device, you may need to use a spudger to assist.

Step 3 — RAM

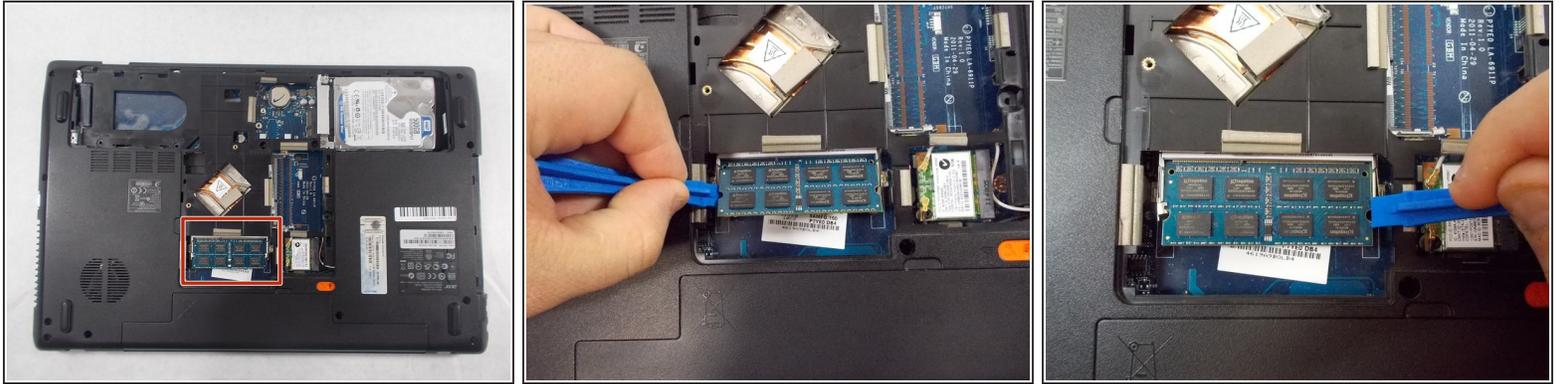

- Using the iFixit opening tools, gently pry the connectors away from the RAM.

Step 4



- Pull the RAM up and out of the socket.
- ☑ Repeat the same process for the other RAM stick.

To reassemble your device, follow these instructions in reverse order.