



# RIDGID R32104 Main Housing Assembly Replacement

Use this guide to replace the main housing assembly in your RIDGID R32104.

Written By: Lucas Pimentel



---

# INTRODUCTION

Prerequisite only



## TOOLS:

- [T20 Torx Screwdriver](#) (1)
-

## Step 1 — Main Housing Assembly



- Using the T20 Torx Screwdriver, remove the four 10 cm screws that attaches the main housing assembly to the gear box.

To reassemble your device, follow these instructions in reverse order.