



LG Stylo 2 Plus Speaker Replacement

Instructions for removing and replacing the speaker in the LG Stylo 2 Plus.

Written By: Noah Kehm




INTRODUCTION

If your LG Stylo 2 Plus sounds muffled or is incapable of making sounds, it might be time to replace the speaker unit. Speaker replacement on this device is a simple task, but you need to remember to be gentle; the back is made of plastic and can break.

TOOLS:

- [Spudger](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
 - [JIS #000 Screwdriver](#) (1)
-

Step 1 — Rear Case

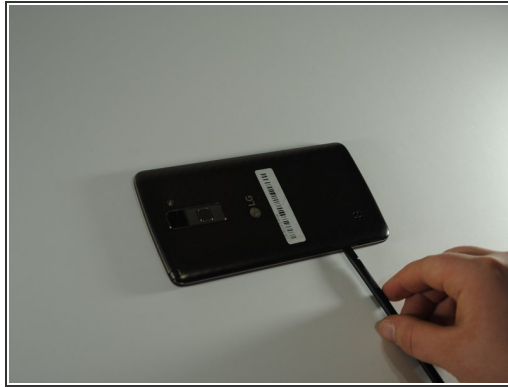

- To remove the rear case of the phone, insert the spudger into the opening on the back of the case.
- With the spudger parallel to the frame of the phone, slide it along the edge, forcing the casing to pop off.

Step 2 — Battery



- To remove the battery, insert your fingernail or the flat end of the spudger into the dimple at the bottom of the battery and lift upwards.
- Firmly grasp the battery and remove from the phone.

Step 3 — Speaker




- Remove the cover from the phone in order to access the speaker.
- Using the JIS #000 screwdriver, remove the four 4mm screws around the base of the mid-frame.

Step 4



- Insert the metal spudger in the dimple at the base of the mid-frame.
- Pry upward, removing bottom section of the mid-frame from the phone.

Step 5

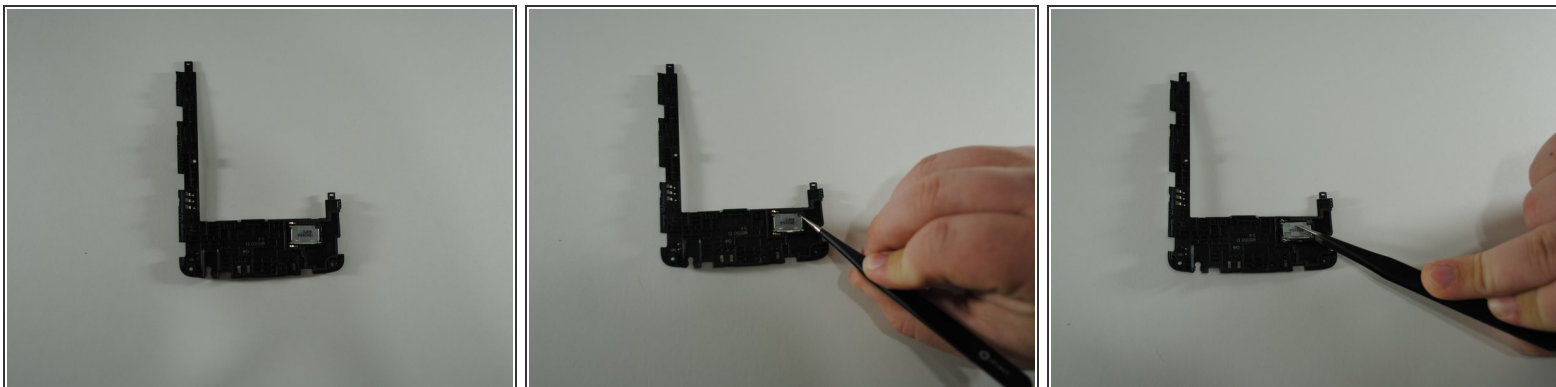

- Flip the bottom piece of the mid-frame over to show the speaker in the bottom right corner.
- Using the tweezers, peel back the rubber resting on top of the speaker.
- Still using the tweezers, grasp the speaker unit and remove it from the mid-frame.

To reassemble your device, follow these instructions in reverse order.